N-TRON
THE INDUSTRIAL NETWORK COMPANY

7018 Series Managed Industrial Ethernet Switch

User Manual & Installation Guide

7018TX, 7018FX2, and 7018FXE2 Industrial Ethernet Switch Installation Guide 4
SAFETY WARNINGS 6
Installation 7
Connecting the Unit 12
Overview of Advanced Features 16
Mode of Operation 16
Port Mirroring 16
Port Trunking 16
Priority Tagging (QoS) 16
Virtual LAN 17
Rapid Spanning Tree Protocol 17
SNMP Traps 17
IGMP Snooping 17
N-Ring 18
N-Link 18
DHCP 19
DHCP Client 19
DHCP Relay Agent 19
DHCP Server 19
Web Software Configuration 21
Web Management 21
Web Management - Home 22
Administration – System 24
Administration – SNMP 26
Administration – Fault 28
DHCP – Server – Setup Profiles 29
DHCP – Server – Setup IP Maps 31
DHCP – Server – View Bindings 36
DHCP – Relay & Local IP - Setup 37
Ports – Configuration 40
Ports – Mirroring 43
Ports – Trunking 45
Statistics – Port Statistics 46
Statistics – Port Utilization 47
VLAN – Configuration 48
Bridging – Aging Time 50
Bridging – Unicast Addresses 51
Bridging – Multicast Addresses 53
Bridging – Show MAC by Port 55
RSTP – Configuration 57
IGMP – Configuration 61
IGMP – Show Group and Show Router 64
IGMP – RFilter 65
N-View – Configuration 67
N-View – Ports 68
N-Ring – Configuration 70
N-Ring – Advanced Configuration 73
N-Ring – Status 75
N-Link – Configuration 79
N-Link – Status 83
Firmware/Config – TFTP 88
Support – Web Site and E-mail 90
BPCL – Broadcast Packet Count Limit Configuration 91
User Management – Adding Users 93
User Management – Removing Users 94
LogicalView 95
Configuration – Save or Reset 96
Help 97
Help – Administration 98

Help – DHCP 99
Help – Ports 100
Help – Statistics 101
Help – VLAN 102
Help – BPCL 103
Help – IGMP 104
Help – Bridging 105
Help – RSTP 106
Help – Firmware/Config 107
Help – User Management 108
Help – N-View 109
Help – N-Ring 110
Help – N-Link 111
Help – Other 112
CLI Commands 113
"?" (Help) 113
Logout 113
Show, Add, or Delete ARL Entries 114
Save or Reset the Configuration Settings 115
Show or Set IGMP Configuration 115
Show or Set Mirror Configuration 116
Show or Set N-Ring Configuration 117
Show or Set N-View Configuration 117
Ping a Host 118
Show or Set Port Configuration 119
Reset the Switch 119
Show or Set SNMP Configuration 120
Show or Clear the Last System Error 120
Show System Information 121
Set or Show the System IP Configuration 122
Show or Set System Configuration 123
VLAN Addition and Deletion Example 124
VLAN Configuration Examples 130
Example 1 – Basic understanding of port-based VLANs 130
Example 2 – Basic understanding of tagged VLANs (Admit – Tagged Only) 131
Example 3 – Basic understanding of tagged VLANs (Admit – All) 132
Example 4 – Basic understanding of Hybrid VLANs 133
Example 5 – Basic understanding of Overlapping VLANs 134
Example 6 – Basic understanding of VLANs with Multicast Filtering 135
KEY SPECIFICATION 136
N-TRON Limited Warranty 138

N-TRON
THE INDUSTRIAL NETWORK COMPANY

7018TX, 7018FX2, and 7018FXE2 Industrial Ethernet Switch Installation Guide

The N-TRON 7018 Series Industrial Ethernet Switch offers outstanding performance and ease of use. It is ideally suited for connecting Ethernet enabled industrial and or security equipment and is a fully managed switch.

PRODUCT FEATURES

- Full IEEE 802.3 Compliance
- Fourteen 10/100 BaseTX RJ-45 Ports
- Sixteen 10/100 BaseTX RJ-45 Ports (7018TX model only)
- Two Optional Gigabit ports:
  - 1000BaseSX/LX Ports, LC style, and/or
  - 1000BaseT Ports, RJ45 style
- Two Optional 100BaseFX(E) Ports (7018FX2 and 7018FXE2 models only)
- Extended Environmental Specifications
- Auto Sensing 10/100BaseTX, Duplex, and MDIX
- Offers Rapid Spanning Tree Protocol
- Trunk with other N-Tron trunking capable switches over two ports
- Store & Forward Technology
- Plug and Play IGMP Support
- Rugged Din-Rail Enclosure
- Redundant Power Inputs (10-30 VDC)
  - –HV High Voltage Option (40-160VDC)
- SNMP v1, v2 and v3.
- Web Browser Management with detailed ring map and fault location charting.
- Web Browsing and N-View Switch Monitoring

c UL us LISTED 65SN

PRODUCT CONFIGURATIONS

- 7018TX-VV
  - Sixteen 10/100 Base-TX RJ45 Copper Ports, and two optional SFP transceivers
- 7018FX2-XX-VV
  - Fourteen 10/100 Base-TX RJ45 Copper Ports, two multimode 100BaseFX Ports, and two optional SFP transceivers
- 7018FXE2-XX-YY-VV
  - Fourteen 10/100 Base-TX RJ45 Copper Ports, two singlemode 100BaseFX Ports and two optional SFP transceivers

Where: XX = ST or SC
YY = 10, 40 or 80 for Singlemode, Blank for Multimode
E = Singlemode, Blank Otherwise
VV = HV for High voltage, Blank for Standard voltage

MANAGEMENT FEATURES

- IGMP Snooping
- VLAN
- QoS
- Port Trunking
- Port Mirroring
- 802.1D-2004 Rapid Spanning Tree
- N-RING™ (N-Tron proprietary Ring Management)
- N-LINK™ (N-Tron proprietary Coupling Management)
- DHCP Server, Option 82 relay

Copyright, © N-Tron Corp., 2008-2009
820 S. University Blvd., Suite 4E
Mobile, AL 36609 USA

All rights reserved. Reproduction, adaptation, or translation without prior written permission from N-Tron Corp. is prohibited, except as allowed under copyright laws.

Ethernet is a registered trademark of Xerox Corporation. All other product names, company names, logos or other designations mentioned herein are trademarks of their respective owners.

The information contained in this document is subject to change without notice. N-Tron Corp. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. In no event shall N-Tron Corp. be liable for any incidental, special, indirect, or consequential damages whatsoever included but not limited to lost profits arising out of errors or omissions in this manual or the information contained herein.

Warning

Do not perform any services on the unit unless qualified to do so. Do not substitute unauthorized parts or make unauthorized modifications to the unit.

Do not operate the unit with the top cover removed, as this could create a shock or fire hazard.

Do not block the air vents on the sides or the top of the unit.

Do not operate the equipment in the presence of flammable gasses or fumes. Operating electrical equipment in such an environment constitutes a definite safety hazard.

Do not operate the equipment in a manner not specified by this manual.

SAFETY WARNINGS

GENERAL SAFETY WARNINGS

WARNING: If the equipment is used in the manner not specified by N-Tron Corp., the protection provided by the equipment may be impaired.

LASER SAFETY (7018FXE2 Models -40, -80 and optional NTSFP-LX -40 and -70)

CAUTION: CLASS 1 LASER PRODUCT. Do not stare into the laser!

Contact Information
N-Tron Corp.
820 South University Blvd. Suite 4E
Mobile, AL 36609
TEL: (251) 342-2164
FAX: (251) 342-6353
WEBSITE: www.n-tron.com
E-MAIL: N-TRON_Support@n-tron.com

ENVIRONMENTAL SAFETY

WARNING: Disconnect the power and allow to cool 5 minutes before touching.

ELECTRICAL SAFETY

Must be used with Listed UL Industrial Power Supply.

WARNING: Disconnect the power cable before removing the top cover.

WARNING: Do not operate the unit with the any cover removed.

WARNING: Do not work on equipment or cables during periods of lightning activity.

WARNING: Do not perform any services on the unit unless qualified to do so.

WARNING: Do not block the air vents.

WARNING: Observe proper DC Voltage polarity when installing power input cables. Reversing voltage polarity can cause permanent damage to the unit and void the warranty.

Hazardous Location Installation Requirements

1. This equipment is suitable for use in Class I, Div. 2, Groups A, B, C, D or non-hazardous locations only.

2. **WARNING:** Explosion Hazard – Substitution of components may impair suitability for Class I, Div. 2.

3. **WARNING:** Explosion Hazard - do not disconnect while circuit is live, unless area is known to be non-hazardous.

4. **WARNING:** Explosion Hazard – do not replace the device unless power has been switched off or the area is known to be non-hazardous.

5. Use 90°C or higher rated Copper wire, (0.22Nm) 2lb/in Tightening torque for field installed conductors.

Please make sure the 7018 Series Ethernet Switch package contains the following items:

1. 7018 Series Switch
2. Product CD

Contact your carrier if any items are damaged.

Installation

Read the following warning before beginning the installation:

WARNING

Never install or work on electrical equipment or cabling during periods of lightning activity. Never connect or disconnect power when hazardous gasses are present.

Disconnect the power cable before removing any enclosure panel.

UNPACKING

Remove all the equipment from the packaging, and store the packaging in a safe place. File any damage claims with the carrier.

CLEANING

Clean only with a damp cloth.

DIN RAIL MOUNTING

Install the unit on a standard 35mm Din-Rail. Recess the 7018TX unit to allow at least 3” of horizontal clearance for copper cable bend radius. Recess the 7018FX2 unit to allow at least 5” of horizontal clearance for fiber cable bend radius. There should be at least 4” of clearance on both the top and bottom of the unit to allow proper ventilation.

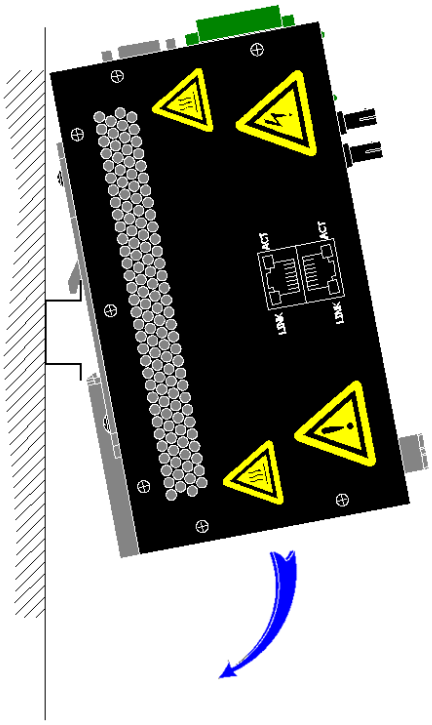

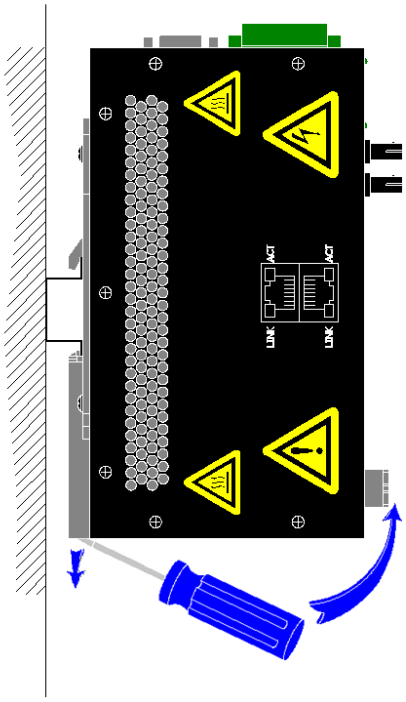

To mount the unit to the 35mm din-rail, place top edge of the bracket on the back of the unit against the din-rail at an upward angle. Lower the bottom of the unit until it snaps into place.

Note: When mounting the switch in the vertical position, you must orientate the power connector to the top as shown above for proper ventilation.

To remove the unit from the 35mm din-rail, place a flat head screwdriver into the release clip at the bottom of the unit, and push down on the clip until it disengages from the bottom of the unit from the din-rail. Lift the bottom of the unit up at an approximate 45° upward angle to completely remove the unit.

Most N-Tron™ products are designed to be mounted on industry standard 35mm DIN-Rail. However, DIN-Rail mounting may not be suitable for all applications. Our Universal Rack Mount Kit (P/N: URMK) may be used to mount the 7018 Series to standard 19" racks as an option.

FRONT PANEL

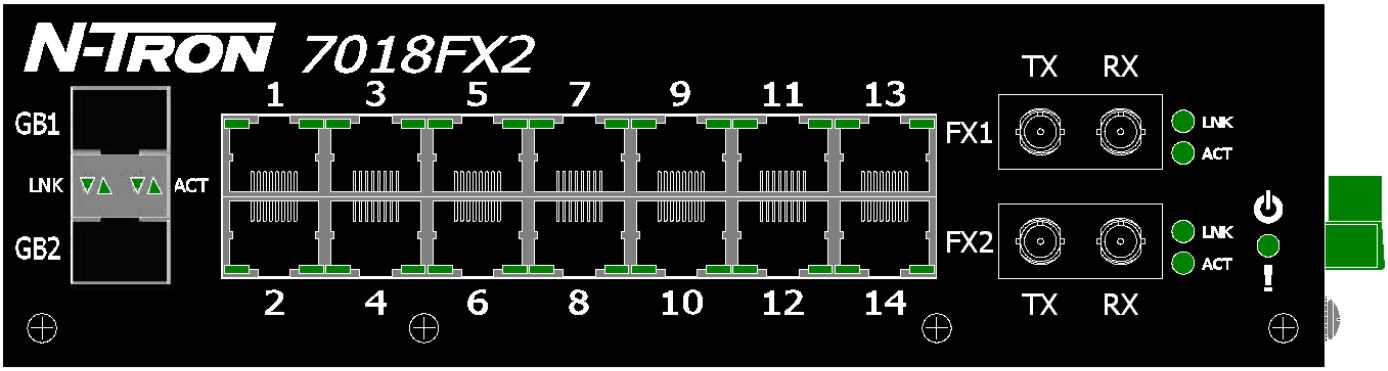

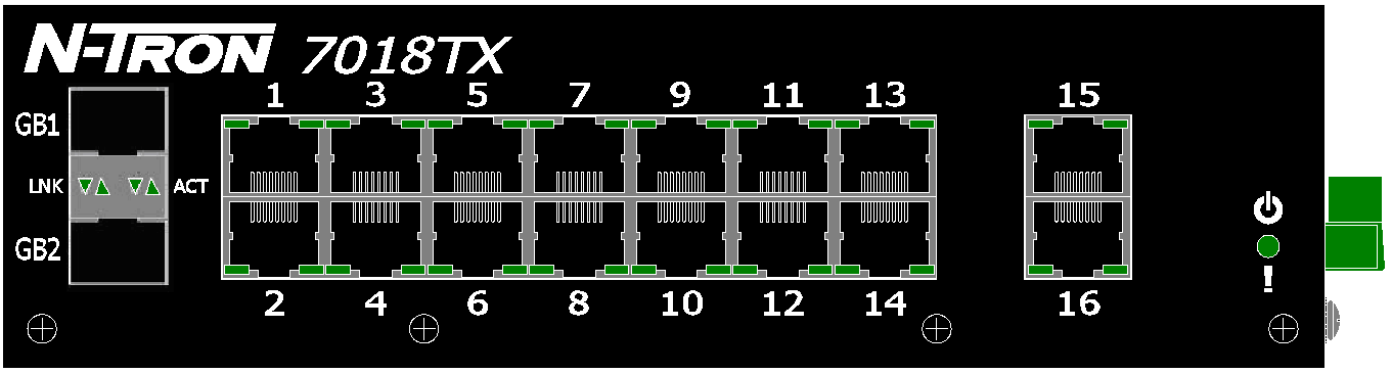

From Top to Left:

Gigabit Ports	1000 Base SFP Copper or Fiber Transceivers (Optional)
RJ45 Ports	Auto Sensing 10/100 Base-TX Connections
Fiber Ports	100 Base-FX Connections (only on 7018FX2 model)
⏻	LED lights when Power is supplied to the unit

NOTE: The RJ45 data port has two LEDs located on each connector. The left LED indicates LINK status, and the right LED indicates ACTIVITY.

LEDs: The table below describes the operating modes:

LED	Color	Description
⏻	GREEN	Power is ON
	RED	Power is ON and a fault condition exists
	OFF	Power is OFF
LNK	GREEN	10/100/1000Mb Link between ports
	OFF	No Link between ports
ACT	GREEN	Data is active between ports
	OFF	Data is inactive between ports

APPLYING POWER (Side View)

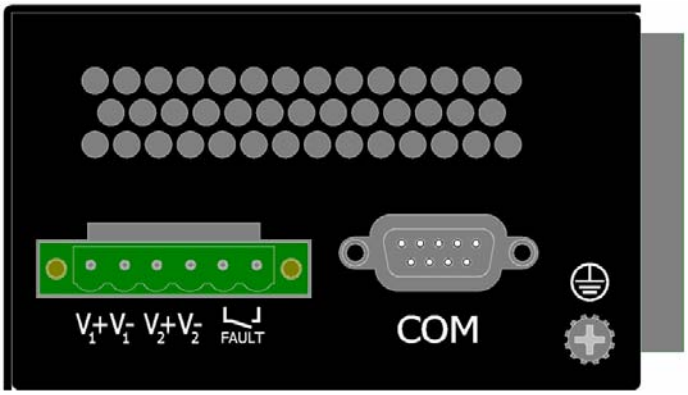

- Unscrew & Remove the DC Voltage Input Plug from the Power Input Header
- Install the DC Power Cables into the Plug (observing polarity).
- Plug the Voltage Input Plug back into the Power Input Header.
- Tightening torque for the terminal block power plug is **0.5 Nm/0.368 Pound Foot.**
- Verify the Power LED stays ON (GREEN).

Notes:

- Only 1 power supply must be connected to power for minimal operation. For redundant power operation, V_1 and V_2 inputs must be connected to separate DC Voltage sources. This device will draw current from both sources simultaneously. Use 16-28 gauge wire when connecting to the power supply.
- The Fault pins on the power connector can be used for an alarm contact. The current carrying capacity is 1A at 24VDC. It is normally open and the relay closes when a fault condition occurs. These pins can be used to connect an external warning device such as a light in order to provide an external alarm. The conditions for generating a fault condition (closing the relay) can be configured through software.

Recommended 24V DC Power Supplies, similar to: N-Tron's P/N **NTPS-24-1.3** (NOTE: Not appropriate for use with M12, POE, and HV models.):

- Input AC 115/230V
- Output DC 24-28V
- Output Current 1.3A @ 24V
  1.0A @ 28V
- Power 72W
- 35 mm DIN-Rail Mountable
- Dimensions: 45X75X91 mm

Connecting the Unit

For FX/FXE units, remove the dust cap from the fiber optic connectors and connect the fiber optic cables. The TX port on the FX/FXE models should be connected to the RX port of the far end station. The RX port on the FX/FXE versions should be connected to the TX port of the far end station.

For 10/100 Base-TX ports, plug a Category 5E twisted pair cable into the RJ45 connector. Connect the other end to the far end station. Verify that the LNK LEDs are ON once the connection has been completed. To connect any port to another device (end node, Switch or Repeater), use a standard Category 5E straight through or crossover cable with a minimum length of one meter and a maximum length of 100 meters.

N-Tron recommends the use of pre-manufactured Cat5E cables to ensure the best performance. If this is not an option and users must terminate their own ends on the Cat5E cables; one of the two color coded standards shown to the right should be utilized. If a user does not follow one of these two color code standards then the performance and maximum cable distance will be reduced significantly, and may prevent the switch from establishing a link.

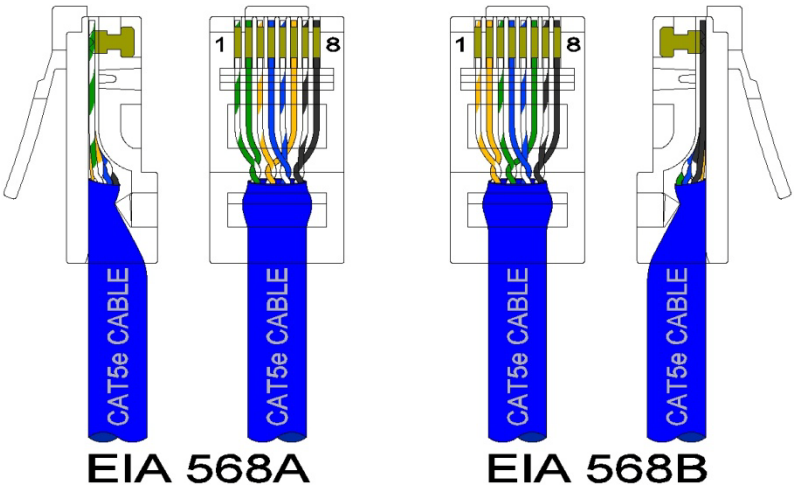

Warning: Creating a port to port connection on the same switch (i.e. loop) is an illegal operation and will create a broadcast storm which will crash the network!

N-TRON SWITCH GROUNDING TECHNIQUES

The grounding philosophy of any control system is an integral part of the design. N-Tron switches are designed to be grounded, but the user has been given the flexibility to float the switch when required. The best noise immunity and emissions (i.e. CE) are obtained when the N-Tron switch chassis is connected to earth ground via a drain wire. Some N-Tron switches have metal din-rail brackets that can ground the switch if the din-rail is grounded. In some cases, N-Tron switches with metal brackets can be supplied with optional plastic brackets if isolation is required.

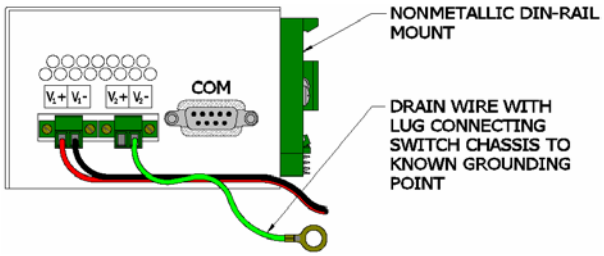

Both V- legs of the power input connector are connected to chassis internally on the PCB. Connecting a drain wire to earth ground from one of the V- terminal plugs as shown here will ground the switch and the chassis. The power leads from the power source should be limited to 3 meters or less in length.

As an alternate, users can run a drain wire & lug from any of the Din-Rail screws or empty PEM nuts on the enclosure. When using an unused PEM nut to connect a ground lug via a machine screw, care should be taken to limit the penetration of the outer skin by less than 1/4 in. Failure to do so may cause irreversible damage to the internal components of the switch.

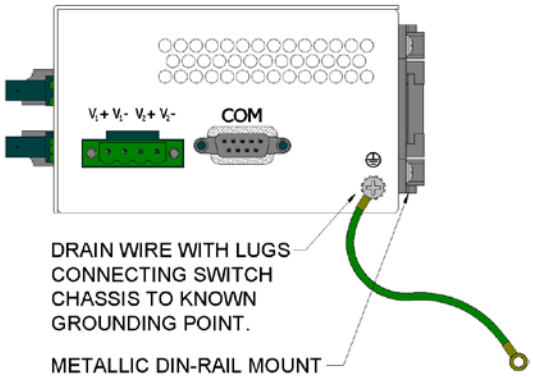

Note: Before applying power to the grounded switch, you must use a volt meter to verify there is no voltage difference between the power supply's negative output terminal and the switch chassis grounding point.

If the use of shielded cables is required, it is generally recommended to only connect the shield at one end to prevent ground loops and interfere with low level signals (i.e. thermocouples, RTD, etc.). Cat5e cables manufactured to EIA-568A or 568B specifications are required for use with N-Tron Switches.

In the event all Cat5e patch cable distances are small (i.e. All Ethernet devices are located in the same local cabinet and/or referenced to the same earth ground), it is permissible to use fully shielded cables terminated to chassis ground at both ends in systems void of low level analog signals.

RJ45 CONNECTOR CRIMP SPECIFICATIONS

Please reference the illustration below for your Cat5 cable specifications:

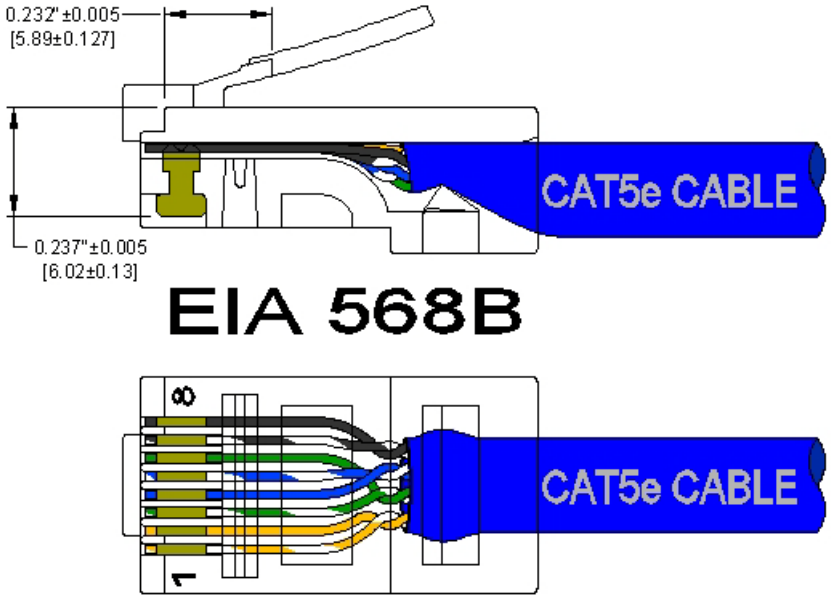

SERIAL INTERFACE

The 7018 Series switches provide an EIA-232 interface accessed via a 9-pin female connector (labeled 'COM' on the unit). This is used to access the Command Line Interpreter (CLI). The pin-outs are shown below:

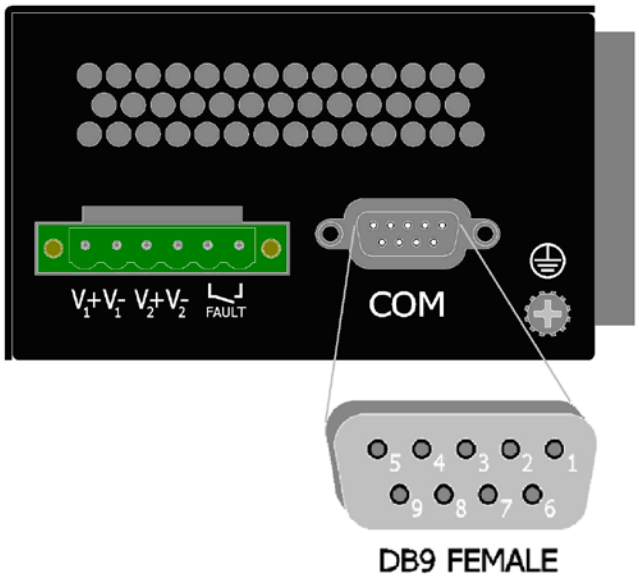

Serial Cable

Connect the serial COM port of your PC and the 7018 Series Switch using a standard straight through serial cable. You will require a cable with a 9-pin or 25-pin sub-D female connector for the PC end, and a 9-pin male sub-D connector for the 7018 Series end.

The following table shows the pin-out and the connections for both types of cable:

PC Port	25-Pin Female	9-Pin Female	7018 series 9-Pin Male	
Signal Name	**Pin #**	**Pin #**	**Pin #**	**Signal Name**
TXD	2	3	3	RXD
RXD	3	2	2	TXD
GND	7	5	5	GND

Standard straight through serial cables are readily available from a variety of computer stores.

HyperTerminal

The following configuration should be used in HyperTerminal:

Port Settings: **115200**
Data Bits: **8**
Parity: **NONE**
Stop bits: **1**
Flow Control: **NONE**

Overview of Advanced Features

Mode of Operation

Each port on the switch can be configured into different modes of operation as shown below:

Copper Ports:	100Base Fiber Ports:	1000Base Copper/Fiber Ports:
- Half Duplex	- Full Duplex	- Full Duplex
- Full Duplex		
- Auto Negotiation		

Half Duplex

In half duplex mode, the CSMA/CD media access method is the means by which two or more stations share a common transmission medium. To transmit, a station waits (defers) for a quiet period on the medium (that is, no other station is transmitting) and then sends the intended message in bit-serial form. If, after initiating a transmission, the message collides with that of another station, then each transmitting station intentionally transmits for an additional predefined period to ensure propagation of the collision throughout the system. The station remains silent for a random amount of time (back-off) before attempting to transmit again.

Full Duplex

Full duplex operation allows simultaneous communication between a pair of stations using point-to-point media (dedicated channel). Full duplex operation does not require that transmitters defer, nor do they monitor or react to receive activity, as there is no contention for a shared medium in this mode.

Auto Negotiation

In Auto Negotiation mode, the port / hardware detects the mode of operation of the station that is connected to this port and sets its mode to match the mode of the station.

Port Mirroring

A Mirroring Port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

Port Trunking

Port Trunking is the ability to group two network ports to increase the bandwidth between two machines (switch or any work station). This feature allows grouping of high-speed connectivity and provides redundant connection between switches, so that a trunk can act as a single link between the switches.

Priority Tagging (QoS)

IEEE 802.1p priority tagging is supported for two classes of services along with bandwidth support per priority level. Transparent mode is supported through configuration wherein if the field is set, the tag bits are ignored. The user can configure up to 8 different priority levels per port. Also priority overriding (overriding the tagged field) can be enabled or disabled by the user.

Virtual LAN

The switch provides support for setting up tagged Virtual LANs. A port may belong to any number of Virtual LANs. The VLAN membership of a station is determined by the VLAN(s) that have been defined for the port to which the station is connected. If a station should move from one port to another, it loses its current VLAN membership and inherits that of the new port it is connected to.

A Default Virtual LAN exists to which a port, which is not a member of any other Virtual LAN, will belong. This allows the switch to operate as a 'normal' Bridge when it is used in a network. A port is automatically removed from the Default VLAN when it is reconfigured to belong to another Virtual LAN.

Using Tagged VLANs, the switch has the ability to take non-tagged packets in some ports, add a VLAN tag to the packet and send it out tagged ports on the switch. The VLANs can also be configured to accept tagged packets in tagged ports, strip the tags off the packets, and send the packets back out other untagged ports. This allows a network administrator to set up the switch so he can support devices on the network that do not support VLAN Tagged packets. The administrator can also set up the ports to discard any packets that are tagged or to discard any packets that are untagged based on a hybrid VLAN of both tagged and untagged ports, and using the VLAN Ingress Filter on the switch.

The 7018 Series switch also has the ability to allow overlapping VLANs. Overlapping VLANs give the user the ability to have one or more ports share two or more VLAN groups. For more information and examples on how this could be implemented, please see our website's technical documents.

Rapid Spanning Tree Protocol

The Rapid Spanning Tree Protocol as specified in IEEE 802.1D-2004 is supported. One Spanning Tree per non-overlapping VLAN is supported. The Rapid Spanning Tree Protocol (RSTP) supersedes the Spanning Tree Protocol (STP) which was described in IEEE 802.1D-1998. The RSTP is used to configure a simply connected active network topology from the arbitrarily connected bridges of a bridged network. Bridges effectively connect just the LANs to which their forwarding ports are attached. Ports that are in a blocking state do not forward frames. The bridges in the network exchange sufficient information to automatically derive a spanning tree.

RSTP allows for much quicker learning of network topology changes than the older STP. RSTP supports new and improved features such as rapid transition to forwarding state. RSTP also sends out new BPDUs every hello time instead of just relaying them. RSTP interoperates with older STP switches by falling back to the older STP when the older BPDUs are detected on bridge ports. The user can also manually configure bridge ports to use the older STP when desired.

SNMP Traps

The 7018 Series switch supports up to 5 SNMP Trap Stations to which SNMP Traps will be sent. The switch supports five standard traps; Link Up, Link Down, Cold Start, Warm Start and Authentication Errors. SNMP Traps will be sent to all the trap stations configured on the switch when the corresponding trap is enabled.

IGMP Snooping

IGMP Snooping is enabled by default, and the switch is *Plug and Play* for IGMP. IGMP snooping provides intelligent network support for multicast applications. In particular, unneeded traffic is reduced. IGMP

Snooping is configured via the web console and if enabled, operates dynamically upon each power up. Also, there can be manual only or manual and dynamic operation. Note that "static multicast group address" can be used whether IGMP Snooping is enabled or not.

IGMP Snooping will function dynamically without user intervention. If some of the devices in the LAN do not understand IGMP, then manual settings are provided to accommodate them. The Internet Group Management Protocol (IGMP) is a protocol that provides a way for a computer to report its multicast group membership to adjacent 'routers'. In this case N-Tron 7018 series switches provide *router-like functionality*. Multicasting allows one computer to send content to multiple other computers that have identified themselves as interested in receiving the originating computer's content. Multicasting can be used to transmit only to an audience that has joined (and not left) a multicast group membership. IGMP version 2 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 2236. IGMP version 1 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 1112. The 7018 series supports v1 and v2.

N-Ring

N-Ring is enabled by default, and the switch is *Plug and Play* for N-Ring except that initially one must enable an N-Ring enabled device to be the N-Ring Manager for a given N-Ring. Subsequently, N-Ring operates dynamically upon each power up. Using N-Tron's proprietary N-Ring technology offers expanded ring size capacity, detailed fault diagnostics, and a standard healing time of 30ms. The N-Ring Manager periodically checks the health of the N-Ring via health check packets. If the N-Ring Manager stops receiving the health check packets, it times out and converts the N-Ring to a backbone within 30ms. When using all N-Ring enabled switches in the ring, a detailed ring map and fault location chart is also provided on the N-Ring Manager's web browser. N-Ring status is also sent from the N-Ring Manager to the N-View OPC Server to identify the health status of the ring. Up to 250 N-Ring enabled switches can participate in one N-Ring topology. Switches that do not have N-Ring capability may be used in an N-Ring, however the ring map and fault location chart cannot be as detailed at these locations.

N-Link

The purpose of N-Link is to provide a way to redundantly couple an N-Ring topology to one or more other topologies, usually other N-Ring topologies. Each N-Link configuration requires 4 switches: N-Link Master, N-Link Slave, N-Link Primary Coupler, and N-Link Standby Coupler. N-Link will monitor the link status of the Primary and Standby Coupler links. While the Primary Coupler link is healthy, it will forward network traffic and the Standby Coupler link will block network traffic. When a problem is detected on the Primary Coupler link, the Primary Coupler link will block network traffic and the Standby Coupler link will forward network traffic. While the N-Link Master and Slave are in communication via the Control link, only one Coupler link (Primary or Standby) will forward network traffic while the other Coupler link will block network traffic.

DHCP

For a DHCP overview, reference:
http://www.n-tron.com/pdf/DHCP_White_Paper.pdf

For detailed Engineering Instructions on DHCP, reference:
http://www.n-tron.com/pdf/DHCP_Technical_Instructions.pdf

DHCP Client

The switch will automatically obtain an IP assignment from a DHCP Server. Communication between the client and server can optionally go through a DHCP Relay Agent.

DHCP Relay Agent

DHCP Relay Agent (Option 82) allows communication between the client and server to cross subnet and VLAN boundries. It also allows for a device on a specific port to receive a specific IP address and if the device is replaced, the replacement receives the same IP address as the original device.

DHCP Server

DHCP Server allows DHCP Client devices to automatically obtain an IP assignment. IP assignments can be set up as a dynamic range of IP addresses available to any client device; or specific IP addresses based on the clients MAC address, Client ID (Option 61), or Relay Agent connection (Option 82).

TROUBLESHOOTING

1. Make sure the ⏻ (Power LED) is ON.
2. Make sure you are supplying sufficient current for the version chosen. Note: The Inrush current will exceed the steady state current by ~ 2X.
3. Verify that Link LEDs are ON for connected ports.
4. Verify cabling used between stations.
5. Verify that cabling is Category 5E or greater for 100Mbit operation.

SUPPORT

Contact N-Tron Corp. at:
TEL: 251-342-2164
FAX: 251-342-6353
E-MAIL: N-TRON_Support@n-tron.com
WEB: www.n-tron.com

FCC STATEMENT

This product complies with Part 15 of the FCC-A Rules.
Operation is subject to the following conditions:
(1) This device may not cause harmful Interference
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

INDUSTRY CANADA

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions; (1) this device digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe A répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Web Software Configuration

Web Management

Enter the switch's IP address in any web browser and login to the web management feature of the 7018 Series.

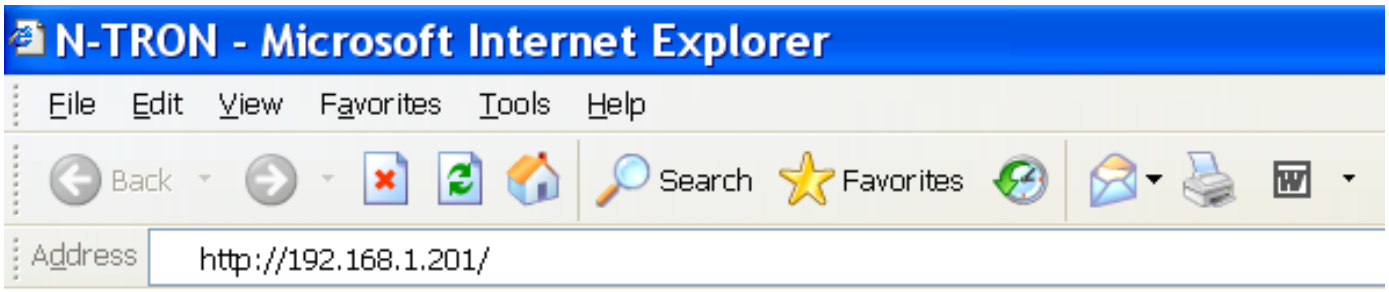

Default:

User Name: ***admin***
Password: ***admin***

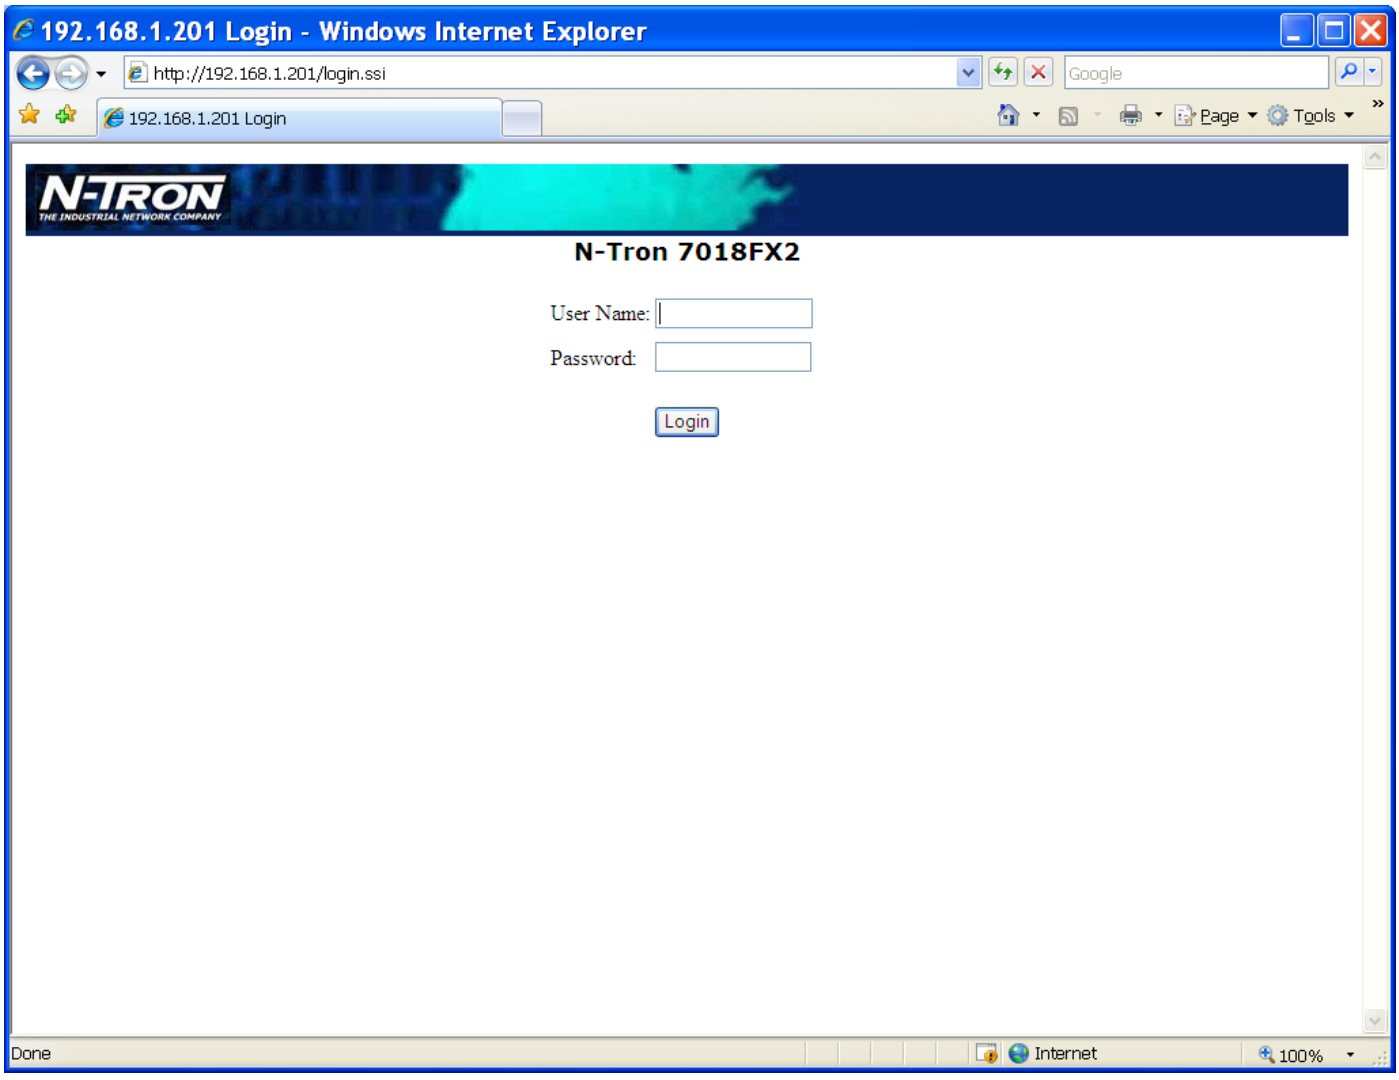

Web Management - Home

When the administrator first logs onto a 7018 Series switch the default home page will be displayed. On the left hand side of the screen there is a list of configurable settings that the 7018 Series switch will support. This section of the manual will go through each and every choice listed on the left hand side of the screen and explain how to configure those settings. In the center of the main home page the administrator can see some basic information like what firmware revision the switch is running. The firmware can be upgraded at a later time in the field using TFTP.

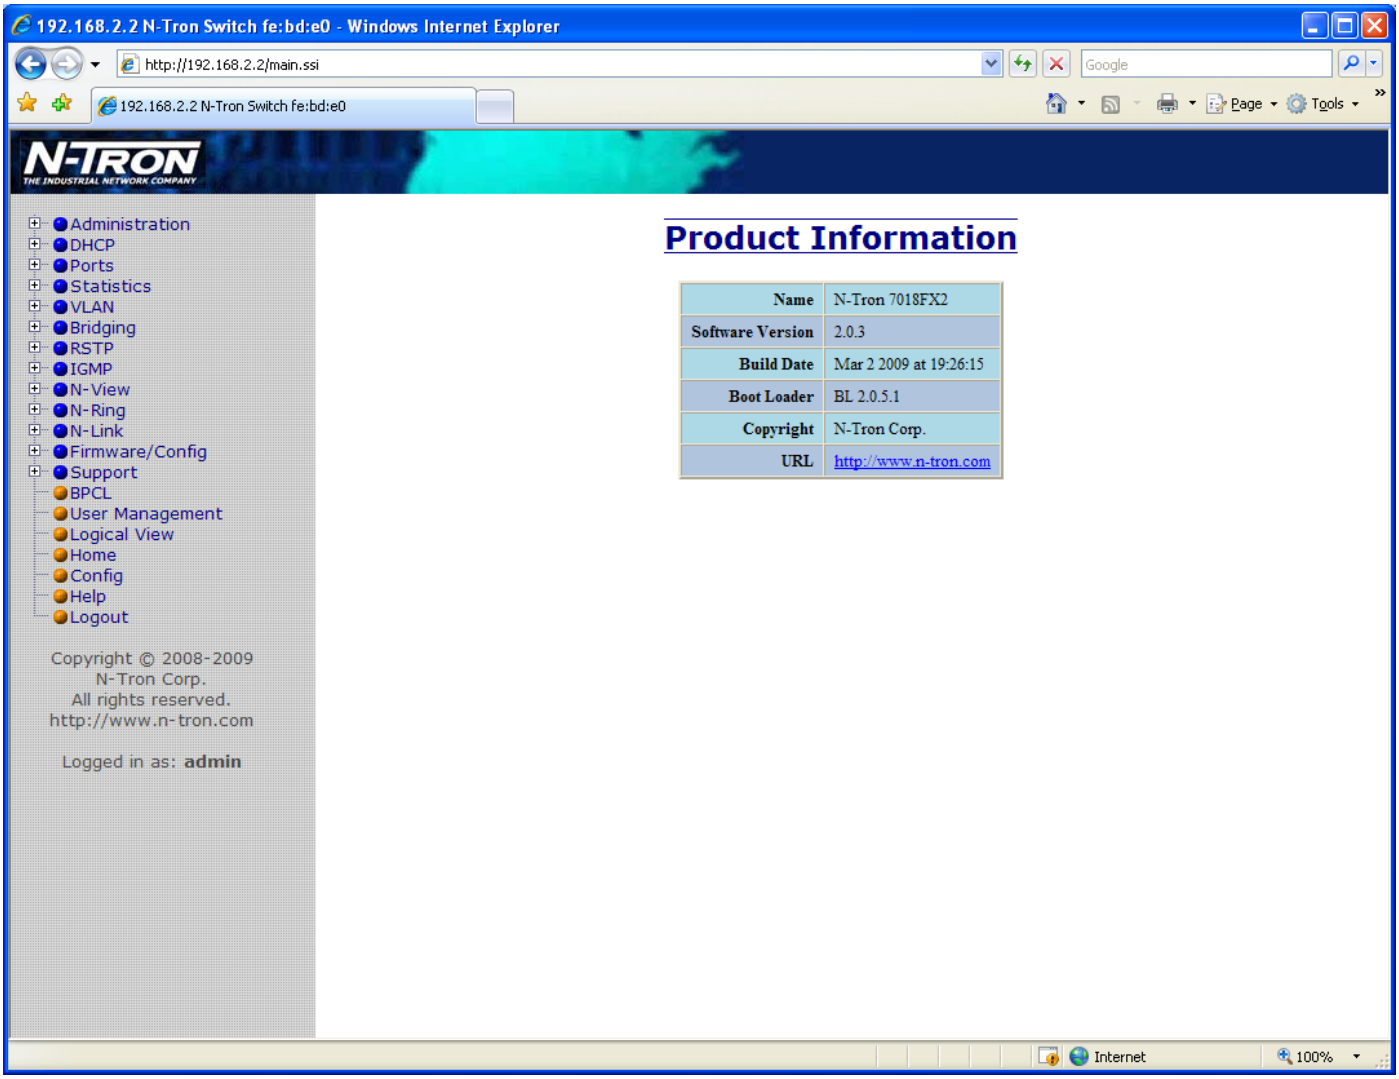

Web Management – Menu Structure

To the left, there is a menu which is shown fully opened below. The pages opened by each of the individual selections are described in the rest of this section. The use of each of these pages is also described in this section. In most of the descriptions, only the right side of the page is shown.

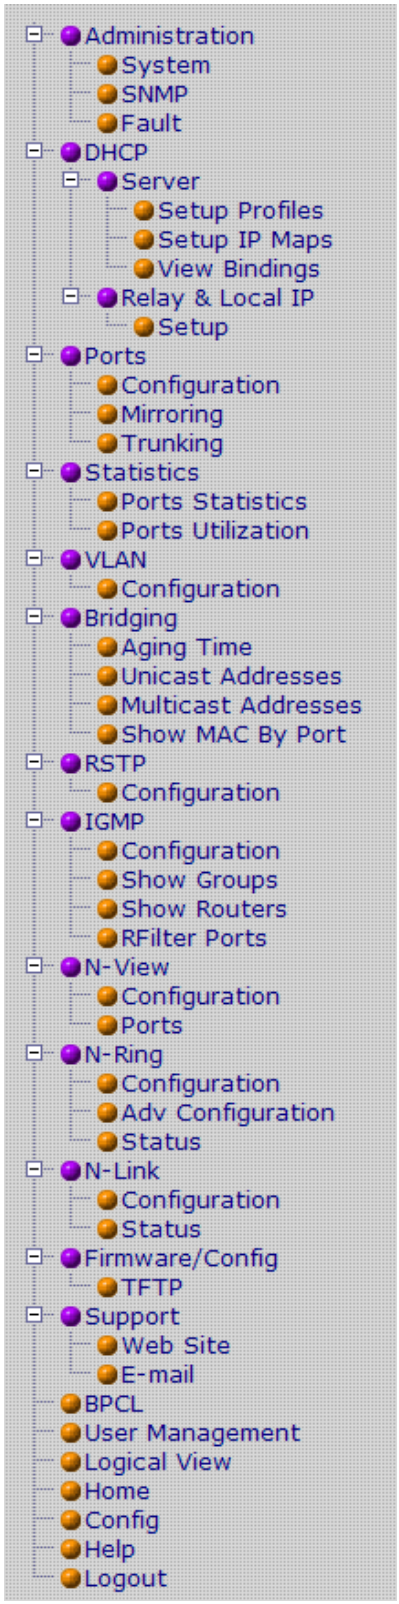

Administration – System

The System tab under the Administration category lists the following information about the switch:

IP Address
Contains the configured IP Address of the device.

Subnet Mask
Contains the configured Subnet Mask of the device.

Gateway
Contains the configured Default Gateway of the device.

MAC Address
MAC Address of the device.

System Up Time
This parameter represents the total time count. This time has elapsed since the switch was turned ON or RESET.

Name
It shows the name of the product, which allows alphanumeric and special characters (#, _, -) only.

Contact
The person to contact for system issues, which should be someone within your organization.

Location
The physical location of the switch.

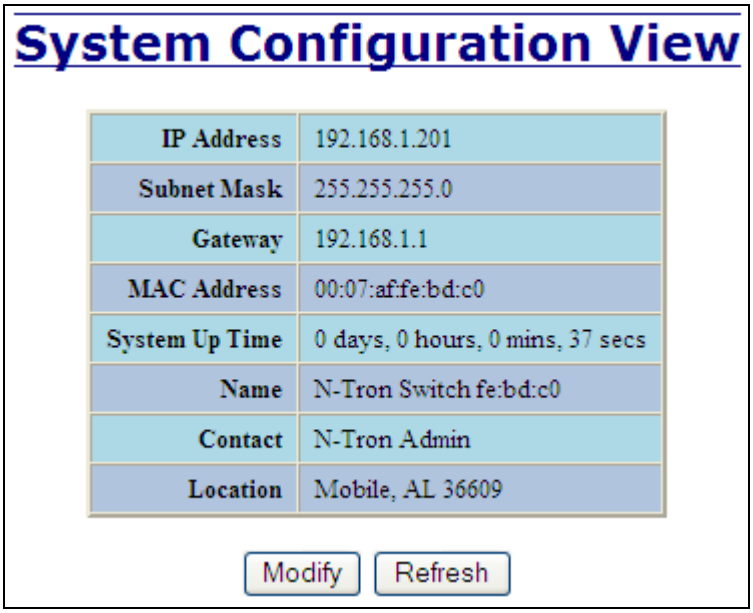

Administration – System, Continued…

By selecting the Modify button, you will be able to change the switch's IP Address, Subnet Mask, Gateway, Name, Contact information, and the Location of the switch through the web management features. It is recommended to change the TCP/IP information through the Command Line Interface (CLI) initially, but it defaults to the following:

IP Address – 192.168.1.201
Subnet Mask – 255.255.255.0
Gateway – 192.168.1.1

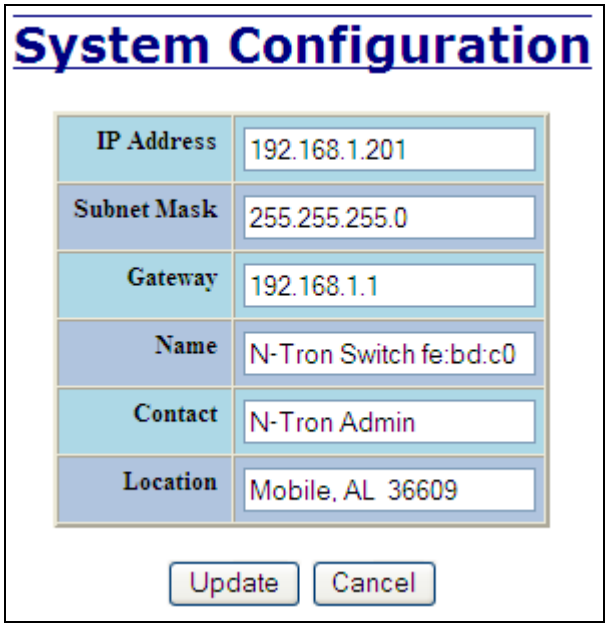

Administration – SNMP

The SNMP tab under the Administration category shows a list of IP Addresses that act as SNMP Traps. The Read-Only, Read-Write, and Trap Community Names are also shown here.

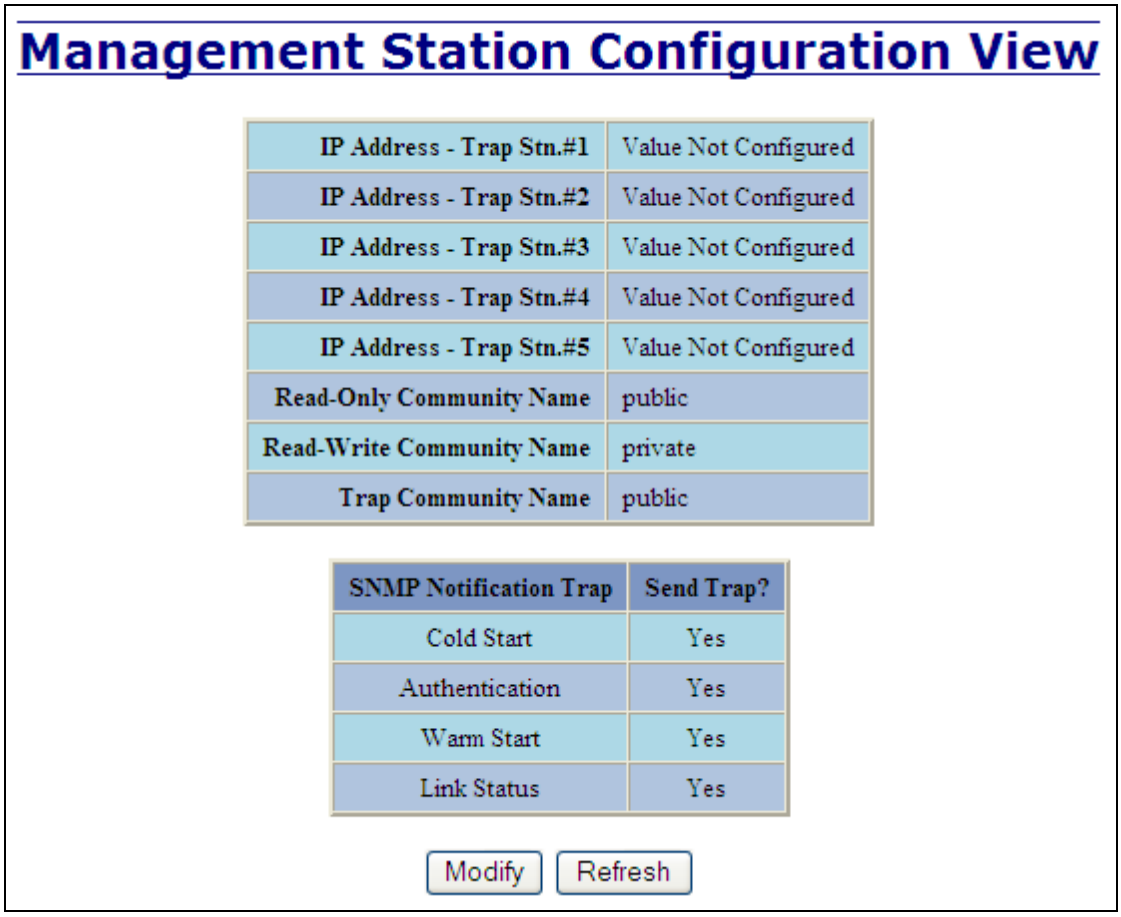

By selecting the Modify button, you will be able to change any of the fields listed. This allows the user to set an IP address for a Trap station or change the Community Names. If the SNMP Notification Trap is enabled, systems that are listed as a Trap station will be sent the corresponding notification trap. To restore a Trap to "Value Not Configured", enter '0.0.0.0'.

Administration – SNMP, Continued…

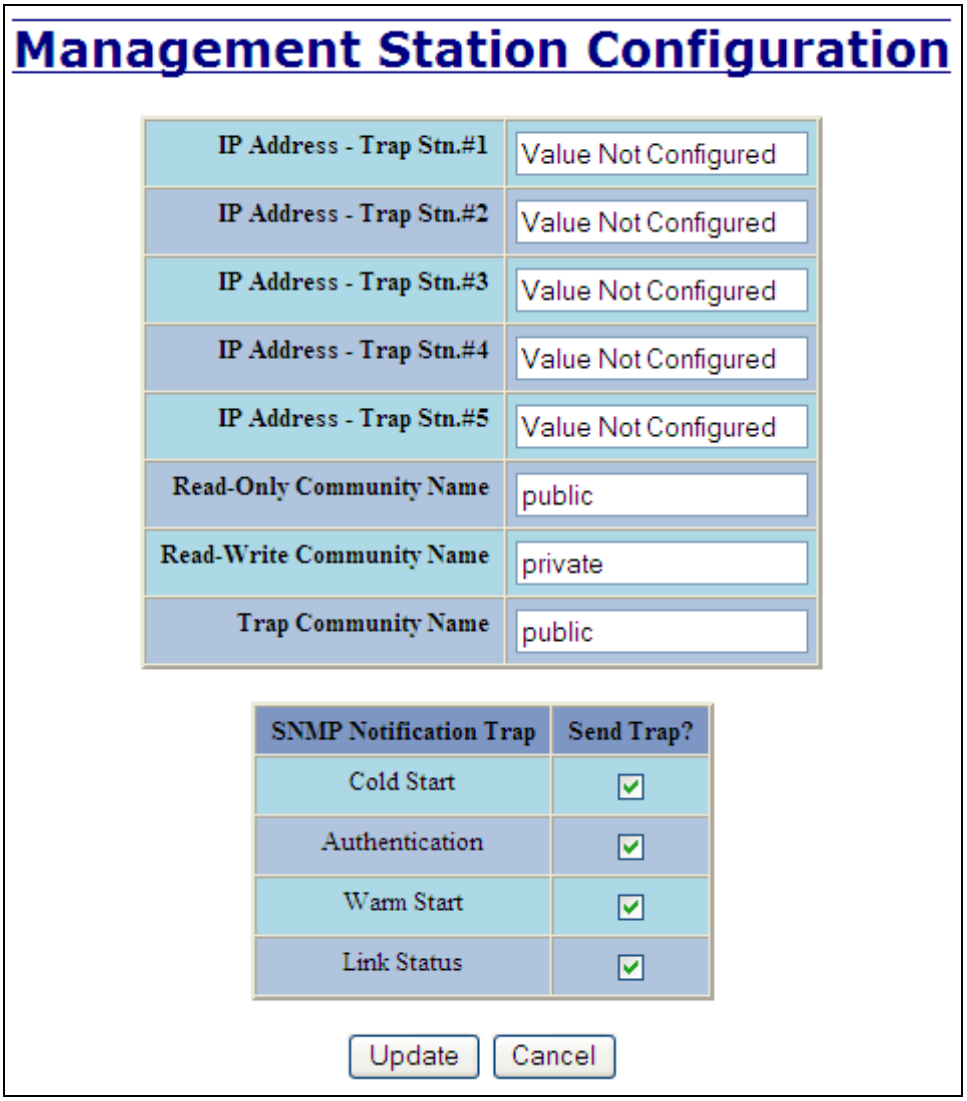

Administration – Fault

The Fault tab under the Administration category provides configurable selections indicating the way to notify when a Power, N-Link or N-Ring Signal fault occurs. Power signal faults consist of V_1 and V_2. N-Link Faults can also be set for notification. The Power and N-Link notifications may consist of any combination of the options: Show Web, Show LED, and Contact. N-Ring signal faults consist of: Broken, Partial Break (Low), Partial Break (High), and Multiple Managers.

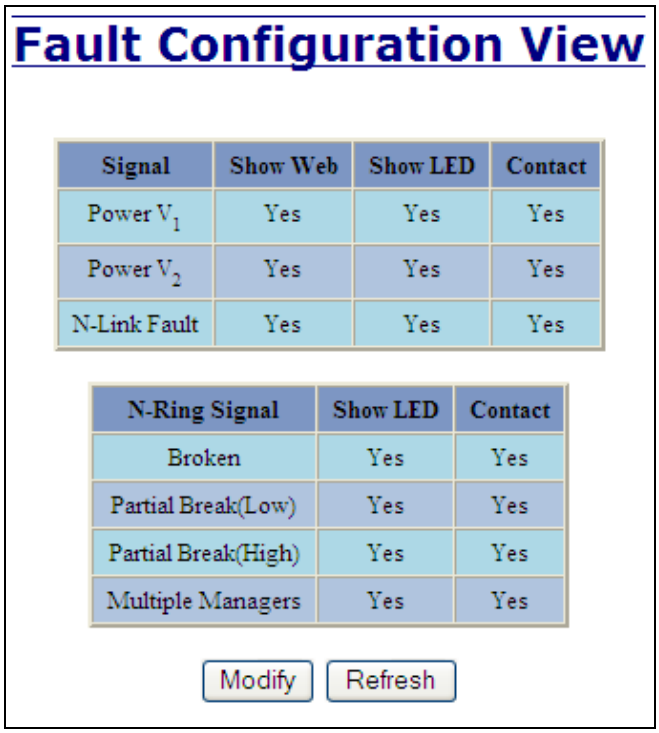

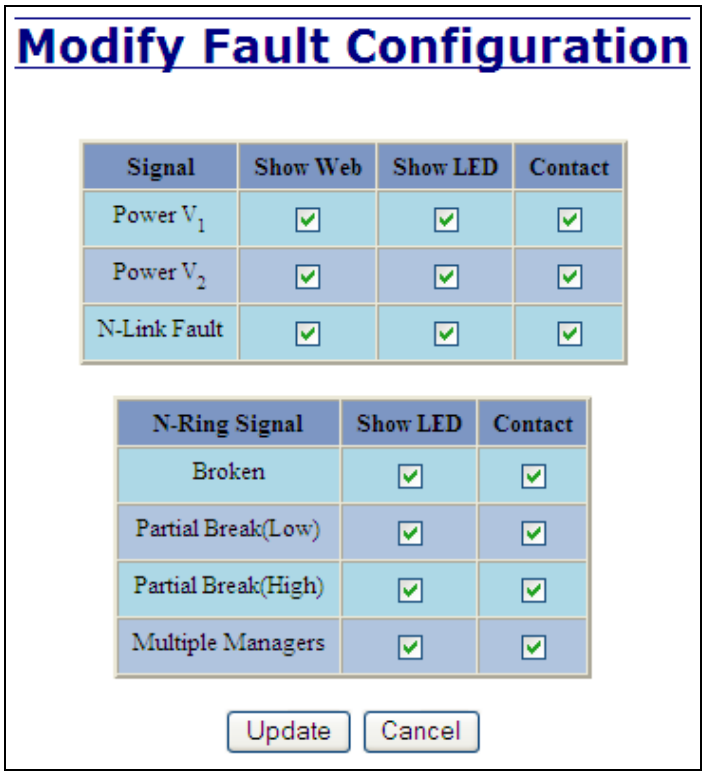

DHCP – Server – Setup Profiles

The Setup Profiles tab under the DHCP/Server category lists the following information about the current state of the server and the existing network profiles:

Server Enabled
Indicates whether the DHCP server is active.

Allow Broadcast
Indicates whether the DHCP server will process broadcast messages.

Delay Broadcast (Ms)
The amount of time the DHCP server will delay processing a broadcast message.

Server ID
Descriptive name of the DHCP server.

Profile Name
Descriptive name of the network profile.

Address Pool
Range of IP addresses which the profile can use.

Subnet Address
The most restrictive subnet address calculated from the address pool range.

Subnet Mask
The most restrictive subnet mask calculated from the address pool range.

Domain Name
The domain name to be presented to the client.

Has Profile IP Maps
Indicates whether the profile has IP maps associated with it.

Delete
Deletes the profile along with all IP maps and bindings associated with it. The Default profile cannot be deleted.

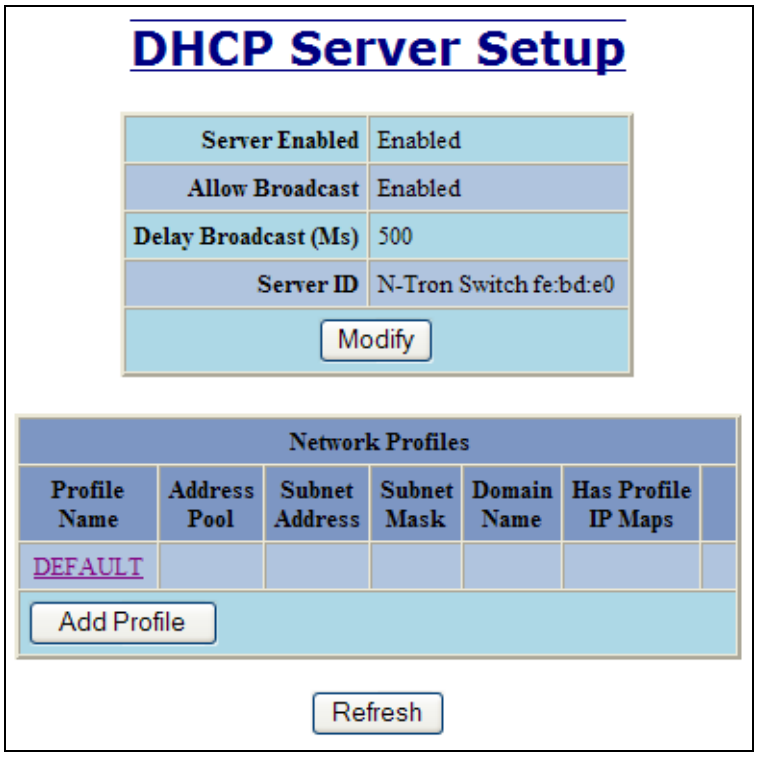

DHCP – Server – Setup Profiles, Continued…

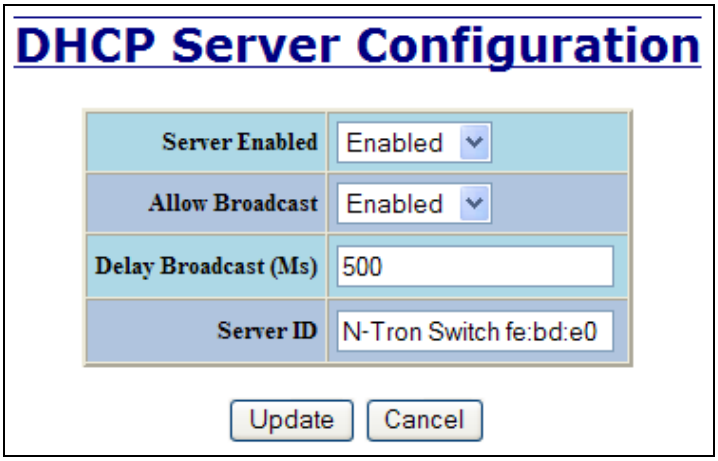

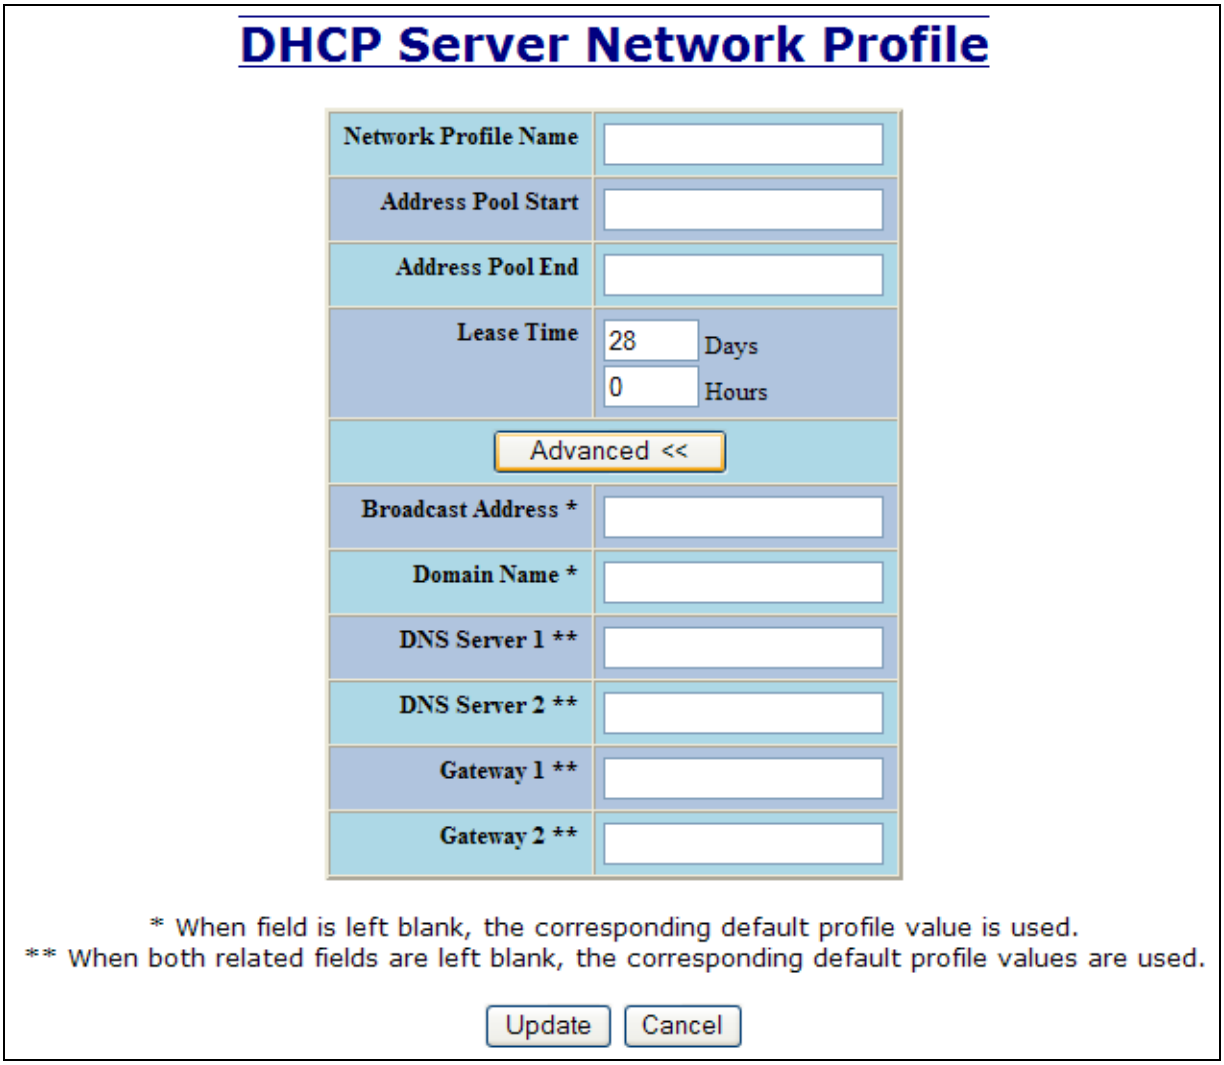

DHCP – Server – Setup IP Maps

The Setup IP Maps tab provides the way to create IP mappings with an existing network profile. There are three types of mappings that can be created: Dynamic Range, Static Range, and Single IP.

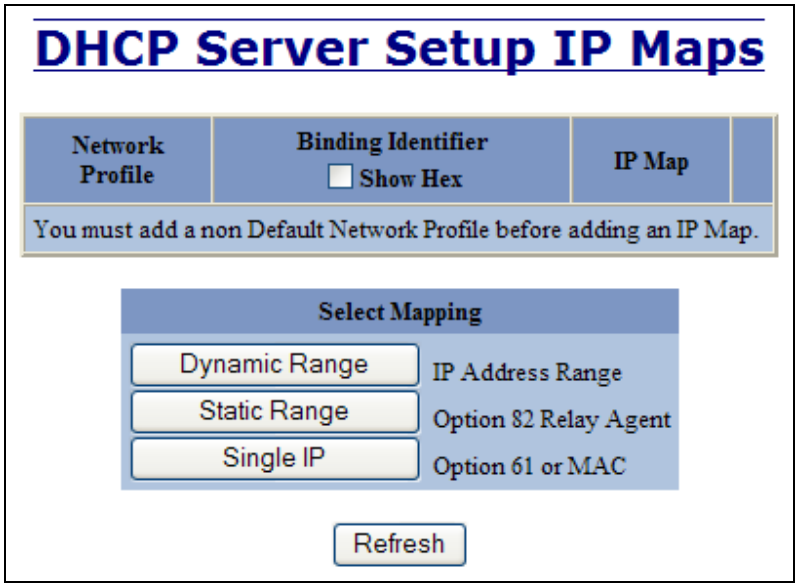

The Dynamic Range type of mapping is used to create a range of dynamic IP addresses for requesting clients. The following information is required:

Network Profile
An existing network profile to which the IP map applies.

Low IP
The starting IP address of a range.

High IP
The ending IP address of a range.

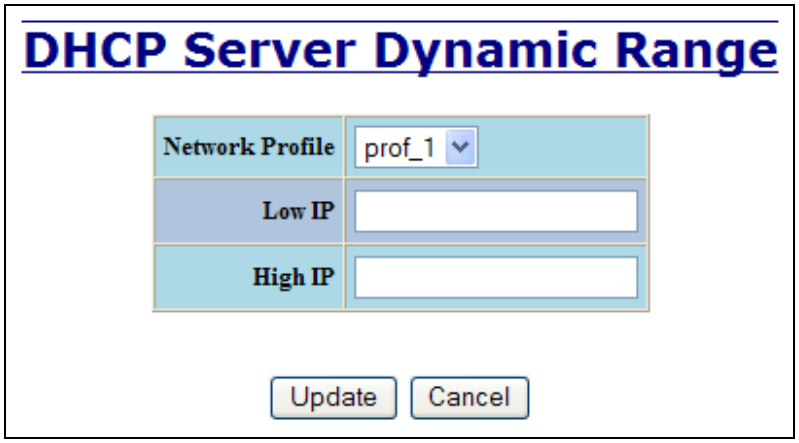

The Static Range type of mapping is used to create a range of static IP addresses dedicated to specific ports on a relay agent switch. There are two different data entry formats available according to whether the relay agent type is for an N-TRON or for a generic switch.

To create a range of static IP addresses on an N-Tron relay agent switch:

Network Profile
An existing network profile to which the IP map applies.

DHCP – Server – Setup IP Maps, Continued…

Relay Agent Type
Should be set to N-TRON.
Switch Model
List of N-TRON models that support this feature.
Remote ID
A unique identifier that designates the N-TRON relay agent switch.
Add
Checkbox used to add an IP map for the corresponding port.
Port No
The actual port number.
Port Name
Descriptive name of the port.
VLAN
VLAN ID that the port is a member of.
Circuit ID
Auto-generated string based on the port name and VLAN ID.
IP Address
IP address to assign to the IP map.

DHCP – Server – Setup IP Maps, Continued…

DHCP Server Static Range

(Option 82)

Network Profile	prof_1
Relay Agent Type	N-TRON / Generic
Switch Model	7018FX2
Remote ID	Hex / MAC / IP / String

Add	Port No	Port Name	VLAN	Circuit ID	IP Address
☐	1	TX1	1	TX1-0001	192.168.1.
☐	2	TX2	1	TX2-0001	192.168.1.
☐	3	TX3	1	TX3-0001	192.168.1.
☐	4	TX4	1	TX4-0001	192.168.1.
☐	5	TX5	1	TX5-0001	192.168.1.
☐	6	TX6	1	TX6-0001	192.168.1.
☐	7	TX7	1	TX7-0001	192.168.1.
☐	8	TX8	1	TX8-0001	192.168.1.
☐	9	TX9	1	TX9-0001	192.168.1.
☐	10	TX10	1	TX10-0001	192.168.1.
☐	11	TX11	1	TX11-0001	192.168.1.
☐	12	TX12	1	TX12-0001	192.168.1.
☐	13	TX13	1	TX13-0001	192.168.1.
☐	14	TX14	1	TX14-0001	192.168.1.
☐	15	FX1	1	FX1-0001	192.168.1.
☐	16	FX2	1	FX2-0001	192.168.1.
☐	17	GB1	1	GB1-0001	192.168.1.
☐	18	GB2	1	GB2-0001	192.168.1.

Update Cancel

DHCP – Server – Setup IP Maps, Continued…

To create a range of static IP addresses on a generic relay agent switch:

Network Profile
An existing network profile to which the IP map applies.

Relay Agent Type
Should be set to Generic.

Port Count
The number of ports on the particular relay agent switch.

Add
Checkbox used to add an IP map for the corresponding port.

Port No
The actual port number.

Remote ID
The identifier that corresponds to an Option 82 Remote ID sub-option used by the particular relay agent switch.

Circuit ID
The identifier that corresponds to an Option 82 Circuit ID sub-option used by the particular relay agent switch.

IP Address
IP address to assign to the IP map.

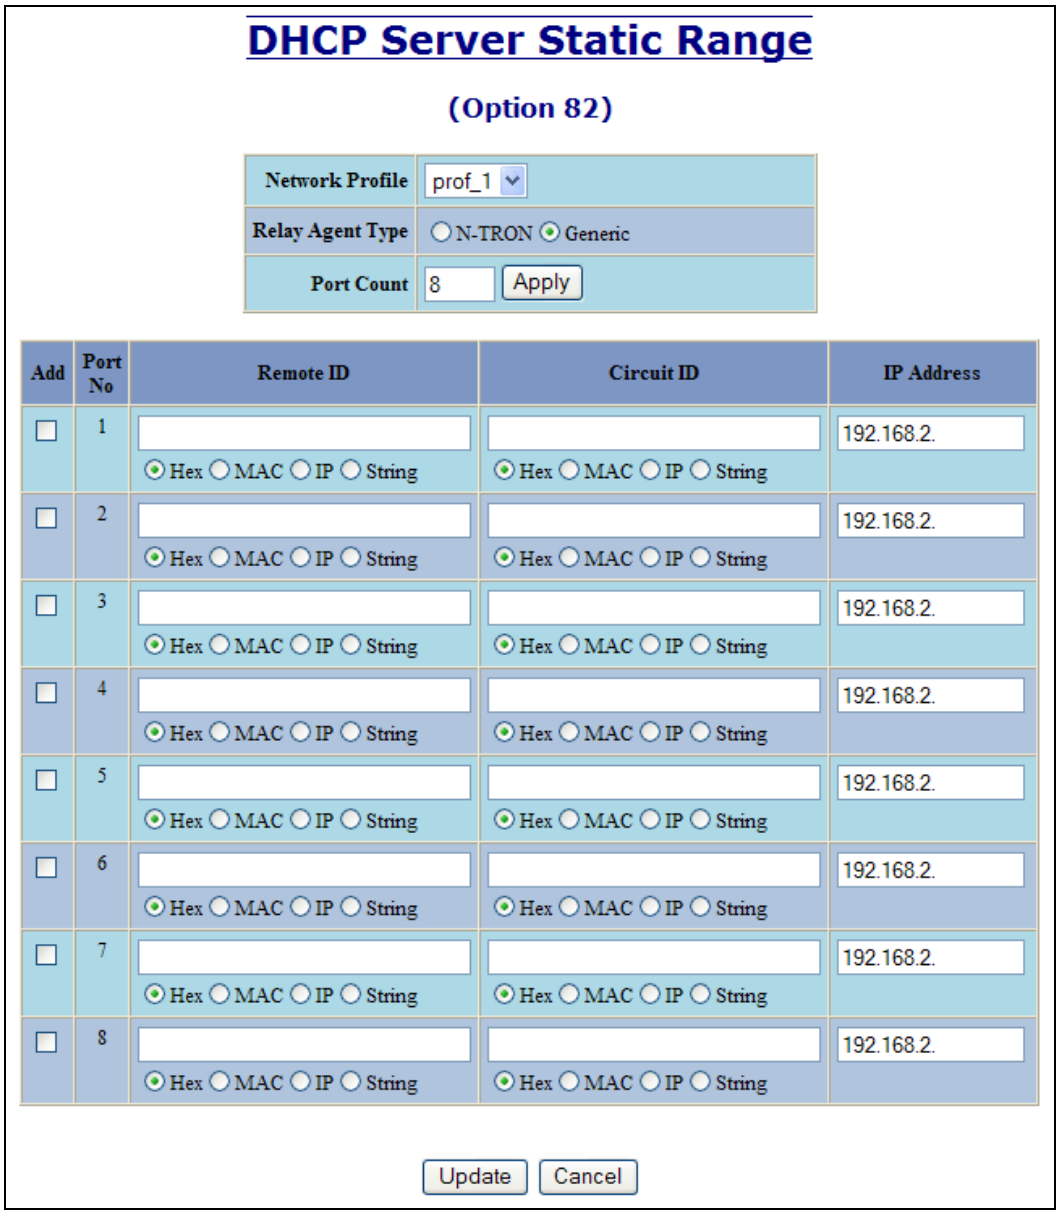

DHCP – Server – Setup IP Maps, Continued…

The Single IP type of mapping is used to create a static IP address for an individual client. The following information is required:

Network Profile
An existing network profile to which the IP map applies.

IP
The static IP address to offer to a client.

Unique ID
The unique identifier that must match either the client identifier (Option 61) or the client's hardware address (MAC).

Format
Designates how the Unique ID is interpreted.

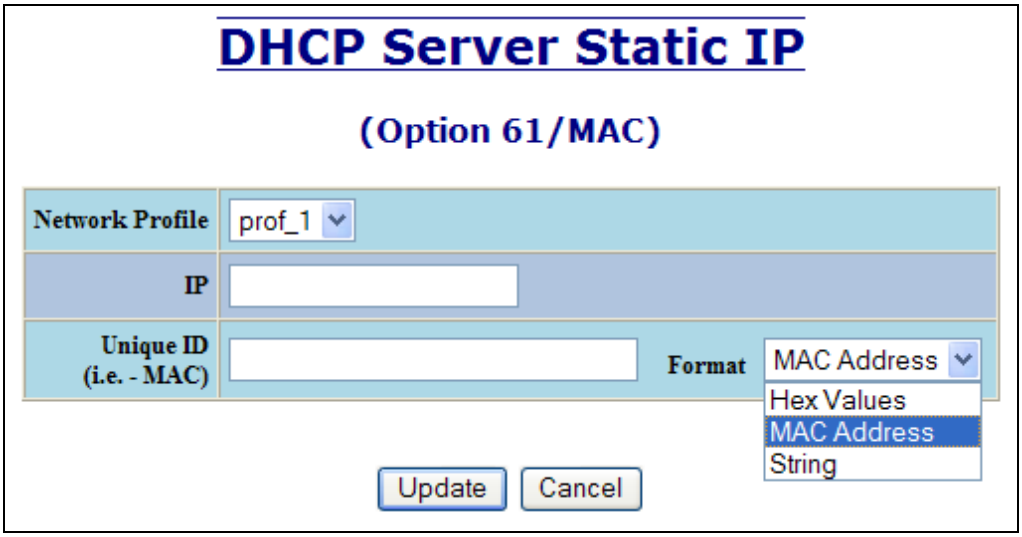

DHCP – Server – View Bindings

The View Bindings tab lists the bindings of physical devices to IP addresses that are in use or offered:

Network Profile
The profile applied to the binding entry.

Binding Identifier
The client associated with the binding entry.

Client Hardware Address (MAC)
The client's MAC address.

Client IP Address
The actual IP address assigned to the binding entry.

Status
Indicates the current status of the binding entry.

Release
Removes the corresponding binding.
WARNING: By releasing an IP address, it is possible to end up with two physical devices with the same IP address which may cause network disruption to that IP address.

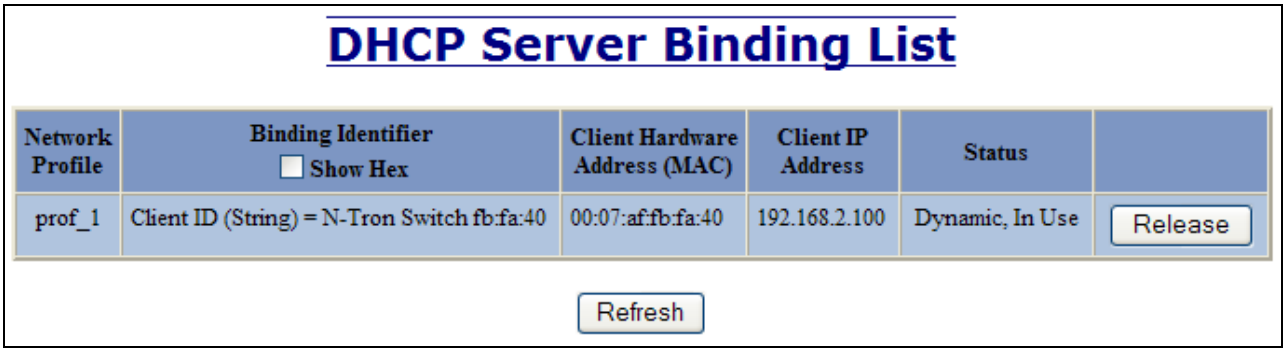

DHCP – Relay & Local IP - Setup

The Setup tab under the DHCP/Relay & Local IP category shows the current state of the relay agent.

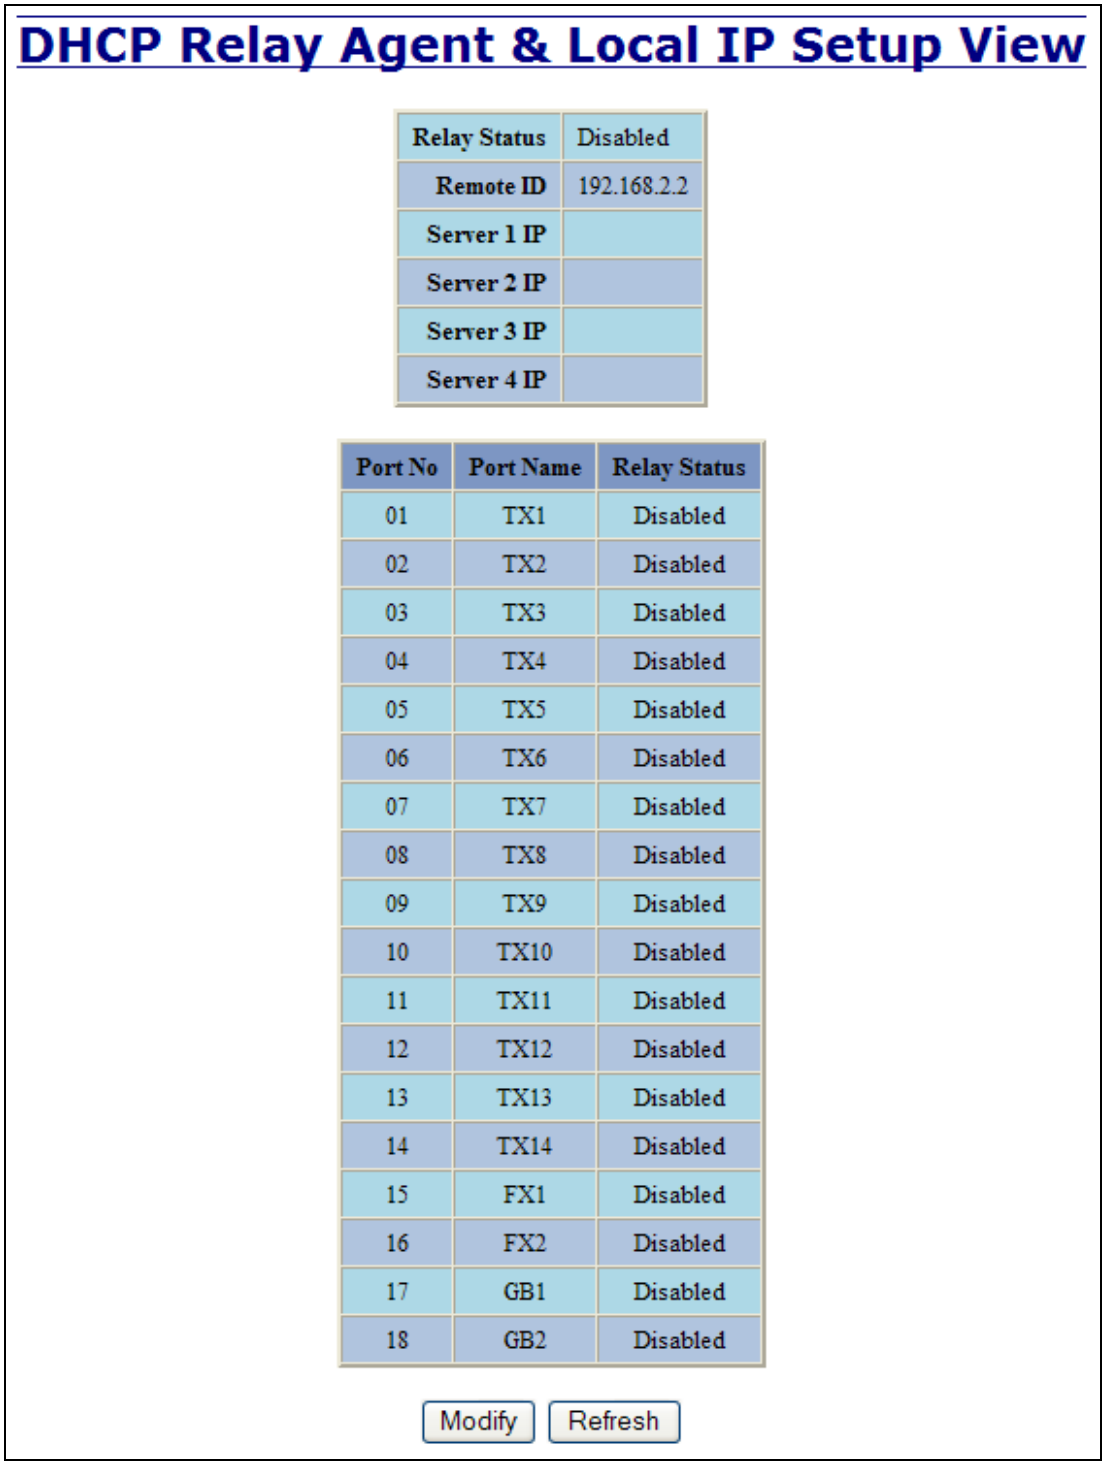

By selecting the Modify button, you can configure general settings of the relay agent, as well as, configure settings on a per port basis. The following describes these settings:

DHCP – Relay & Local IP – Setup, Continued…

Relay Status
Indicates whether the DHCP relay agent is active.

Remote ID
The unique identifier that designates the relay agent switch.

Server # IP
The configured IP address of the DHCP servers.

Port No
The actual port number.

Port Name
The descriptive name of the port.

Relay Status
The selection to designate whether the port will perform relay agent functionality. The choices are:

Disabled	The port will function without relay agent processing.
Enabled	The port will relay DHCP client-originated broadcast packets to the DHCP servers.
Assign Local IP	The port will not relay DHCP client-originated broadcast packets. Instead the relay agent will offer the port's locally assigned IP address to the client.

Other Data
When the Relay Status is set to Enabled, the Circuit ID for the port can be specified. When the Relay Status is set to Assign Local IP, the IP address for the port can be specified.

DHCP – Relay & Local IP – Setup, Continued…

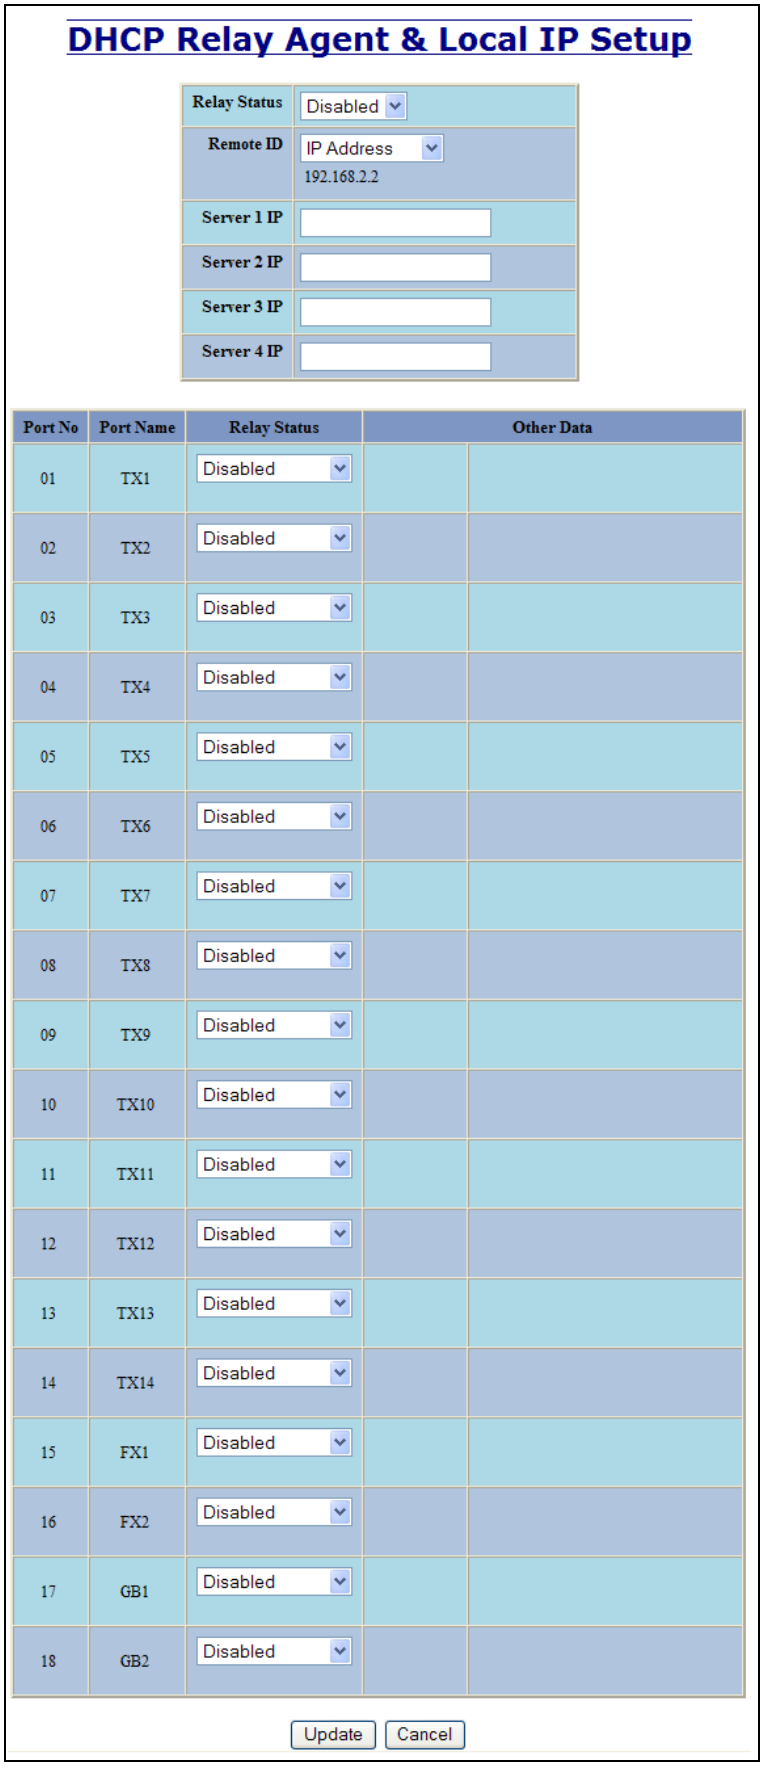

Ports – Configuration

The Configuration tab under the Ports category will show a detailed overview of all the active ports on the switch. The overview will display the following information:

Port Number
This is the port index.

Port Name
This field displays the name of the port. The designation of TX is for copper ports, FX is for fiber optic ports, and GB is for the Gigabit ports (fiber or copper).

Admin Status
This configurable field displays the existing status of the port whether it is **Enabled/Disabled.**

Link Status
Current Link state of the port.

Auto Negotiation State
This configurable field displays the current auto-negotiation state whether it is **Enabled/Disable.**

Port Speed
This configurable field displays the speed of each port **10/100/1000** Mbps.

Duplex Mode
This configurable field displays the existing mode of the port whether it is **Full Duplex/Half Duplex.**

Flow Control State
This configurable field displays the existing flow control status of each port. When enabled, the individual port supports half-duplex back pressure and full-duplex flow control. The default is **Disabled.**

Force High Priority State
This configurable field displays the port priority status of each port. When enabled for a port all frames received on that port will be forced to the highest priority queue regardless of 'Default Priority' setting or priority tags within the received frames. The default is **Disabled**. In an untagged N-Ring configuration, the N-Ring ports on the N-Ring Manager and active N-Ring Members will be **Enabled**.

Default Priority
This configurable field displays the default QoS priority for the port when an untagged frame is received. The range is **0-7.**

RSTP State
The current RSTP status of a port. It may contain **Disable/Discarding/Learning/Forwarding.**

PVID
This configurable field displays the existing port VLAN ID setting. The allowable range is **1-4094.**

Ports – Configuration, Continued…

Port Configuration View

Port No	Port Name	Admin Status	Link Status	Auto Nego	Port Speed	Duplex Mode	Flow Control	Force High Priority	Default Priority	Port State	PVID
01	TX1	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
02	TX2	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
03	TX3	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
04	TX4	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
05	TX5	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
06	TX6	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
07	TX7	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
08	TX8	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
09	TX9	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
10	TX10	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
11	TX11	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
12	TX12	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
13	TX13	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
14	TX14	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
15	FX1	Enabled	Down	Disabled	100	Full	Disabled	Disabled	1	Disabled	1
16	FX2	Enabled	Down	Disabled	100	Full	Disabled	Disabled	1	Disabled	1
17	GB1	Enabled	Down	Disabled	1000	Full	Disabled	Disabled	1	Disabled	1
18	GB2	Enabled	Down	Disabled	1000	Full	Disabled	Disabled	1	Disabled	1

Refresh

Ports – Configuration, Continued…

The User can click on the Port Number to configure each port individually. This will allow the user to change the port's settings for the following fields which are explained above:

Admin Status
Speed and Duplex
Flow Control
Force High Priority
Default Priority
PVID

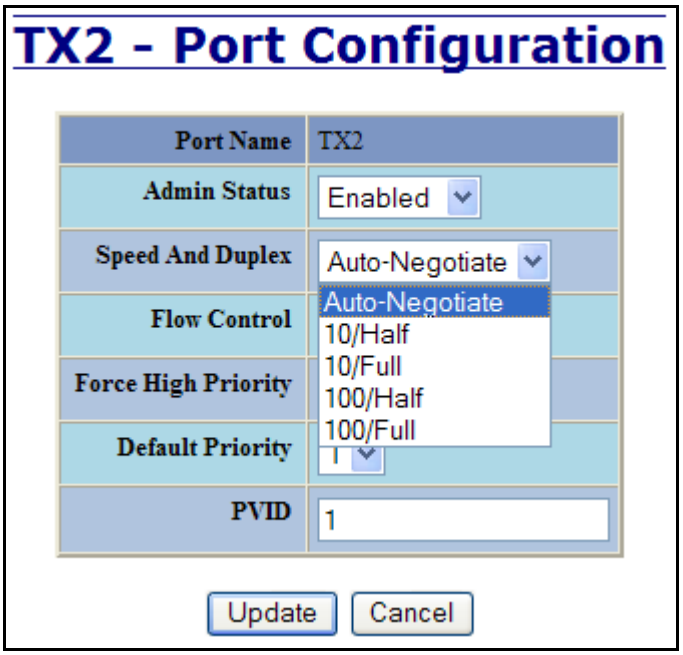

Ports – Mirroring

A mirroring port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

The Mirroring tab under the Ports category displays the status including the list of Source Ports and the Destination Port that the Sources are being mirrored to.

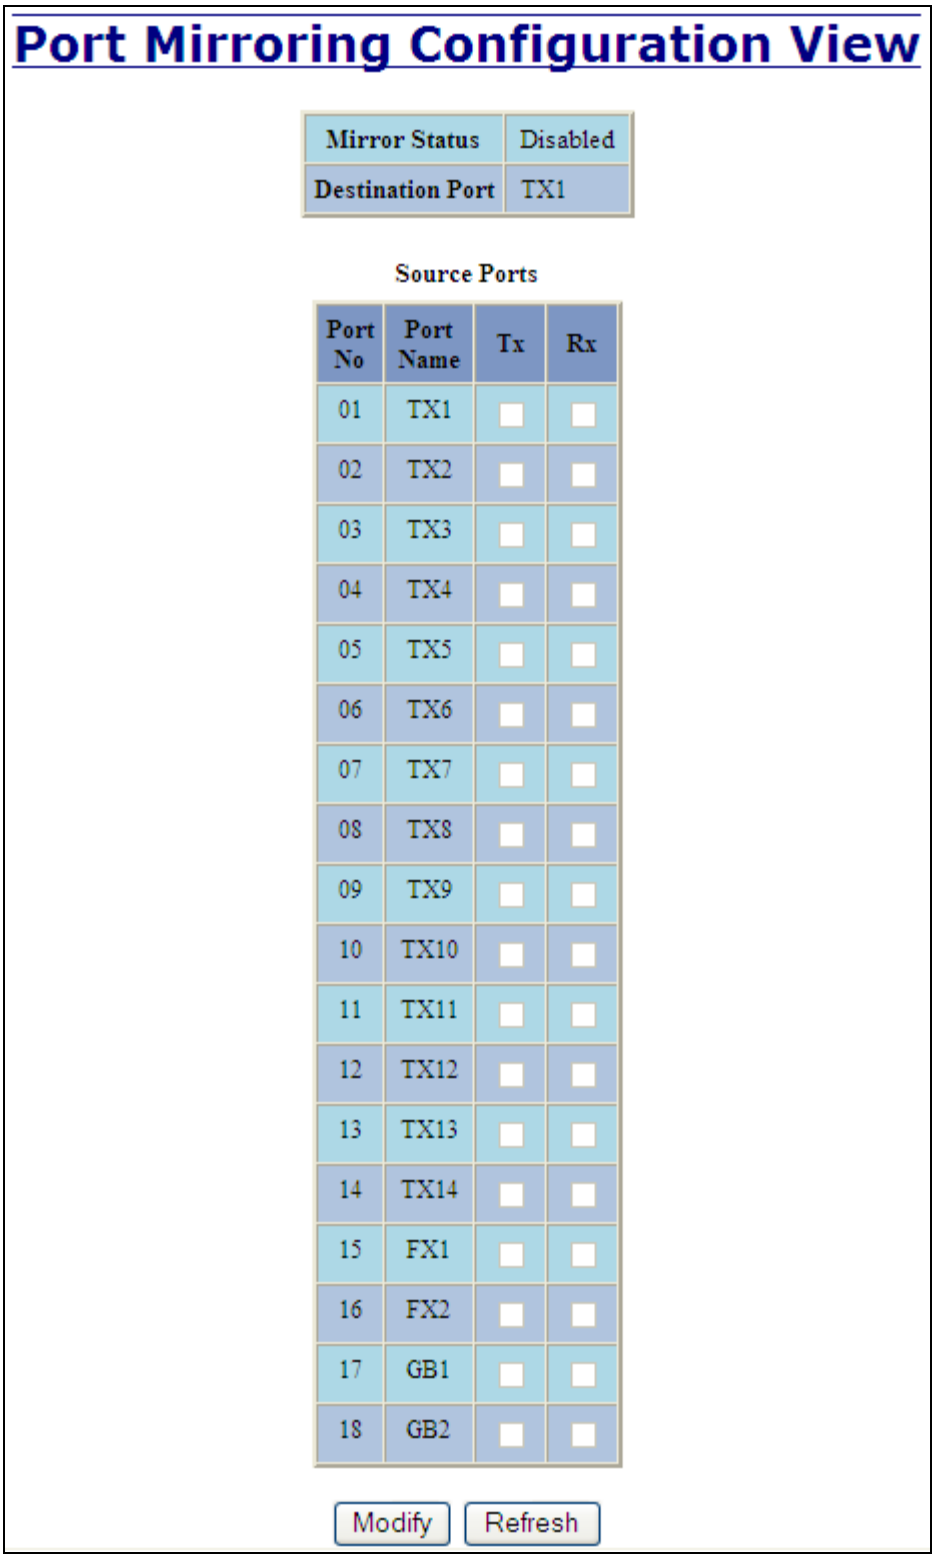

Ports – Mirroring, Continued…

Following the Modify button, you can enable the status of port mirroring and select source ports and the destination port that the source ports will be mirrored to.

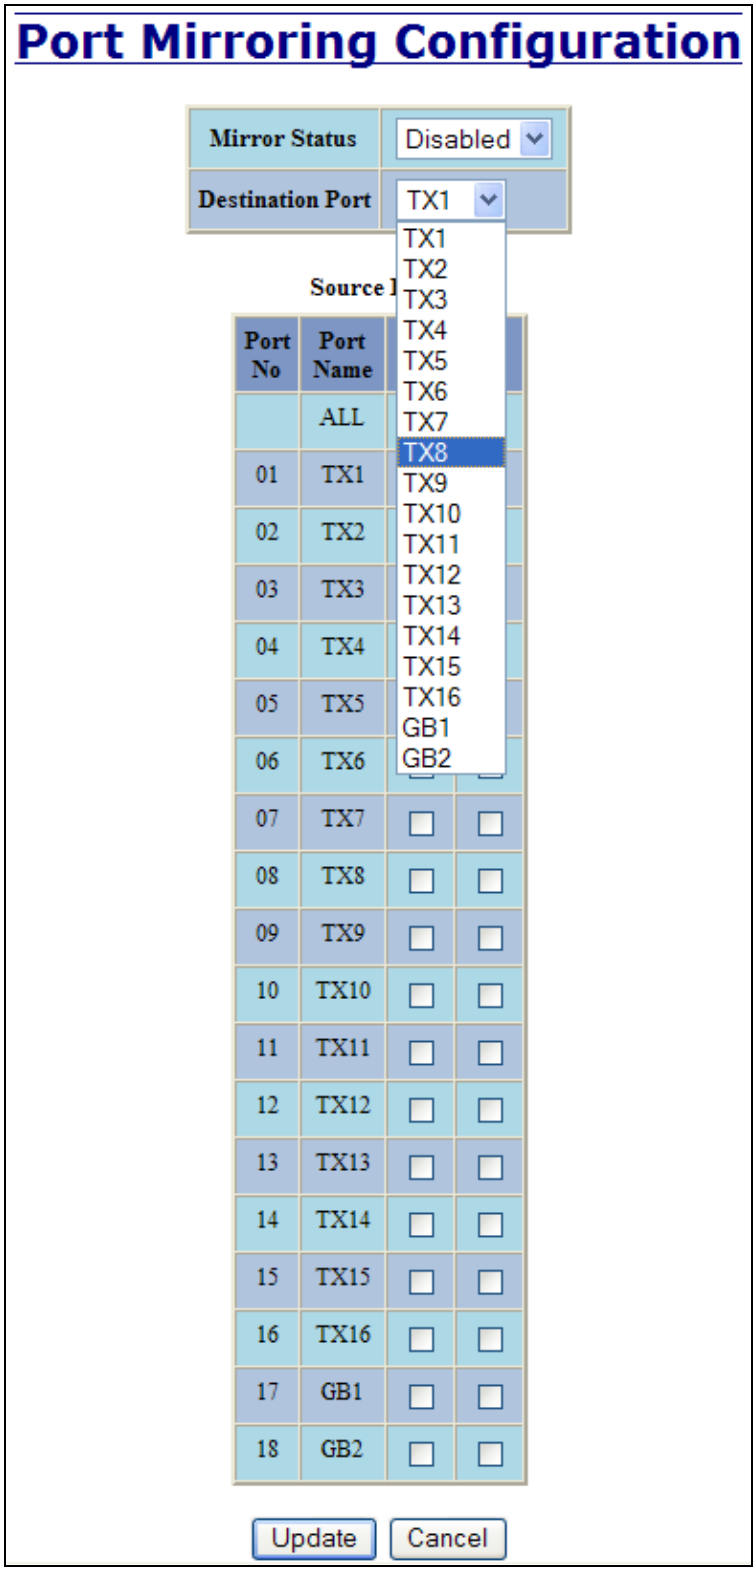

Ports – Trunking

The Trunking tab under the Ports category displays the following details:

Trunk Ports

This field displays the ports associated with the trunk.

Trunk Status

This configurable field displays the existing status of the trunk. It can be either Enabled/Disabled.

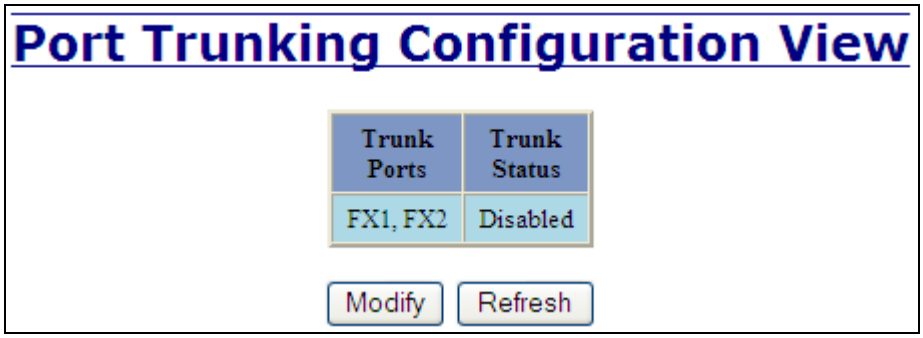

By selecting the Modify button, you can select a trunk group.

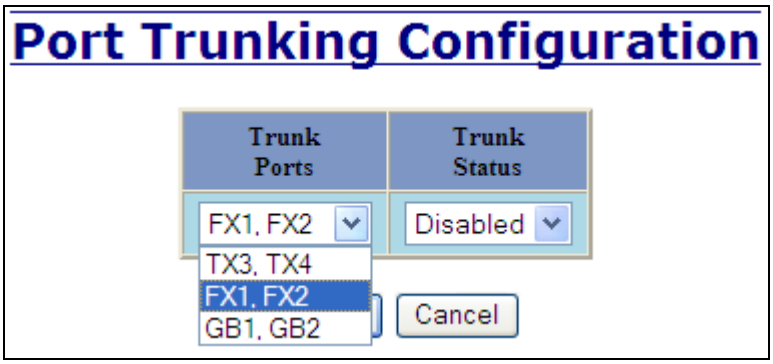

Note: *RSTP must be disabled in order to use the Trunking feature.*
Two ports of the same speed can constitute a valid trunk.
Only 1 Trunk per switch can be created.

All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Do not use Trunking on an N-Ring manager. Do not connect the N-Ring to actively Trunking ports on an Auto Member.

Statistics – Port Statistics

The Ports Statistics tab under the Statistics category displays a list of MIB parameters. Each port has a separate counter for each parameter. This gives users the ability to see what kind of packets are going over which ports. At the bottom of the page for each port there are two buttons. Refresh will update the statistics for that port number and Clear will reset all the counters for that port number.

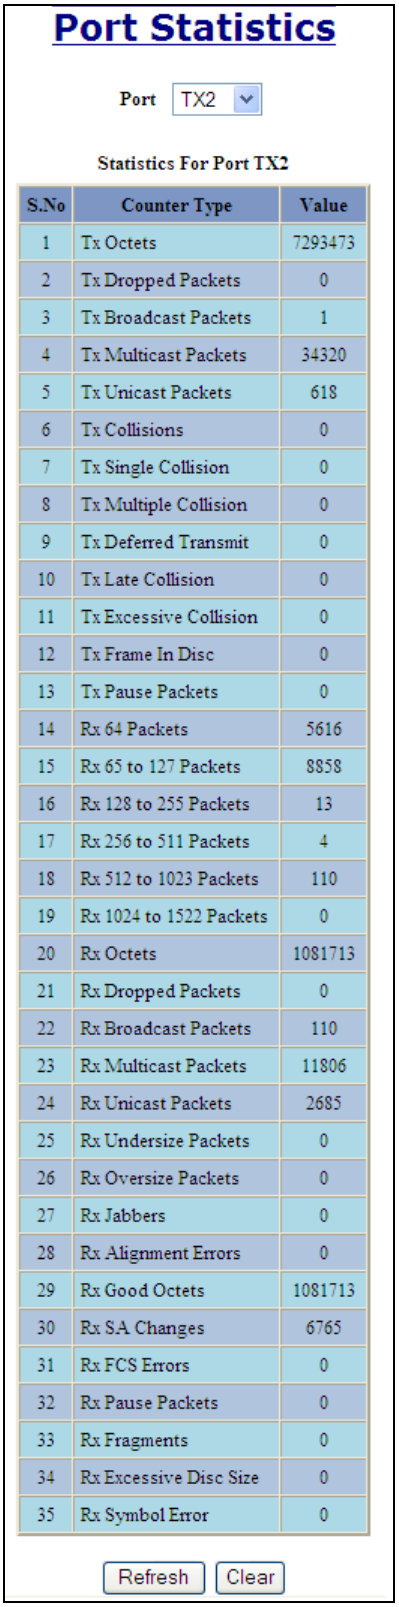

Port Statistics

Port TX2

Statistics For Port TX2

S.No	Counter Type	Value
1	Tx Octets	7293473
2	Tx Dropped Packets	0
3	Tx Broadcast Packets	1
4	Tx Multicast Packets	34320
5	Tx Unicast Packets	618
6	Tx Collisions	0
7	Tx Single Collision	0
8	Tx Multiple Collision	0
9	Tx Deferred Transmit	0
10	Tx Late Collision	0
11	Tx Excessive Collision	0
12	Tx Frame In Disc	0
13	Tx Pause Packets	0
14	Rx 64 Packets	5616
15	Rx 65 to 127 Packets	8858
16	Rx 128 to 255 Packets	13
17	Rx 256 to 511 Packets	4
18	Rx 512 to 1023 Packets	110
19	Rx 1024 to 1522 Packets	0
20	Rx Octets	1081713
21	Rx Dropped Packets	0
22	Rx Broadcast Packets	110
23	Rx Multicast Packets	11806
24	Rx Unicast Packets	2685
25	Rx Undersize Packets	0
26	Rx Oversize Packets	0
27	Rx Jabbers	0
28	Rx Alignment Errors	0
29	Rx Good Octets	1081713
30	Rx SA Changes	6765
31	Rx FCS Errors	0
32	Rx Pause Packets	0
33	Rx Fragments	0
34	Rx Excessive Disc Size	0
35	Rx Symbol Error	0

Refresh Clear

Statistics – Port Utilization

The Ports Utilization tab under the Statistics category shows all the ports on the switch and will display a bar graph showing the percentage of bandwidth being used. These figures and bars are for a general feeling of what the bandwidth usage is. N-Tron recommends the use of N-View in order to get a precise bandwidth usage figure.

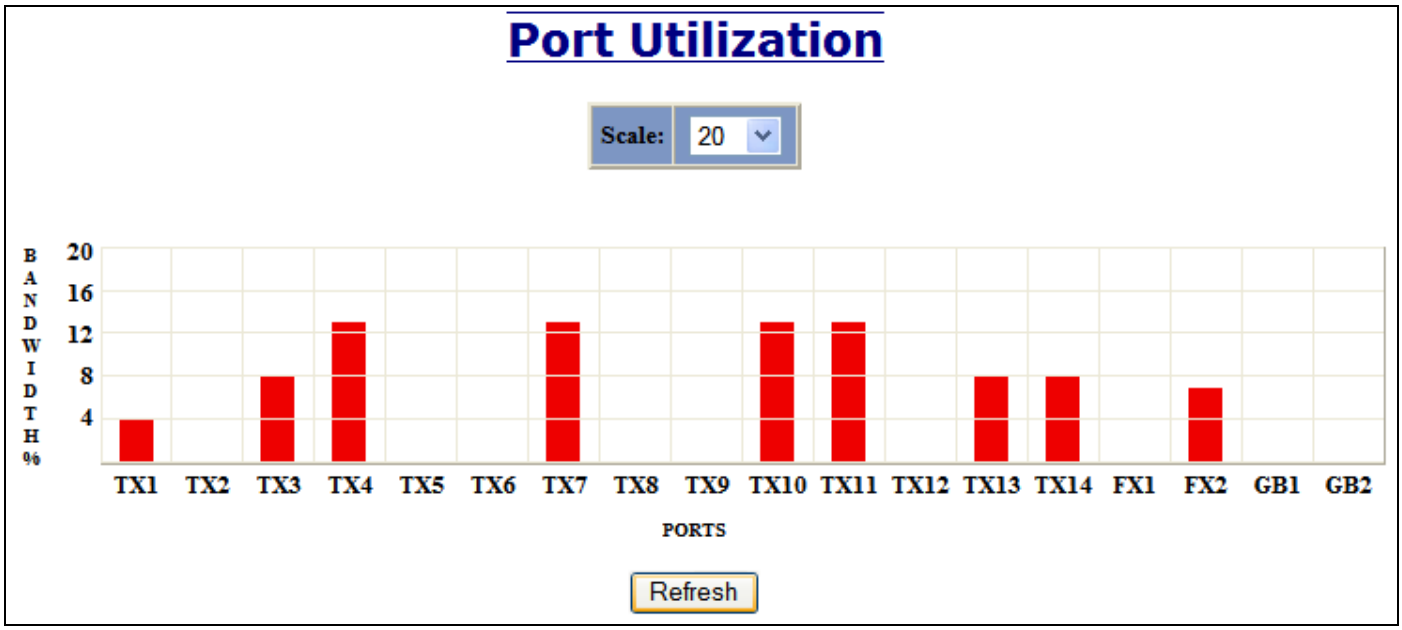

VLAN – Configuration

Replace VID Tag with Default Port VID
Specifies whether or not to replace the incoming VID tag with the port's designated VID.
Perform Ingress Filtering
Specifies whether or not to filter out ingress frames when a VID violation is detected.
Discard Non-Tagged for Ports
Specifies whether or not non-tagged ingress frames are dropped by the selected ports.

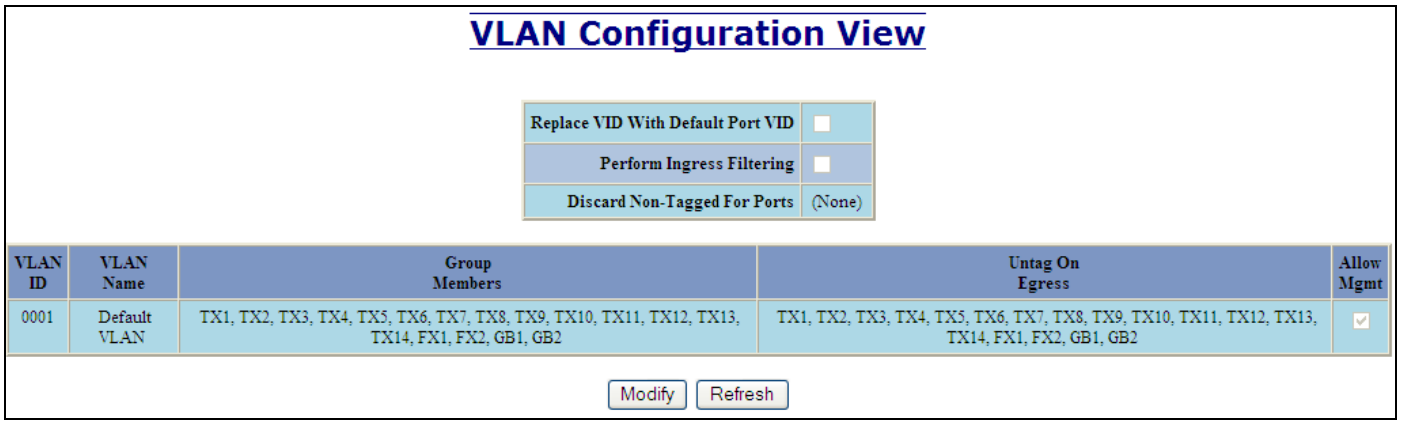
VLAN Configuration View
Replace VID With Default Port VID
Perform Ingress Filtering
Discard Non-Tagged For Ports
(None)
VLAN ID
VLAN Name
Group Members
Untag On Egress
Allow Mgmt
0001
Default VLAN
TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2
TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2
Modify
Refresh

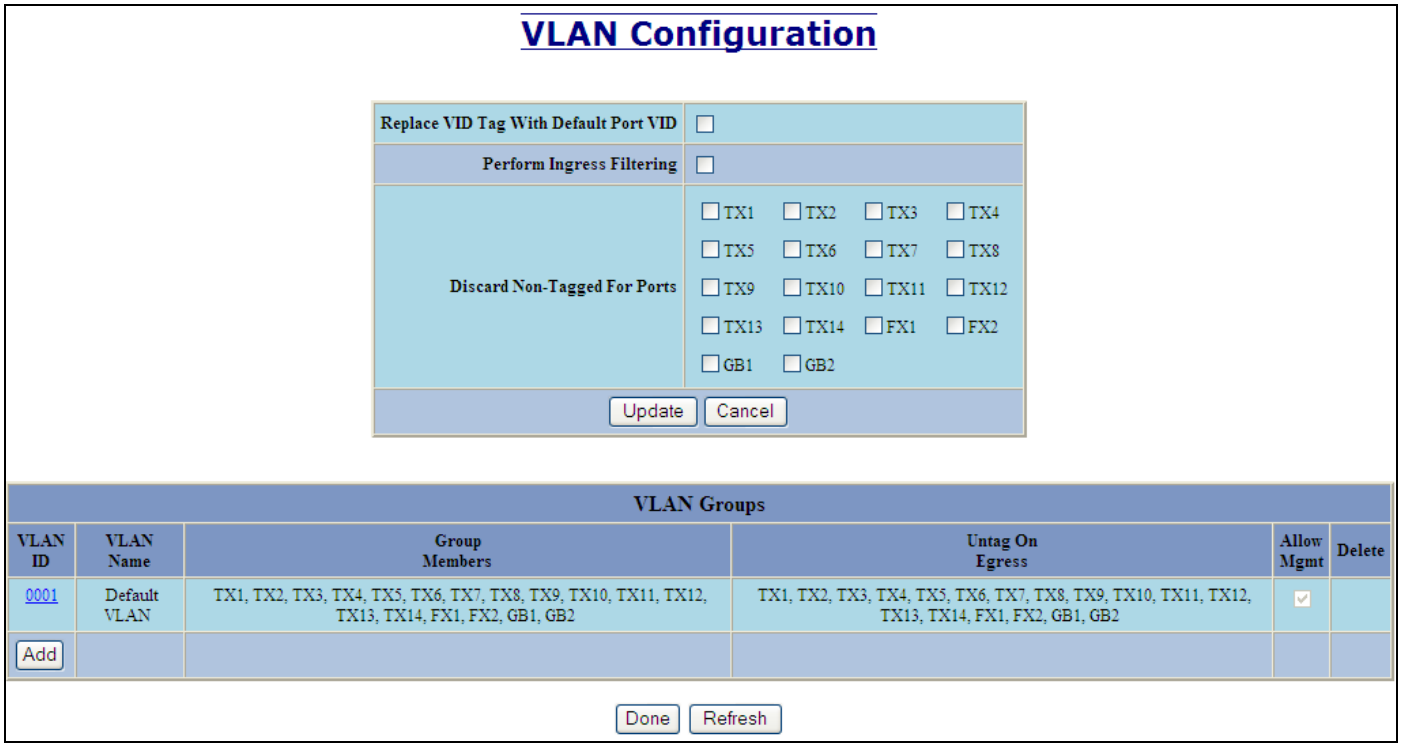

Note that for convenience in most frequent use:

- Ports are deleted from group1 as each port is added to another group.
- Ports are added to group1 if a deletion leaves a port with no group.
- If it is desired to have a port on group1 and also on other group(s) configure group1 last to achieve that.

VLAN – Group Configuration

VLAN ID

This field displays the VLAN ID. The range should be **1-4094.**

VLAN Name

This configurable field displays the name of the VLAN, which accepts alphanumeric and special characters (#, _, -, .) only.

Allow Management

Specifies whether or not all ports in this VLAN are management ports.

Change PVID of Member Ports

Specifies whether or not the PVID of the member ports is set to this VLAN ID.

Port No

This is the port index.

Port Name

Descriptive name of the port

Group Member

Specifies whether or not the port is included in the group.

Untag on Egress

Specifies whether or not egress frames are tagged by the designated port.

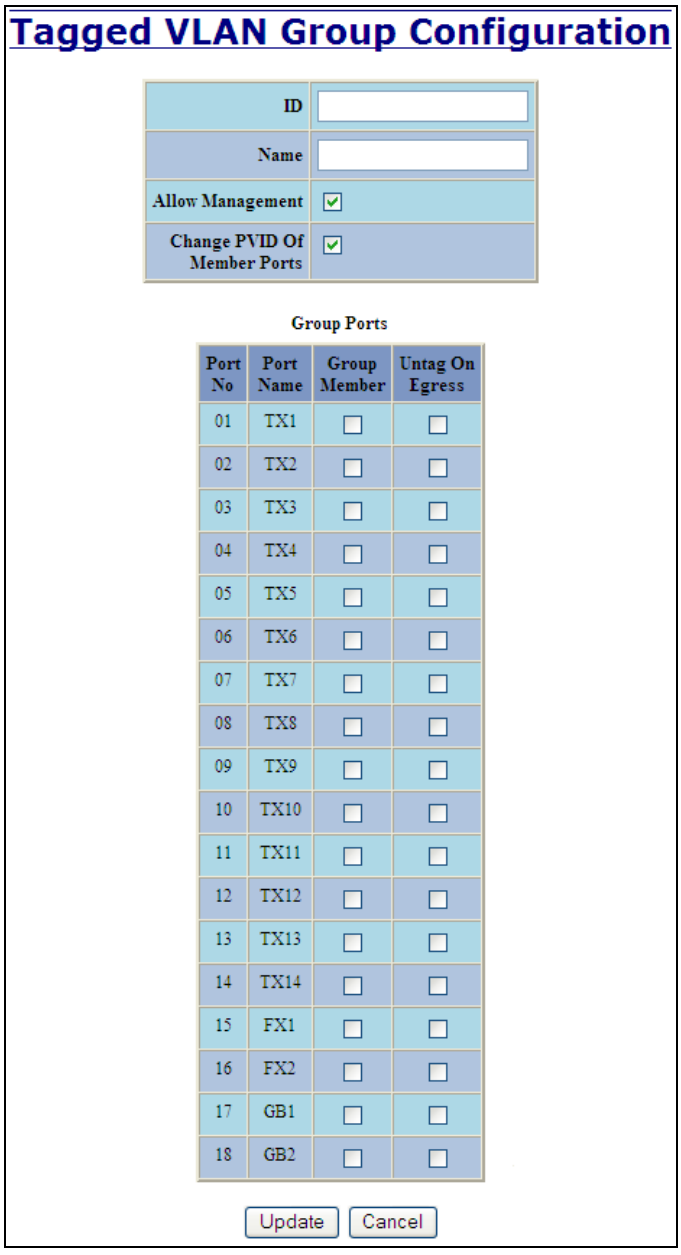

Bridging – Aging Time

The Aging Time tab under the Bridging category will display the currently configured Aging Time. This page allows users to modify this variable to meet their needs.

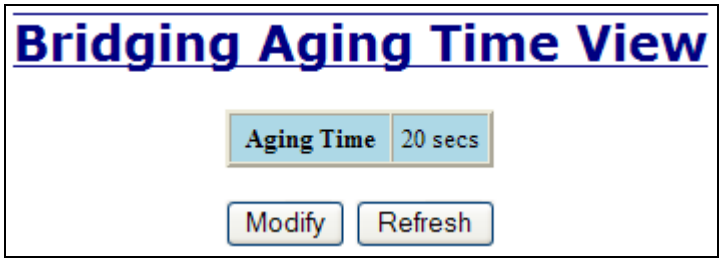

After selecting the Modify button, the user will be presented with a page that allows the number to be entered and updated. The default aging time is 20 seconds.

Note: *If the switch is an active participant of an N-Ring, then the N-Ring Aging Time will be used instead of the Bridging Aging Time.*

Bridging – Unicast Addresses

The Unicast Addresses tab under the Bridging category will display a list of MAC addresses that are associated with each respective port number. This can be used to statically assign a MAC address access to a single port on the switch.

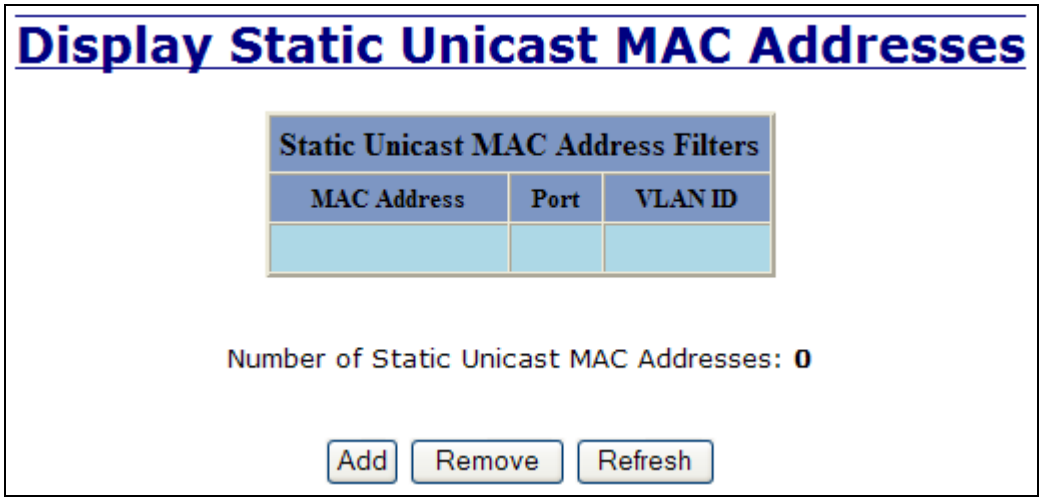

Following the Add button on the page above, the administrator must enter a valid MAC address and associate it with a port number on the switch. Once the administrator hits the Add button, the changes will take effect instantly.

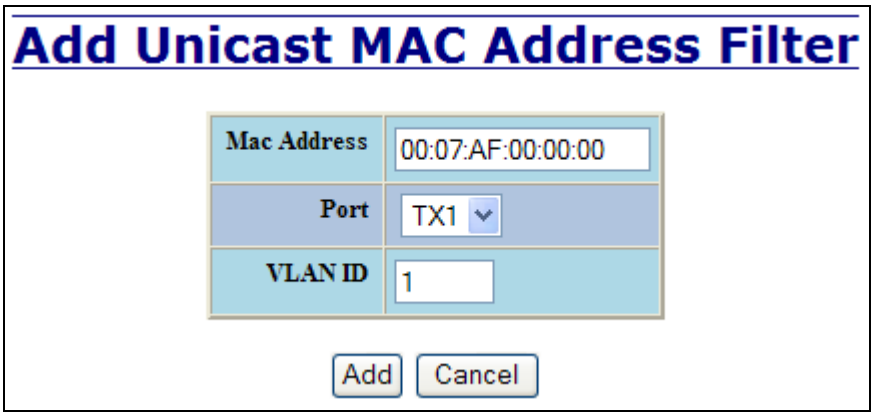

Bridging – Unicast Addresses, Continued…

Once a static MAC address has been added, it will be displayed in a list on the main page under Unicast MACs tab.

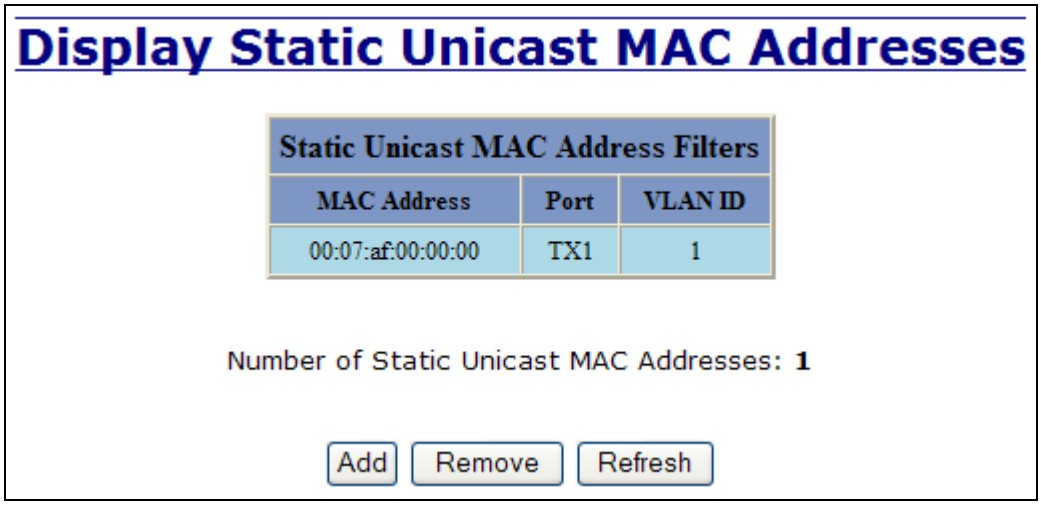

Following the Remove button on the example above, an administrator can select a static MAC address from the list using a pull-down menu. After selecting the MAC address, the administrator needs to press the Remove button on the page to remove the entry

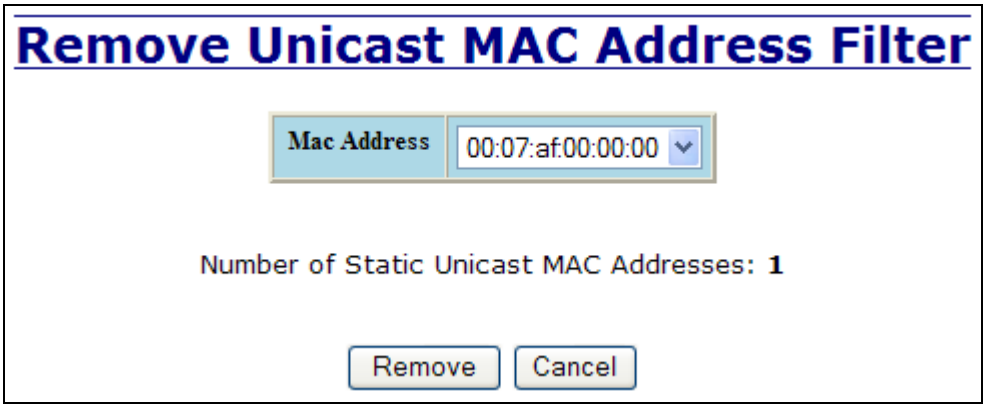

Bridging – Multicast Addresses

The Multicast Addresses tab under the Bridging category will display a list of Multicast Group Addresses that are associated with respective port numbers. This may be used to statically assign a Multicast Group Address access to a group of ports on the switch.

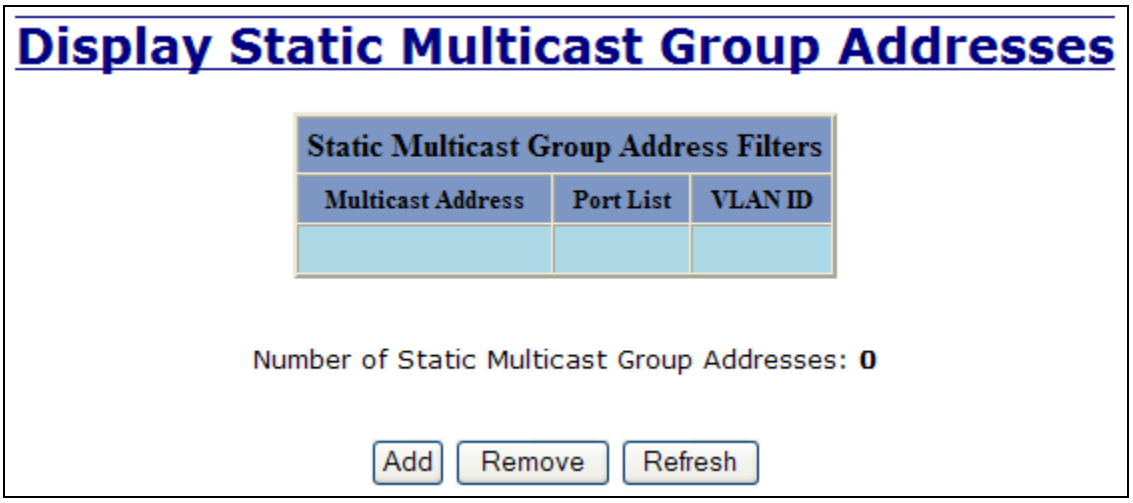

Following the Add button on the page above, the administrator must enter a valid Multicast Group Address and associate it with a port number or list on the switch. Once the administrator clicks on the Add button, the changes will take effect instantly.

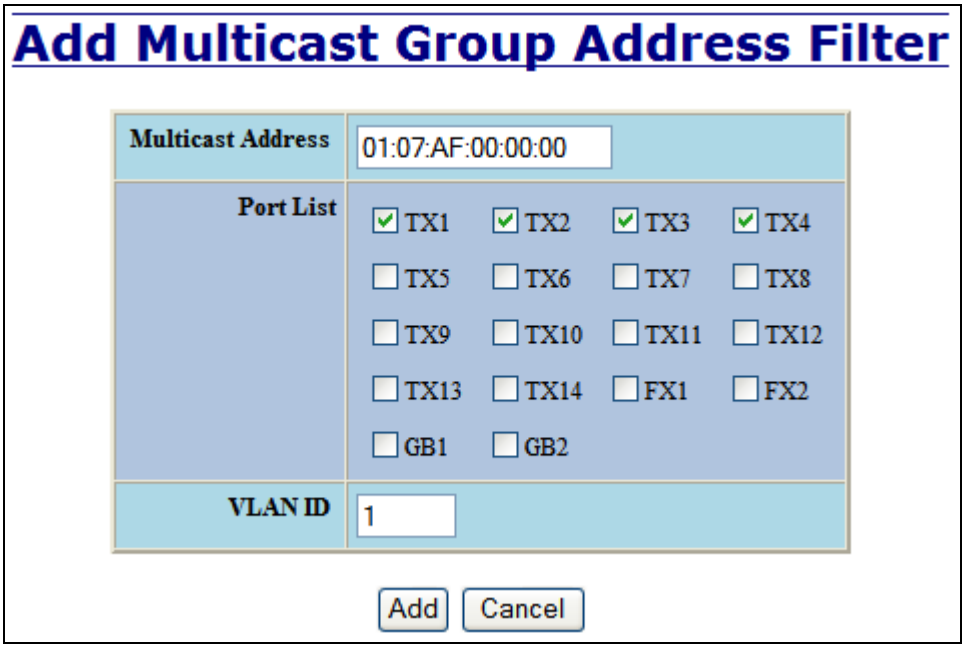

Note: *If there are multiple ports on different VLANs, the 7018 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.*

Bridging – Multicast Addresses Continued…

After adding a Multicast Group Address, it will appear on the main list and will show the associated ports that go along with that address.

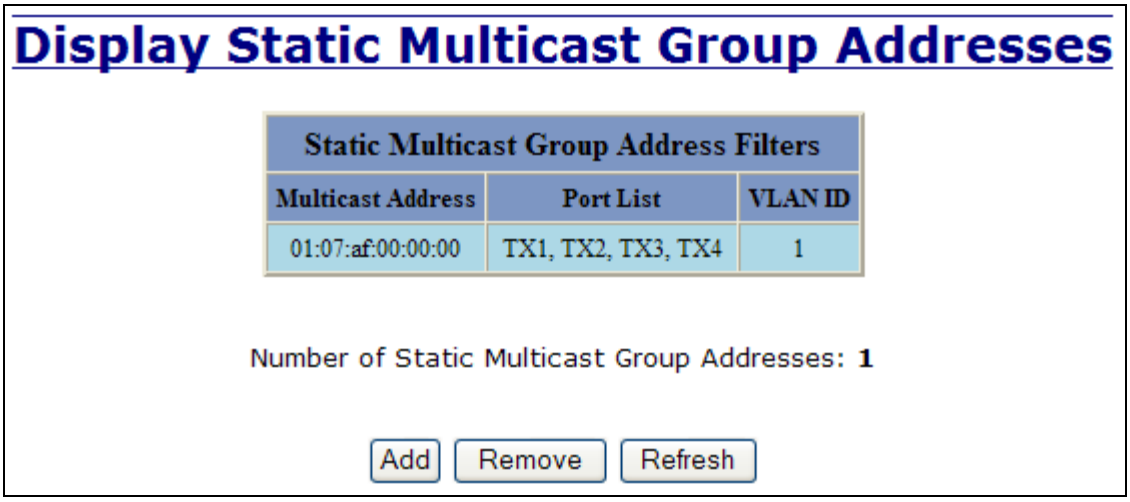

Following the Remove button on the example above, the administrator will be presented with a list of Multicast Group Addresses that are configured on the switch. Using the pull-down menu, the administrator should select the desired address to be removed. Then click on the Remove button at the bottom of the page.

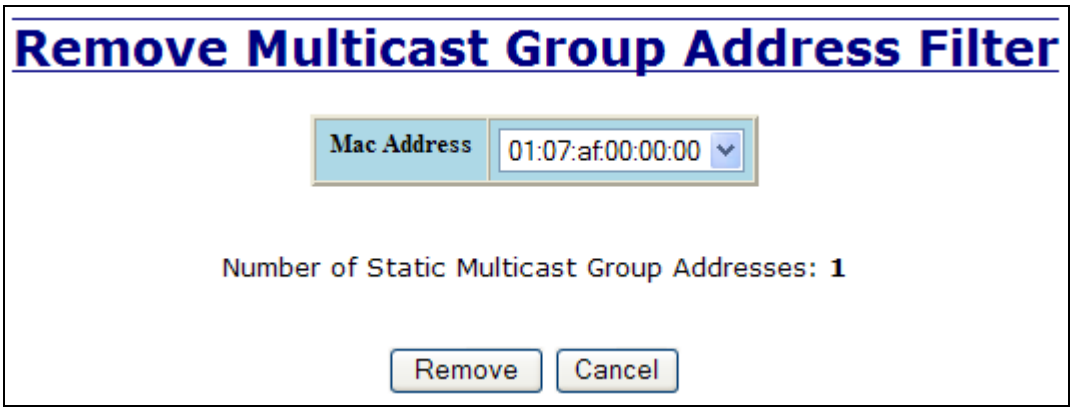

Note: *If there are multiple ports on different VLANs, the 7018 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.*

Bridging – Show MAC by Port

This feature shows the MAC addresses of devices connected to each switch port and the IP Addresses associated with the MACs. The browser page 'View MAC by Port' shows the MAC for the device found on each port, and the IP for the MAC presented if available. If more than one device is on that port, then the lowest alphanumeric of those MAC addresses is shown and underlined.

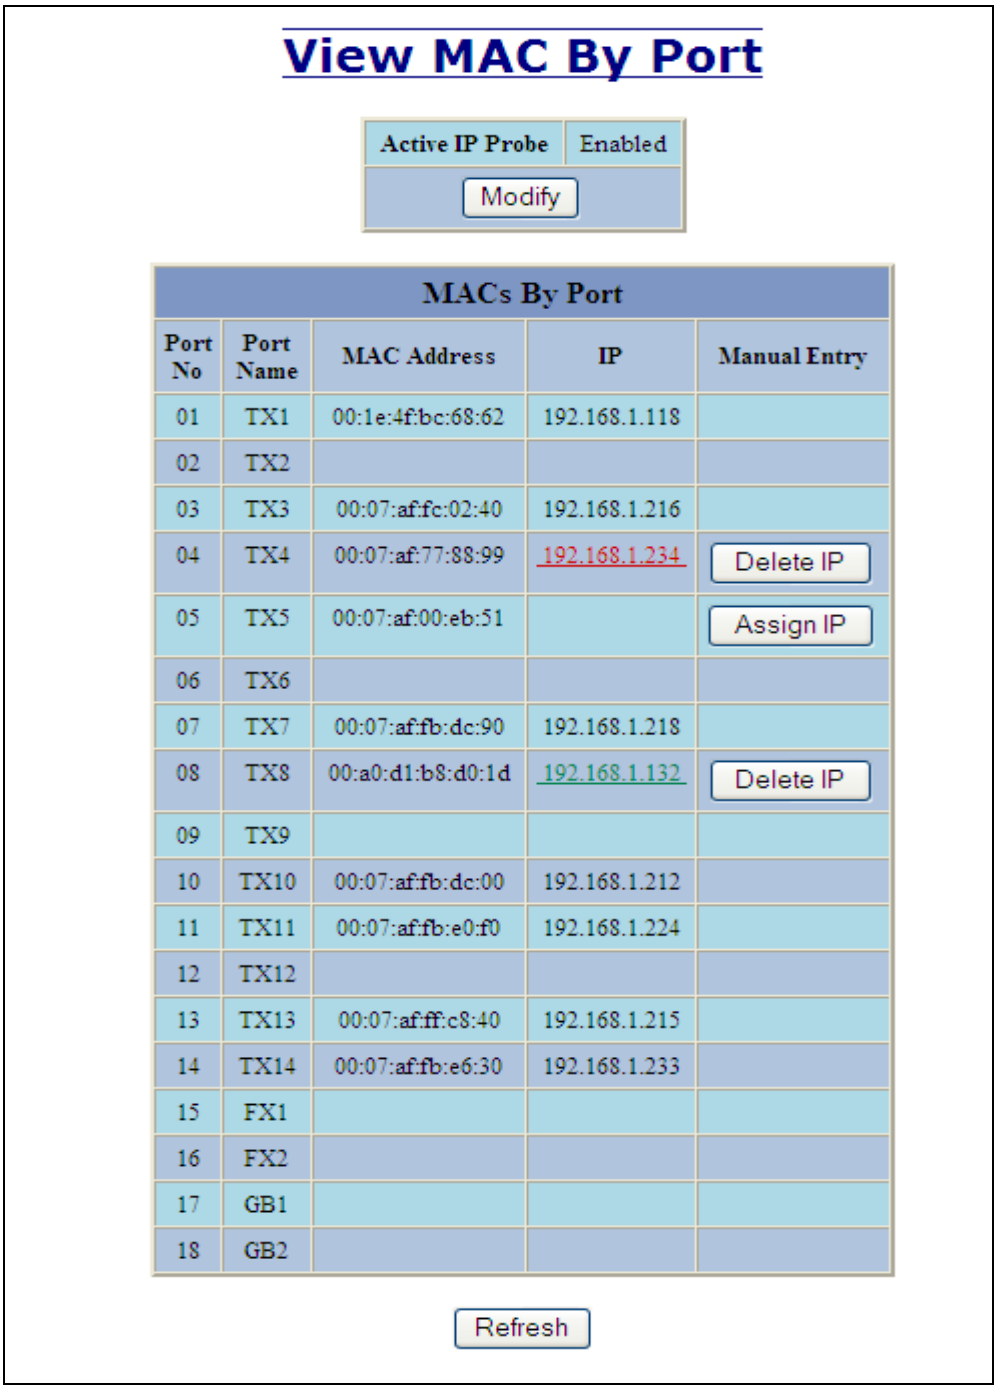

The 'Active IP Probe' field is configurable using the 'Modify' button, and also displays the existing Enabled or Disabled status of this feature. The default is disabled. When disabled the switch generates no ethernet traffic for this purpose, but can still present some information gathered passively.

The ‘IP’ field shows an Auto-detected or manually entered IP address. If there is a MAC address for the port and an IP address was not discovered there is an ‘Assign IP’ button to allow the user to enter an IP address. If ‘Active IP Probe’ is enabled, manually entered IP values are underlined and validated. A validated IP for that MAC is presented in green and if validation fails the IP will be red and underlined. Note that some devices do not have an IP Address, and that some devices that do have an IP Address may not respond to the methods used to detect their IP Address.

Invoking the ‘Assign IP’ button on the example above, the administrator will be presented with a form in which to enter a manually assigned IP, as below:

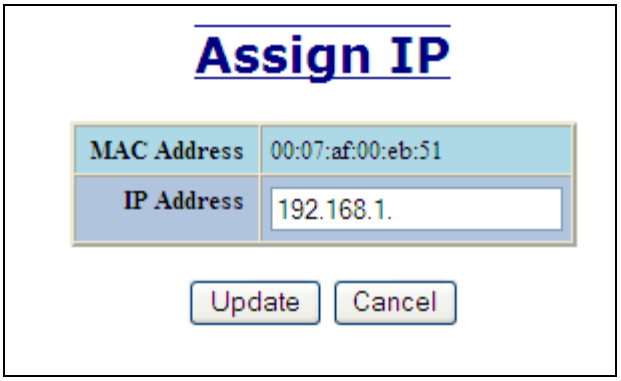

When an IP has been manually entered a button is provided to ‘Delete IP’, and invoking it will allow the administrator to delete the manual association of an IP to that MAC.

RSTP – Configuration

The Configuration tab under the RSTP category will display the RSTP information for the first VLAN. Using the pull-down menu at the top of the page an administrator can choose which VLAN to configure RSTP on. Once the VLAN is selected, the administrator may configure the bridge by clicking on the 'Configuration' link in the middle of the page.

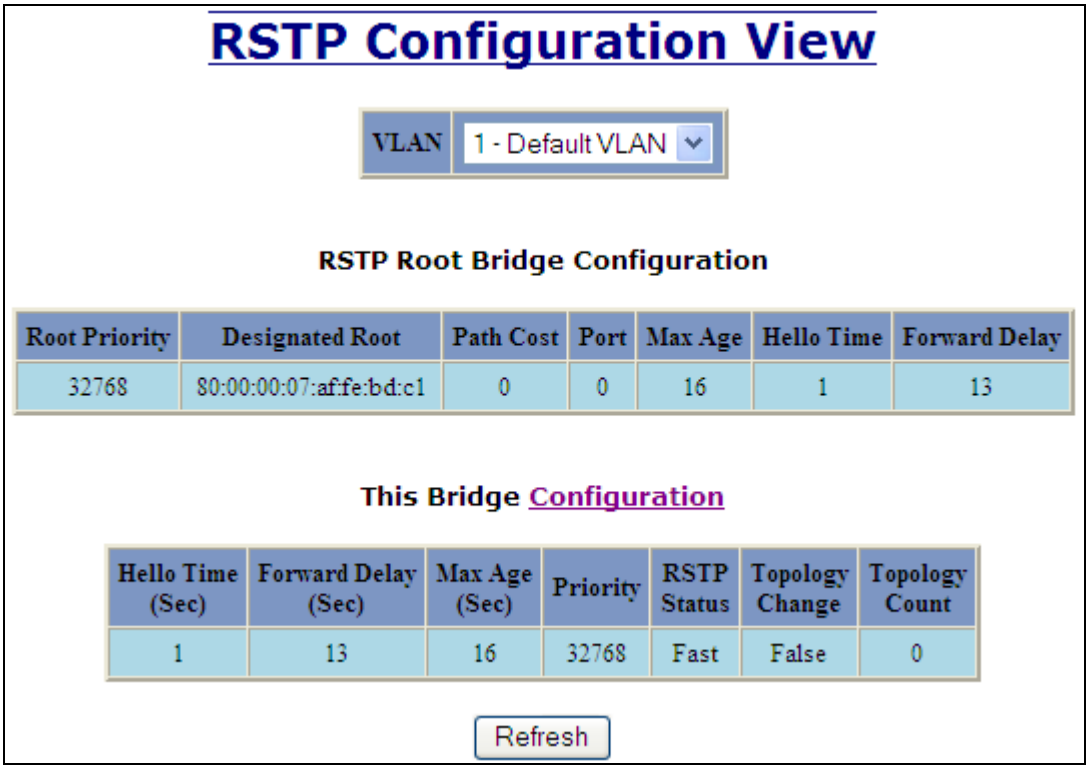

RSTP – Configuration Continued…

The configuration screen for the VLAN that was previously selected will look like the example below. Here the administrator can make changes such as the Hello Time, Forward Delay, Max Age, Priority, and the Status of RSTP on that VLAN. The administrator or user can see the current RSTP status of the ports on that VLAN by clicking on the 'here' link to view RSTP Port Configuration at VLAN#.

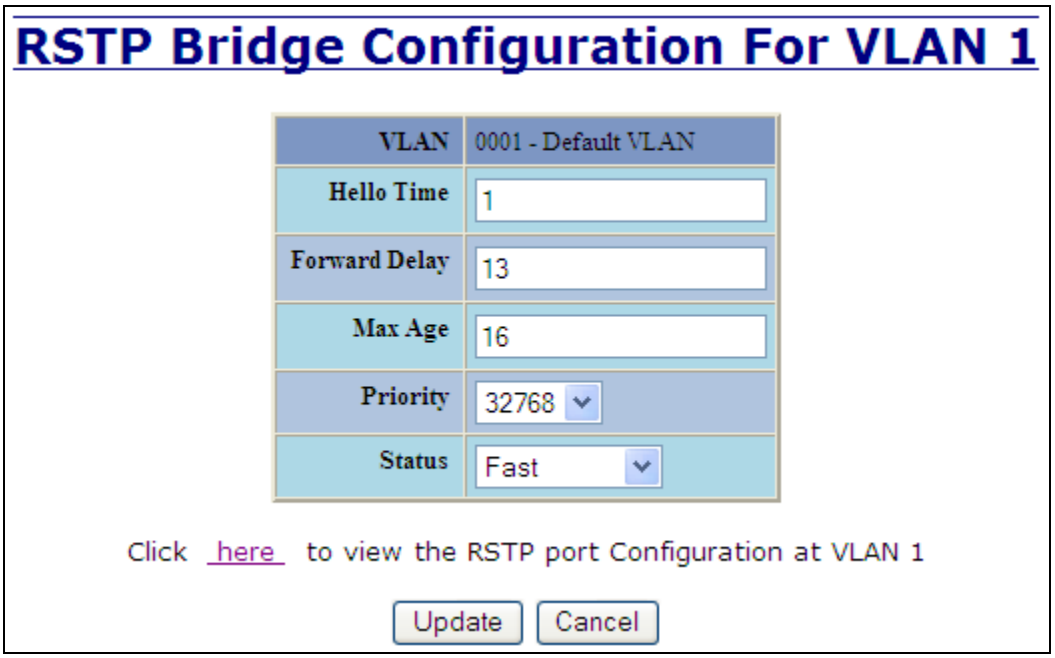

Note: *It is recommended that RSTP rings consist of RSTP capable switches.*
Trunking must be disabled in order to use RSTP.
Do not create redundant links unless either RSTP or N-Ring is enabled.
RSTP on overlapping VLANs is not supported and the system will automatically disable RSTP on the VLAN that has overlapping ports.

RSTP – Configuration Continued…

Following the link for the view RSTP Port Configuration at VLAN#, the administrator or user can see the current RSTP status of the ports on that VLAN. This will show information such as the Path Cost and the Port State. If the switch sees a redundant path it will put the port with the highest Path Cost into Blocking mode where it will discard packets coming in on that port. In the example below, TX3 is a redundant port with port TX2, therefore TX2 is forwarding and TX3 is discarding.

RSTP Configuration View For VLAN 1

Bridge Port Configuration

Port No	Port Name	Port State	Path Cost	Priority	STP BPDU	Auto Edge	Admin Edge	Designated Bridge	Designated Port
01	TX1	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:fe:bd:c1	00:01
02	TX2	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:fe:bd:c1	00:02
03	TX3	Discarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:fe:bd:c1	00:02
04	TX4	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:04
05	TX5	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:05
06	TX6	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:06
07	TX7	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:07
08	TX8	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:08
09	TX9	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:09
10	TX10	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0a
11	TX11	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0b
12	TX12	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0c
13	TX13	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0d
14	TX14	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0e
15	FX1	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0f
16	FX2	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:10
17	GB1	Disabled	20000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:11
18	GB2	Disabled	20000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:12

<< Back | Refresh

RSTP – Configuration Continued…

If the administrator selects one of the ports on the previous screen, he or she can change the Port's Path Cost, Priority, and the status of Admin Edge and Auto Edge.

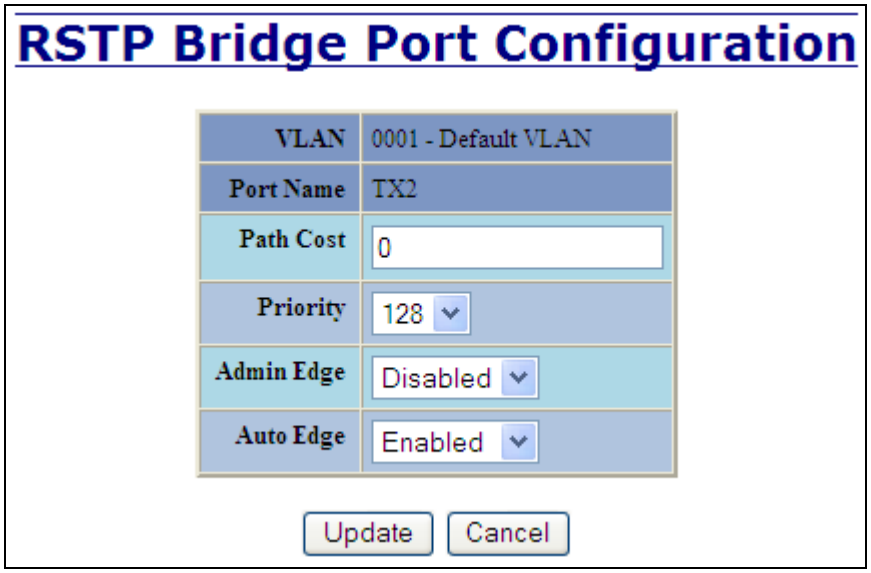

IGMP – Configuration

The Configuration tab under the IGMP category will display the IGMP basic configuration settings. By default, IGMP is enabled.

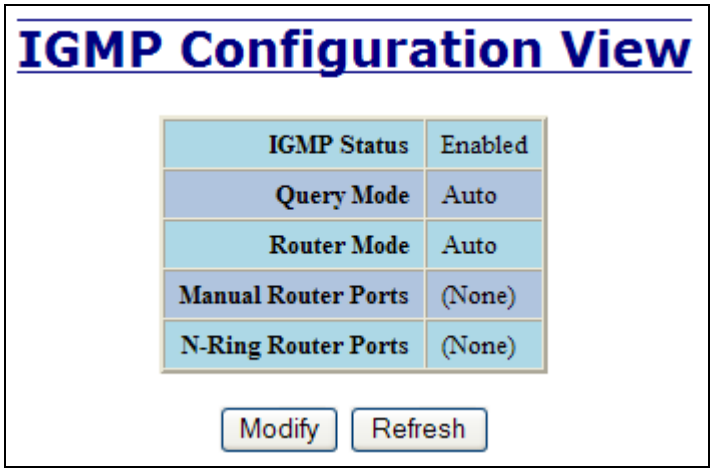

Following the Modify button, the administrator will see a list of configurable fields for the IGMP configuration. Once these fields are filled in to meet the needs of the administrator's network, the changes may be updated by clicking the Update button at the bottom of the page.

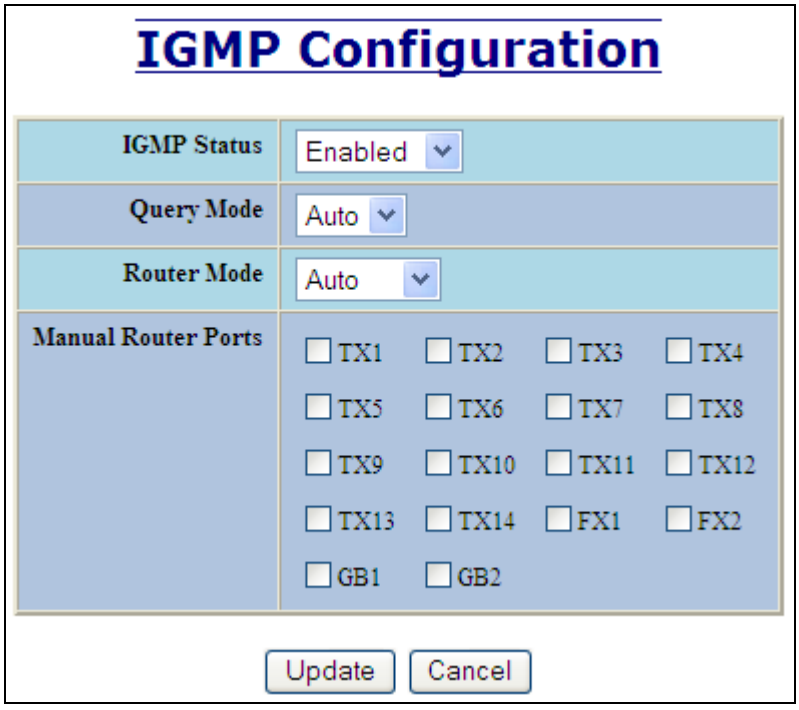

IGMP – Configuration, Continued…

The IGMP Status pull-down allows the user to enable or disable IGMP completely.

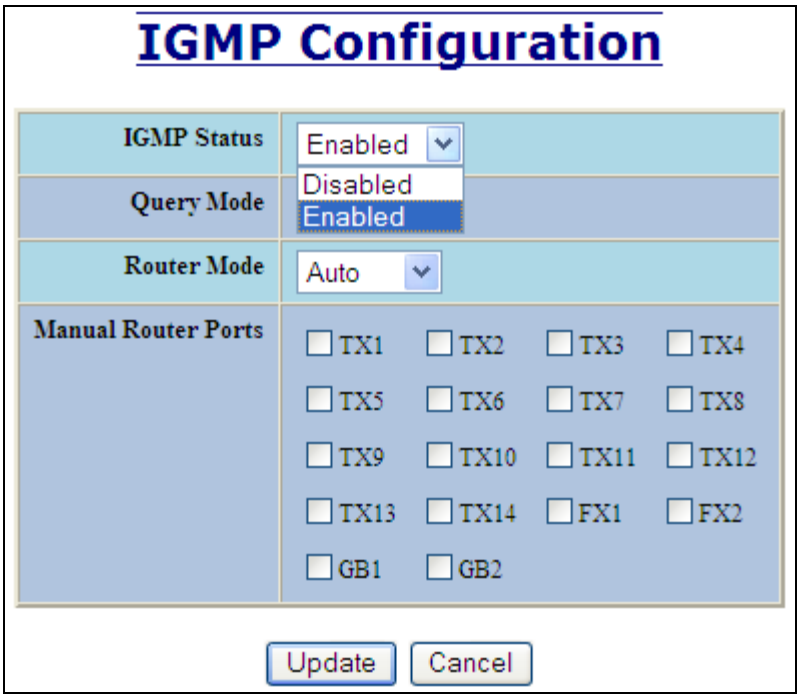

The Query Mode pull-down allows the user to set query mode for Automatic (the default), On (always), or Off (never):

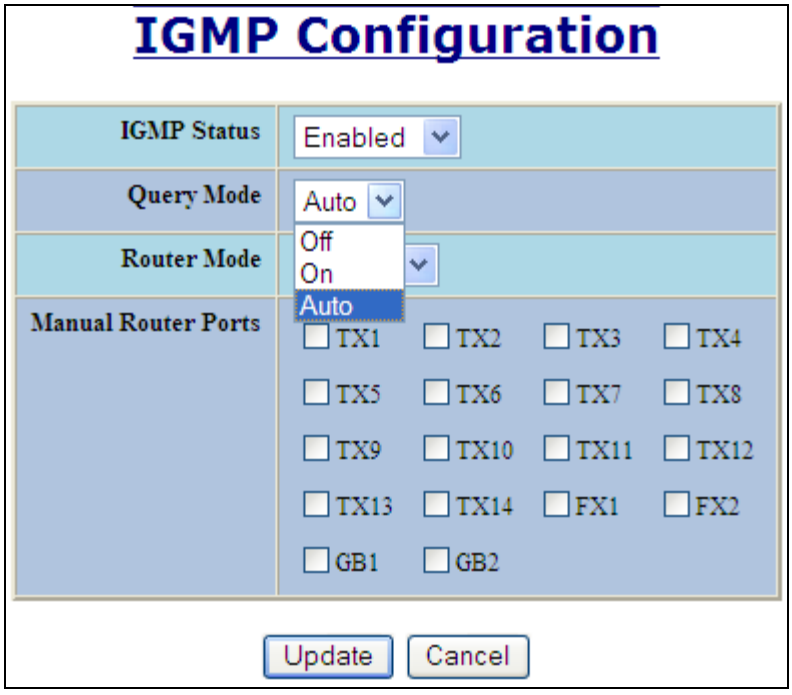

IGMP – Configuration, Continued…

The Router Mode pull-down allows the user to choose router mode. 'Auto' allows for dynamically detected and manually set router ports. 'Manual' allows only for manually set router ports. 'None' allows no router ports.

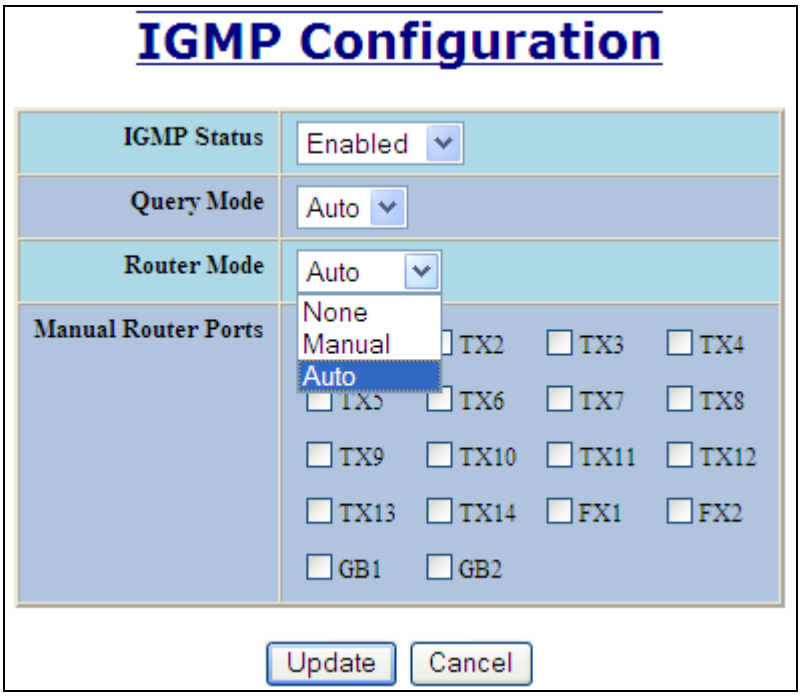

The user can specify the manual router ports:

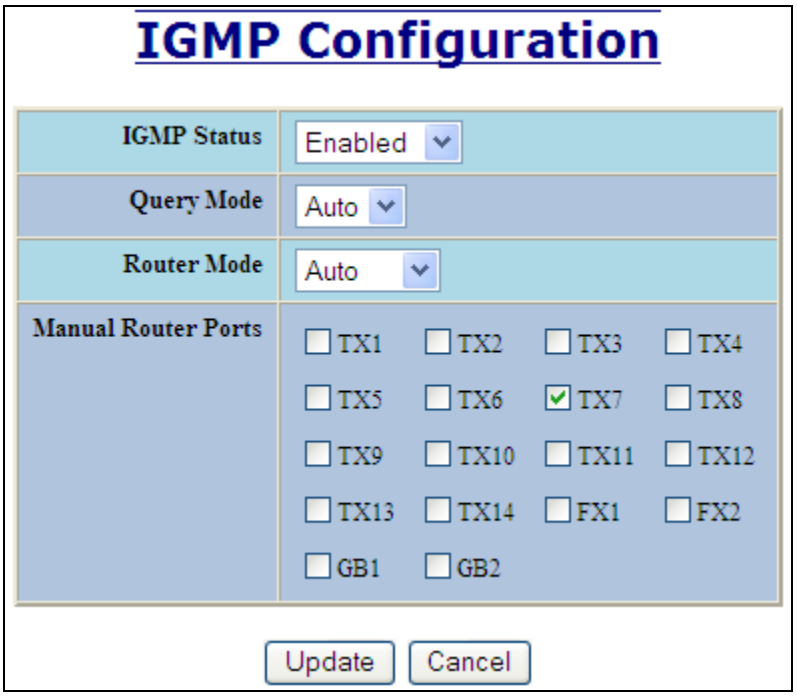

IGMP – Show Group and Show Router

The Show Groups tab under the IGMP category will display a list of IGMP groups based on the Group IP and the port number that it is associated with.

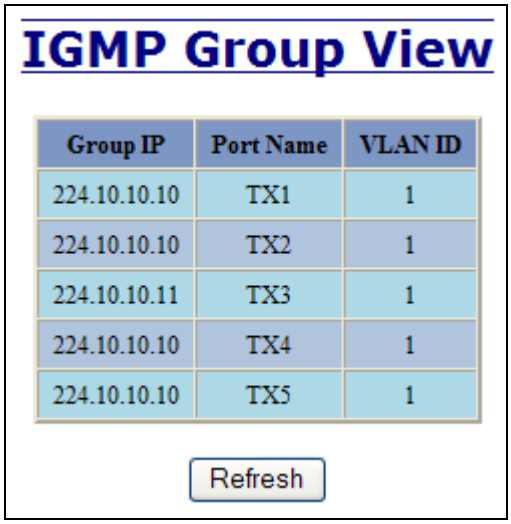

The Show Routers tab under the IGMP category will display a list of Auto-detected Router IPs and the port numbers that they are associated with.

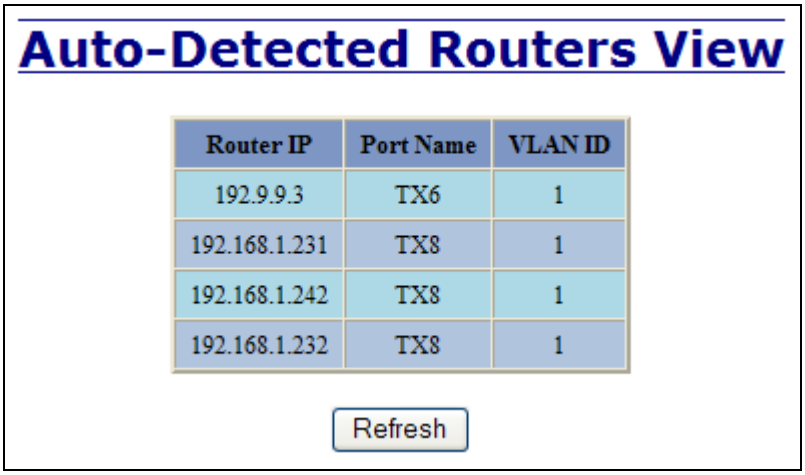

IGMP – RFilter

The ‘rfilter’ (**Router Multicast Data Filter**) function allows you to choose whether or not DATA frames with KNOWN group multicast addresses are sent to the ‘router’ ports (links to other switches). Control packets (Join, Leave) will be sent to the router(s) regardless of this setting. “KNOWN” is known from dynamic IGMP Snooping operations.

The factory default is that the Router Multicast Data Filter is enabled for all ports, so any router ports do NOT get DATA frames with KNOWN multicast destination addresses unless a join to a specific multicast address has been received on that port. **Joins override an rfilter.**

If rfilter is disabled, router ports do get DATA frames with KNOWN multicast destination addresses

Rfilter can be set for individual ports: any, all, or none. For each port, rfilter will have an impact only if that port is manually or dynamically chosen as a router port.

Default configuration:

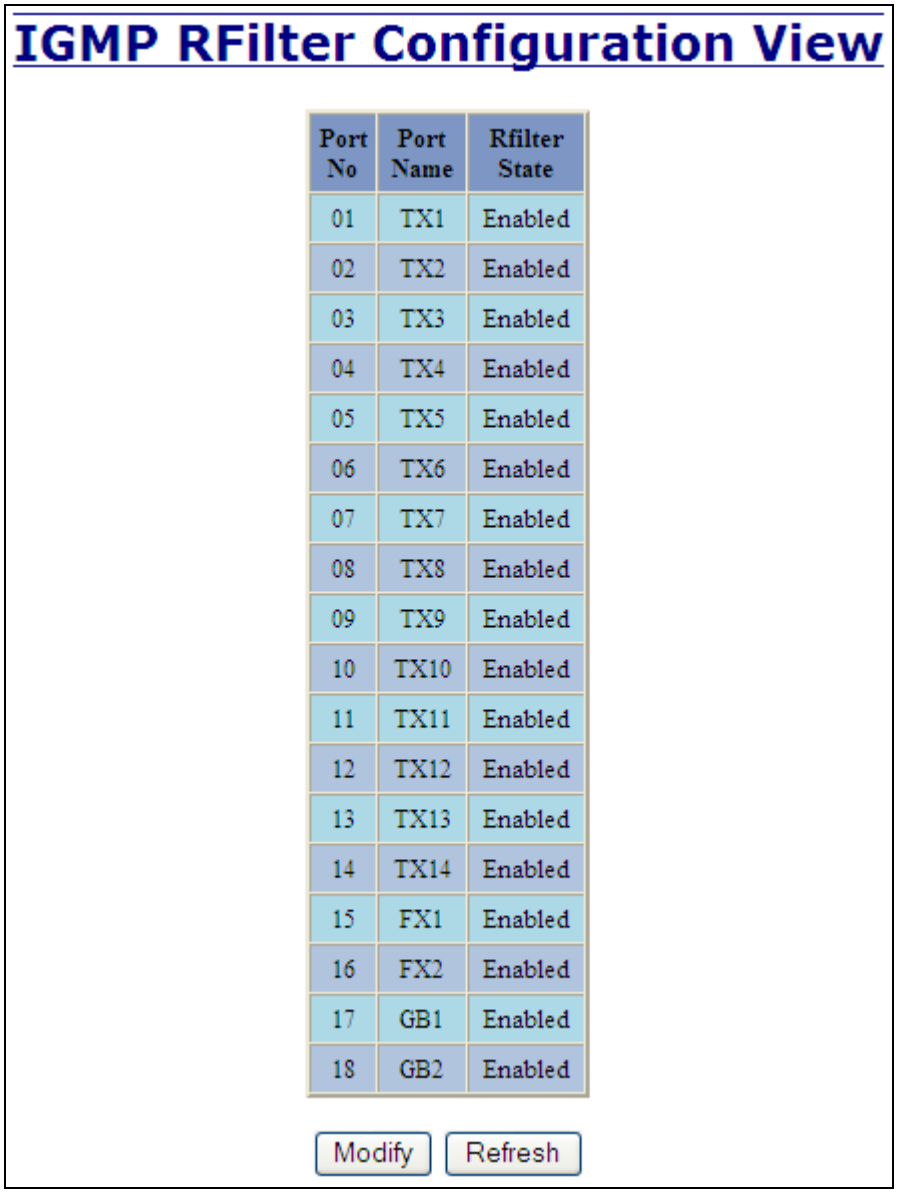

IGMP – RFilter, Continued…

Modifying rfilter port settings:

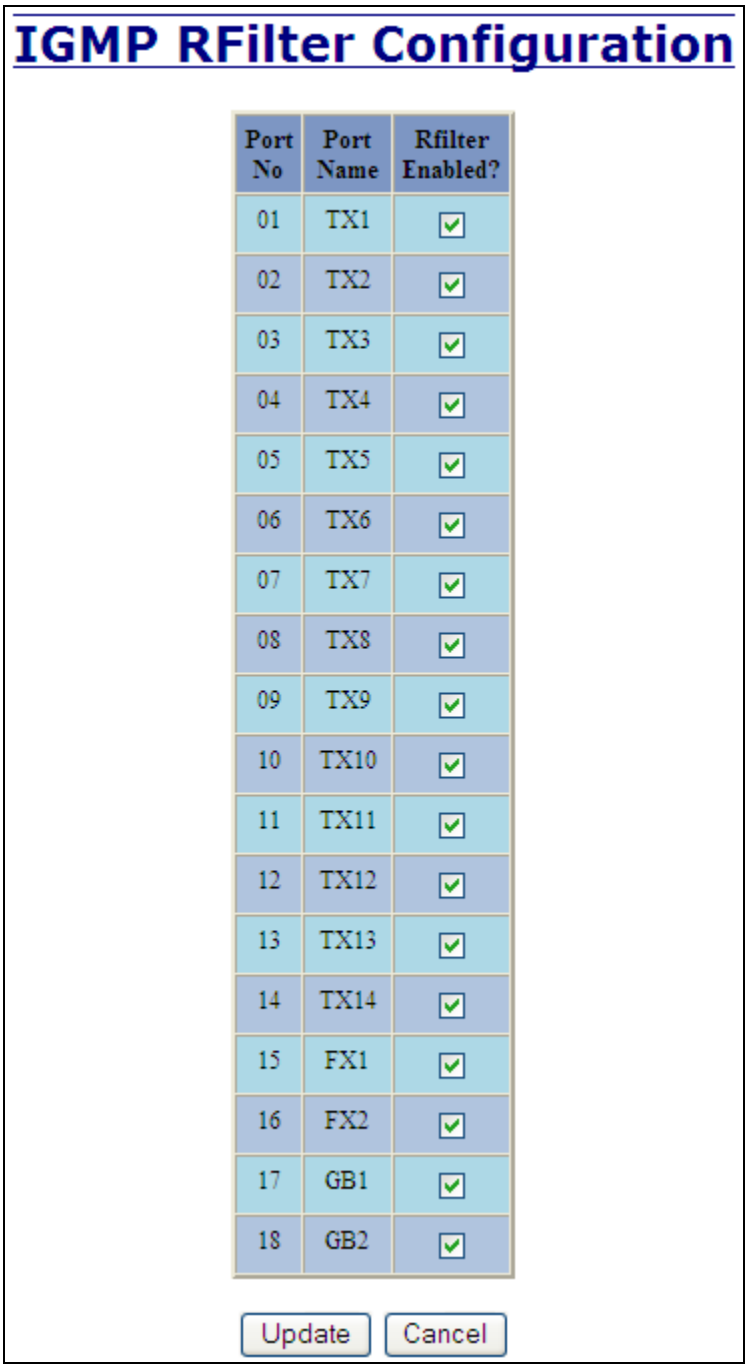

N-View – Configuration

The Configuration tab under the N-View category will display two basic variables for N-View, the status and the interval between packets.

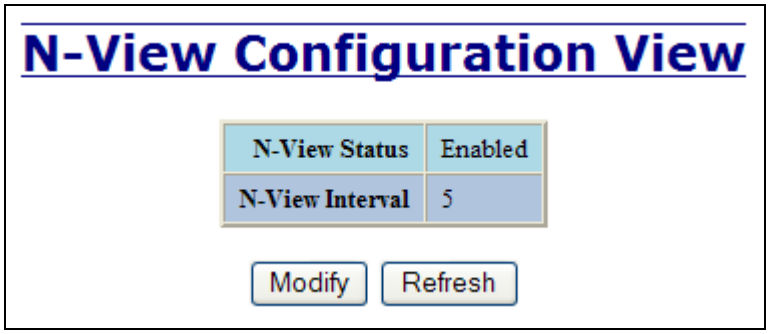

Following the Modify button on the above example, the administrator can modify the variable to change the frequency with which N-View reports information. Increasing the interval will slow the update rate. Decreasing the interval will allow N-View to report more frequently. Additionally, you may Disable or Enable N-View altogether.

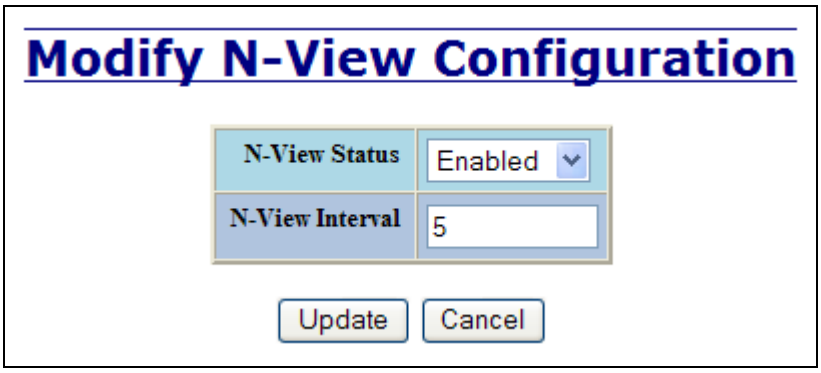

N-View – Ports

The Ports tab under the N-View category will display a list of all the configured ports on the 7018 unit along with the ports transmitting multicast packets and MIB stats respectively.

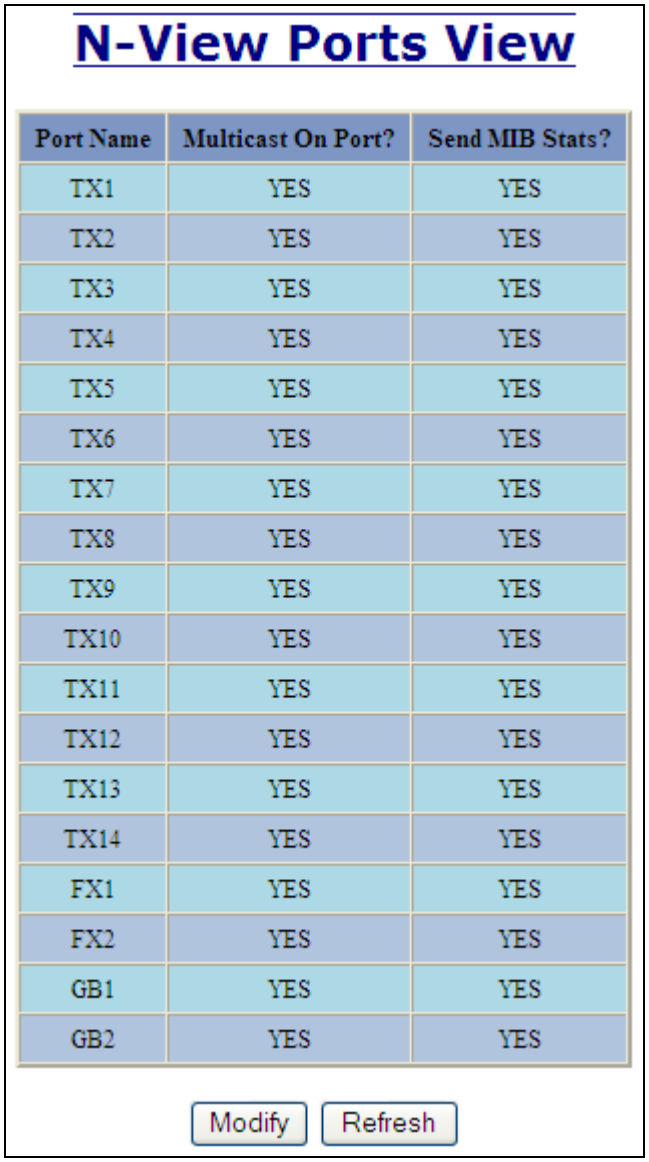

N-View Ports View

Port Name	Multicast On Port?	Send MIB Stats?
TX1	YES	YES
TX2	YES	YES
TX3	YES	YES
TX4	YES	YES
TX5	YES	YES
TX6	YES	YES
TX7	YES	YES
TX8	YES	YES
TX9	YES	YES
TX10	YES	YES
TX11	YES	YES
TX12	YES	YES
TX13	YES	YES
TX14	YES	YES
FX1	YES	YES
FX2	YES	YES
GB1	YES	YES
GB2	YES	YES

Modify Refresh

N-View – Ports, Continued…

Following the Modify button on the above example, the administrator can modify these two variables to enable or disable multicast out of the port and if MIB stats are sent out for those ports.

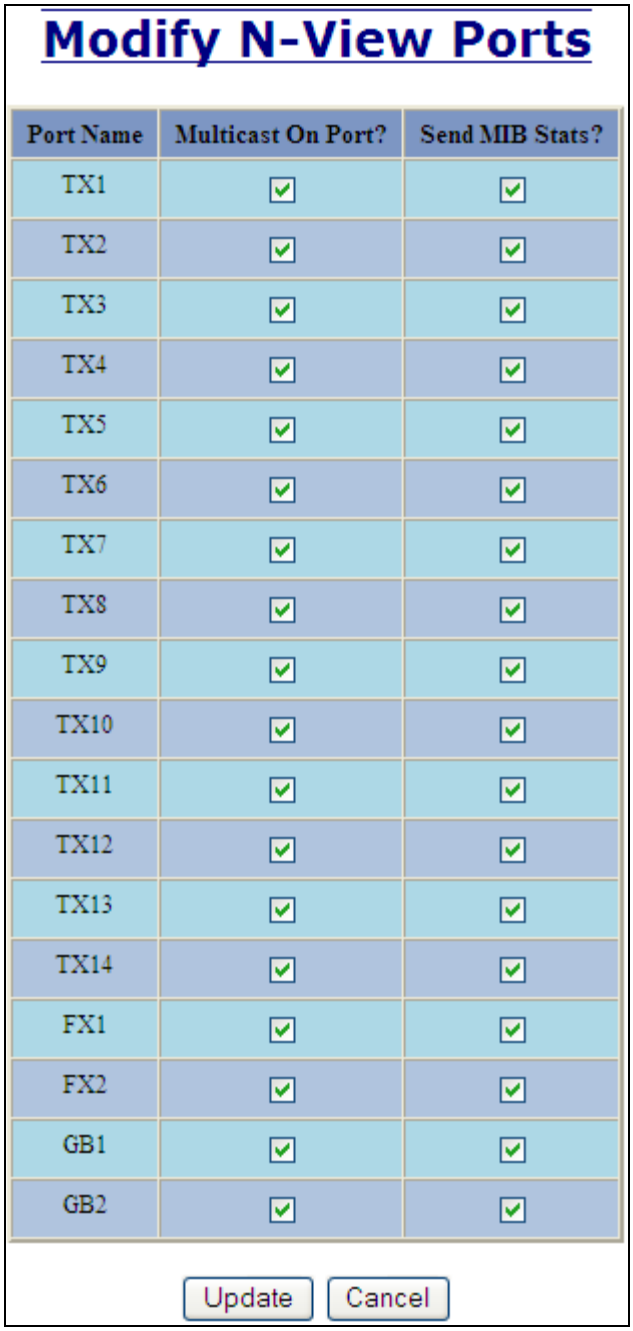

N-Ring – Configuration

The Configuration tab under the N-Ring category will display the N-Ring basic configuration settings. By default, N-Ring is in Auto Member mode and the N-Ring Aging Time is 20 seconds.

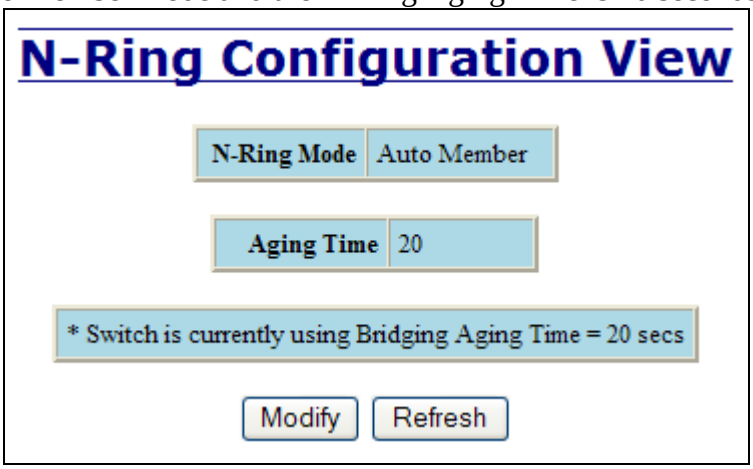

Following the Modify button on the above example, the administrator will see a list of configurable fields for the N-Ring configuration, as below.

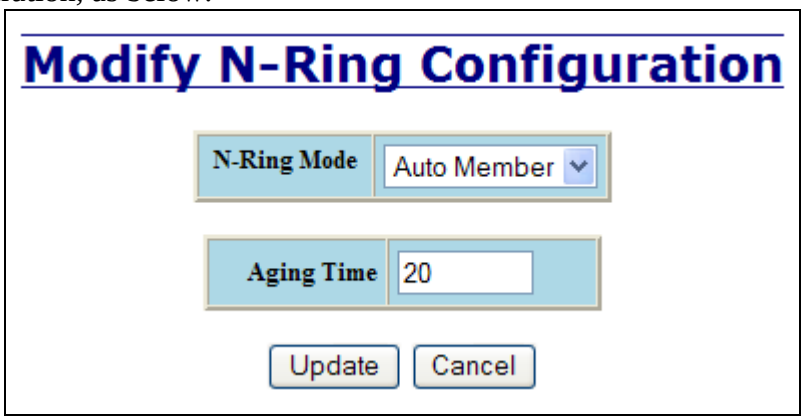

The N-Ring Aging Time has a default of 20 seconds and is separate from the Bridging Aging Time. N-Ring Aging Time is used when the switch is an N-Ring Manager or becomes an active N-Ring Member, and in either case N-Ring status includes for example:

"Switch is currently using N-Ring Aging Time = 20 Seconds"

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.

NOTES:

1. ***N-Ring Manager cannot have RSTP or Trunking enabled.***
2. ***RSTP & N-Ring are different modes and cannot share links or segments along those lines. See the examples in the RSTP configuration section.***
3. ***Do not use Trunking on an N-Ring manager. Do not connect the N-Ring to actively Trunking ports on an Auto Member.***
4. ***Do not create redundant links unless either RSTP or N-Ring is enabled.***
5. ***Any one 7018 can only participate in one N-Ring.***
6. ***N-Ring copper ports must be run at 100Mb full duplex, including the default 'autonegotiate' as long as all switches in the ring support 100Mb full duplex.***

N-Ring – Configuration, Continued…

The “N-Ring Mode” is one of three, as below:

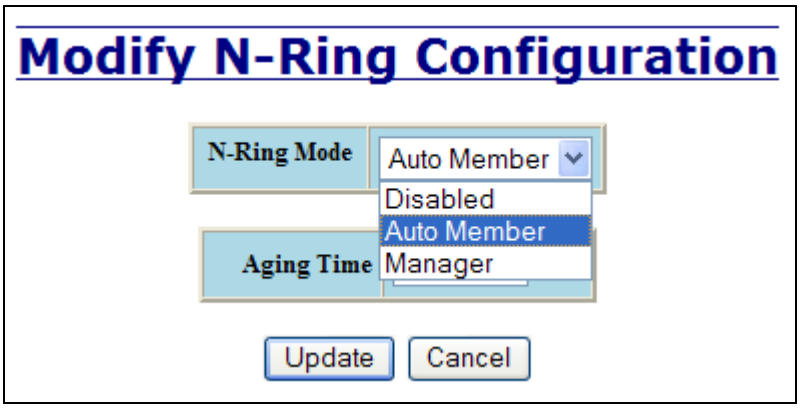

If N-Ring Mode is “Manager”, then a pull-down allows selection of available ports TX1/TX2, TX15/TX16 (FX1/FX2 on 7018FX2), or GB1/GB2 as N-Ring ports.

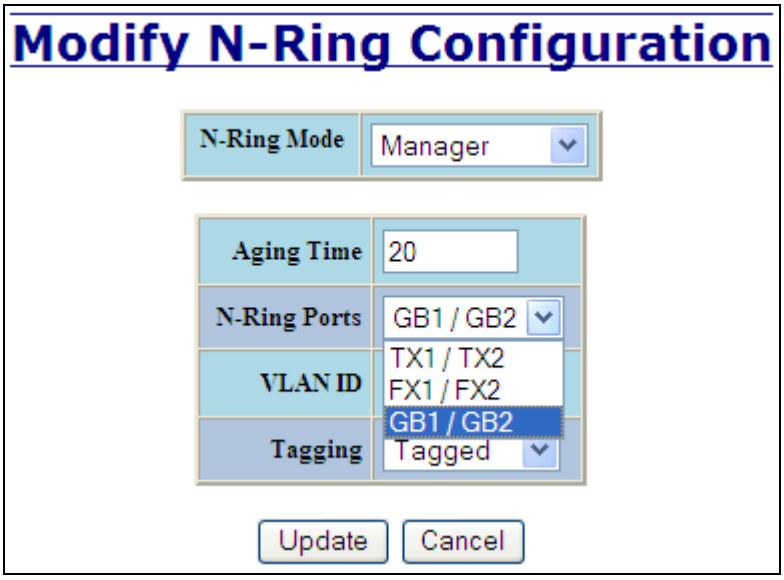

N-Ring – Configuration, Continued…

If N-Ring Mode is “Manager”, then VLAN ID can be set to a unique VLAN id (1 ~ 4094). Default is 3333.

If N-Ring Mode is “Manager”, then a pull-down allows selection as to whether the N-Ring ports are members of the VLAN’s Tagged or Untagged ports. Default is Tagged.

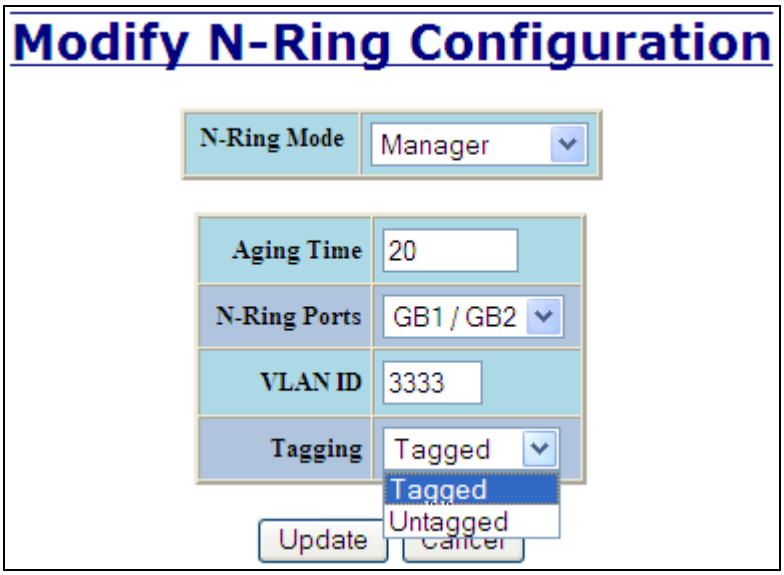

Once these fields are filled in to meet the needs of the administrator’s network, the changes may be saved by clicking the Update button at the bottom of the page.

NOTES:

1. ***Since VLANs are implemented for security reasons as well as traffic flow, N-Ring only makes minimal changes. It is up to the administrator to ensure that VLANs are configured correctly on the N-Ring manager and all N-Ring members.***
2. ***When the N-Ring manager and all N-Ring Members are in defaults, changing the N-Ring manager to use a Tagged VLAN requires no user interaction to allow non-ring traffic to pass through the ring. This works because changing to a Tagged VLAN does not remove the ring ports from the default VLAN.***
3. ***When the N-Ring manager and all N-Ring Members are in defaults, changing the N-Ring manager to use an Untagged VLAN other than VID 1, requires the administrator to add non-ring ports to the N-Ring VLAN to allow non-ring traffic to pass through the ring. This occurs because the N-Ring ports must be removed from VID 1 because an untagged port may only be a member of one VLAN.***

N-Ring – Advanced Configuration

If switch is an N-Ring Member, the following data will be shown:

N-Ring Mode
Current N-Ring mode of switch.

Keep-Alive Timeout:
Keep-Alive timeout is used when switch is active in an N-Ring. The range is **5-1000000** seconds.

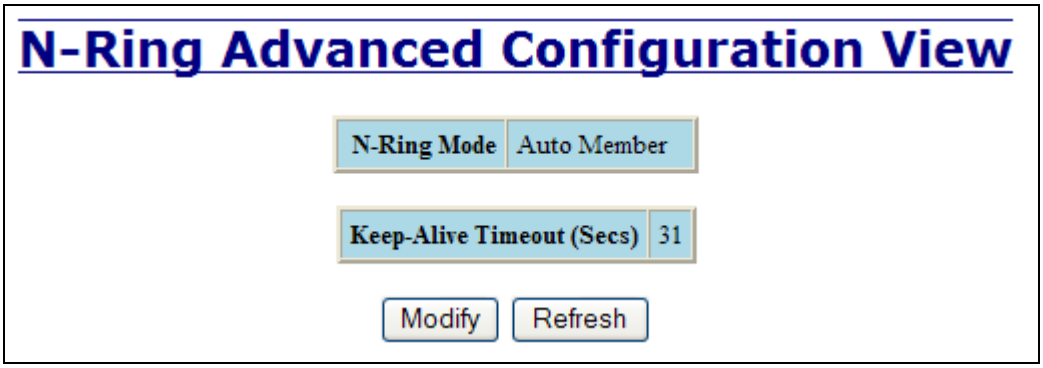

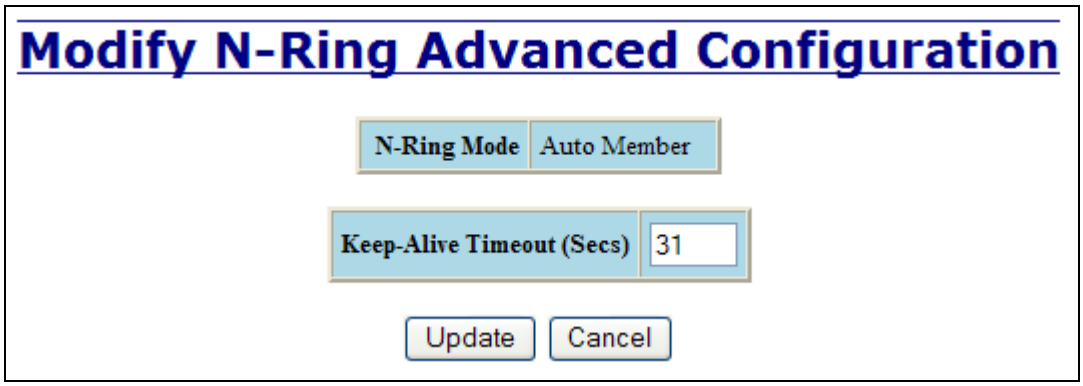

If switch is an N-Ring Manager, the following advanced configuration data will be shown:

N-Ring Mode
Current N-Ring mode of switch.

Self Health Packet Interval:
The amount of time to wait in milliseconds before sending Self-Health packets. The default is 10.

Maximum Missed Packets
The number of missed Self-Health packets that constitute a fault. The default is 2.

Sign-On Delay
The amount of time to wait in milliseconds before requesting initial sign-on information from ring members. The default is 1000.

Sign-On Match Packets
The number of times the switch count must match before starting the sign-on process. The default is 3.

Sign-On Interval
The interval of time to wait in milliseconds before requesting subsequent sign-on information from ring members when the ring is broken. The default is 3000.

Sign-On Info Spacing Multiplier
The amount of time to wait in milliseconds, scaled by switch number, before sending information to the ring manager. The default is 5.

Sign-On Info Retry Timeout
The amount of time the ring member will wait in milliseconds for the ring manager to acknowledge receipt of the member's information before the member tries to re-send the information. The default is 1500.

Delay Before Re-Entering Broken State
The amount of time, in milliseconds, that must elapse before the ring is allowed to go back into the broken state. The default is 3000.

N-Ring – Advanced Configuration, Continued…

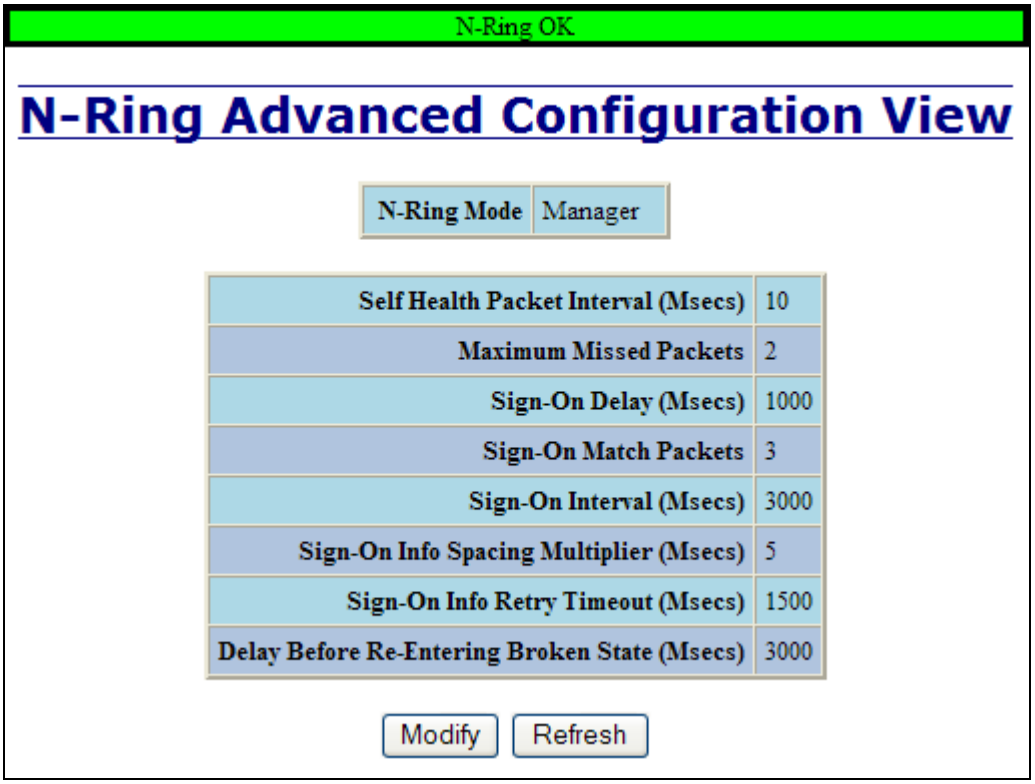

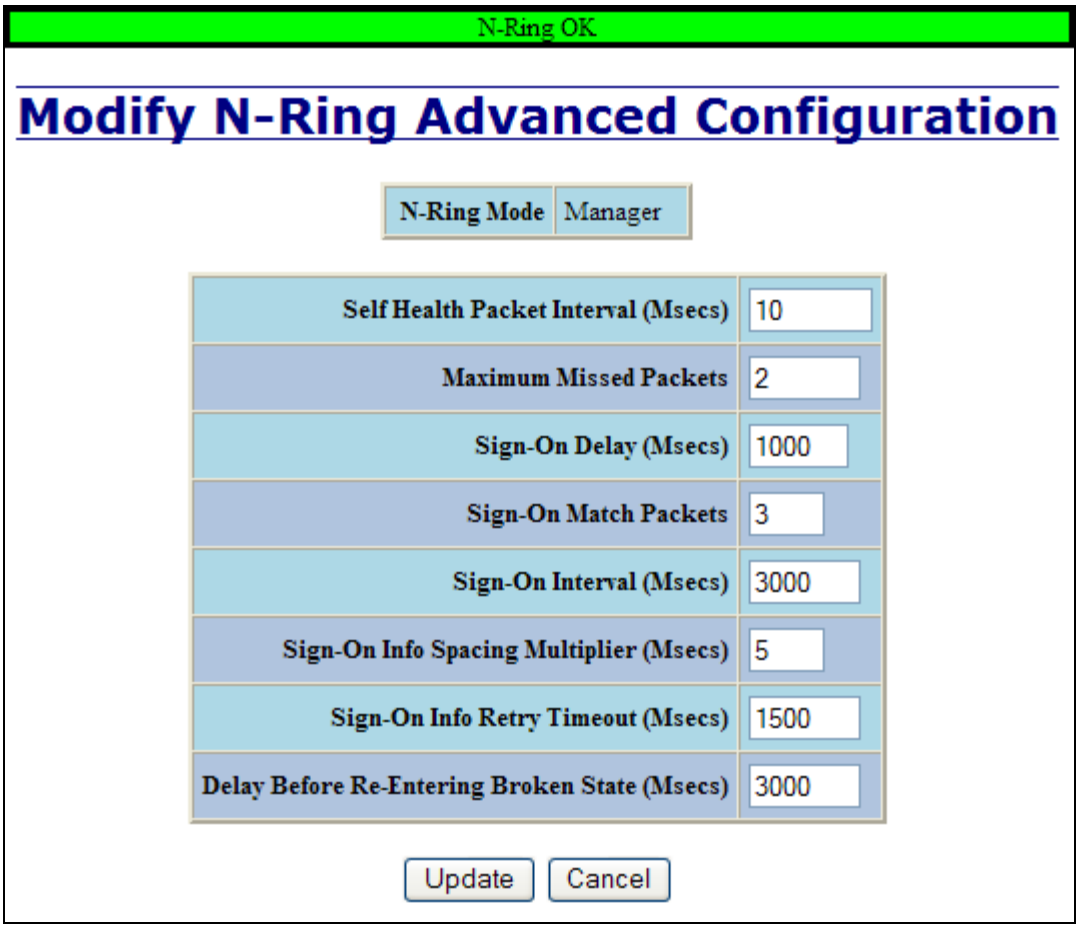

N-Ring – Status

The Status tab under the N-Ring category will display the N-Ring status.

Below is an example of N-Ring Status from a switch in defaults (N-Ring Auto Member) that is not an N-Ring Manager and has not become an “Active” N-Ring Member:

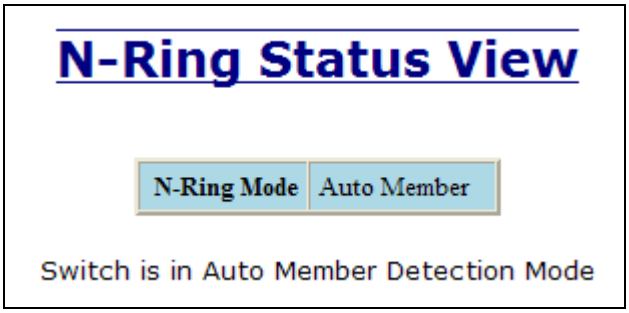

Below is an example of N-Ring Status from an “Active” N-Ring Member:

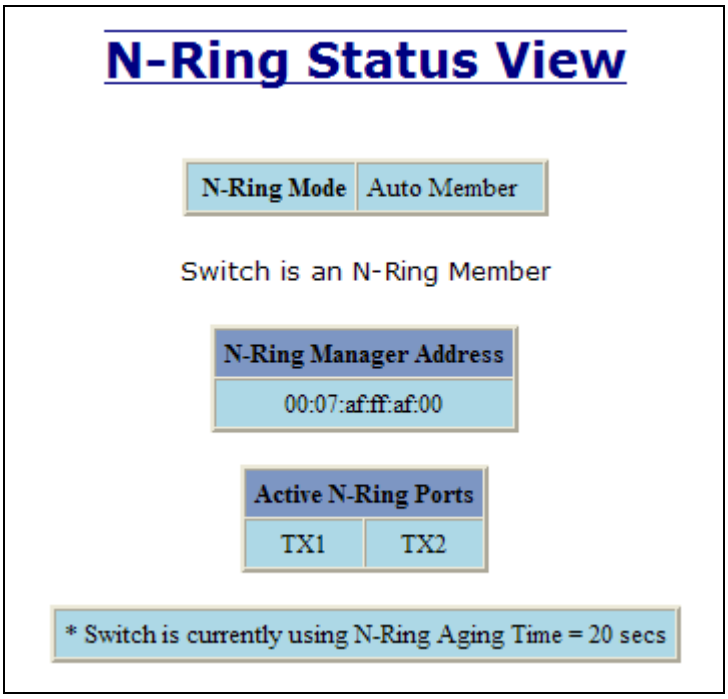

N-Ring – Status, Continued…

Below is an example of N-Ring Status from an N-Ring Manager with a healthy N-Ring:

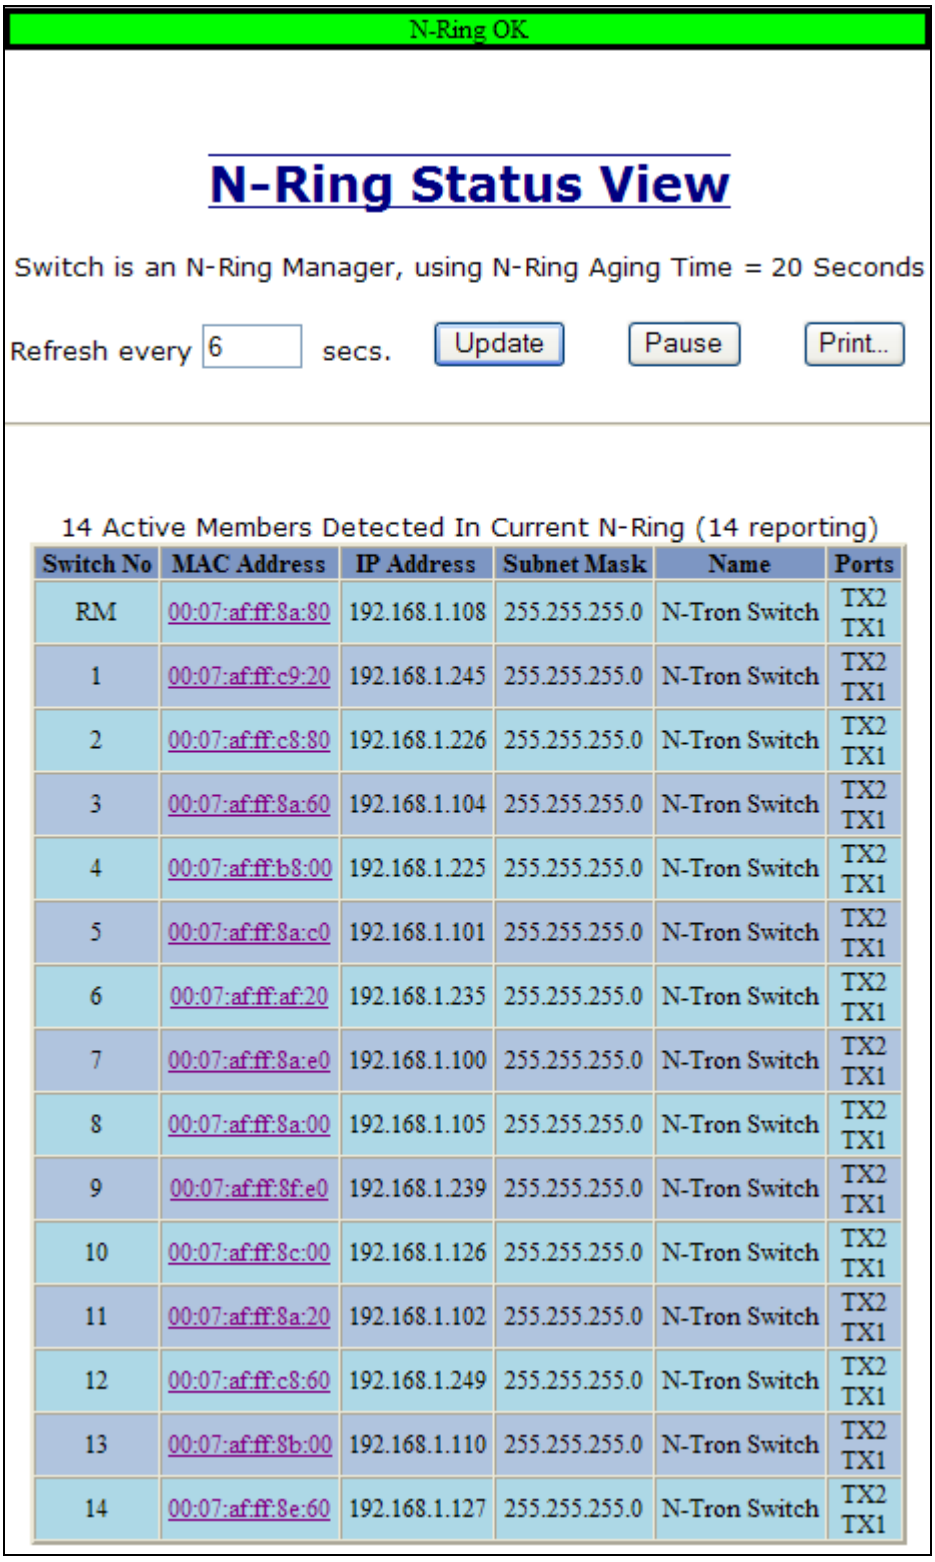

N-Ring OK

N-Ring Status View

Switch is an N-Ring Manager, using N-Ring Aging Time = 20 Seconds

Refresh every 6 secs. Update Pause Print...

14 Active Members Detected In Current N-Ring (14 reporting)

Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:ff:8a:80	192.168.1.108	255.255.255.0	N-Tron Switch	TX2 TX1
1	00:07:af:ff:c9:20	192.168.1.245	255.255.255.0	N-Tron Switch	TX2 TX1
2	00:07:af:ff:c8:80	192.168.1.226	255.255.255.0	N-Tron Switch	TX2 TX1
3	00:07:af:ff:8a:60	192.168.1.104	255.255.255.0	N-Tron Switch	TX2 TX1
4	00:07:af:ff:b8:00	192.168.1.225	255.255.255.0	N-Tron Switch	TX2 TX1
5	00:07:af:ff:8a:c0	192.168.1.101	255.255.255.0	N-Tron Switch	TX2 TX1
6	00:07:af:ff:af:20	192.168.1.235	255.255.255.0	N-Tron Switch	TX2 TX1
7	00:07:af:ff:8a:e0	192.168.1.100	255.255.255.0	N-Tron Switch	TX2 TX1
8	00:07:af:ff:8a:00	192.168.1.105	255.255.255.0	N-Tron Switch	TX2 TX1
9	00:07:af:ff:8f:e0	192.168.1.239	255.255.255.0	N-Tron Switch	TX2 TX1
10	00:07:af:ff:8c:00	192.168.1.126	255.255.255.0	N-Tron Switch	TX2 TX1
11	00:07:af:ff:8a:20	192.168.1.102	255.255.255.0	N-Tron Switch	TX2 TX1
12	00:07:af:ff:c8:60	192.168.1.249	255.255.255.0	N-Tron Switch	TX2 TX1
13	00:07:af:ff:8b:00	192.168.1.110	255.255.255.0	N-Tron Switch	TX2 TX1
14	00:07:af:ff:8e:60	192.168.1.127	255.255.255.0	N-Tron Switch	TX2 TX1

N-Ring – Status, Continued…

Below is an example of N-Ring Status from an N-Ring Manager with a faulted N-Ring. The red fields on the N-Ring Map show problems. Ports that are red indicate that the port is not linked. MAC addresses that are red indicate that there is no communication to that switch. The red "Ring Broken" line shows where the N-Ring is broken.

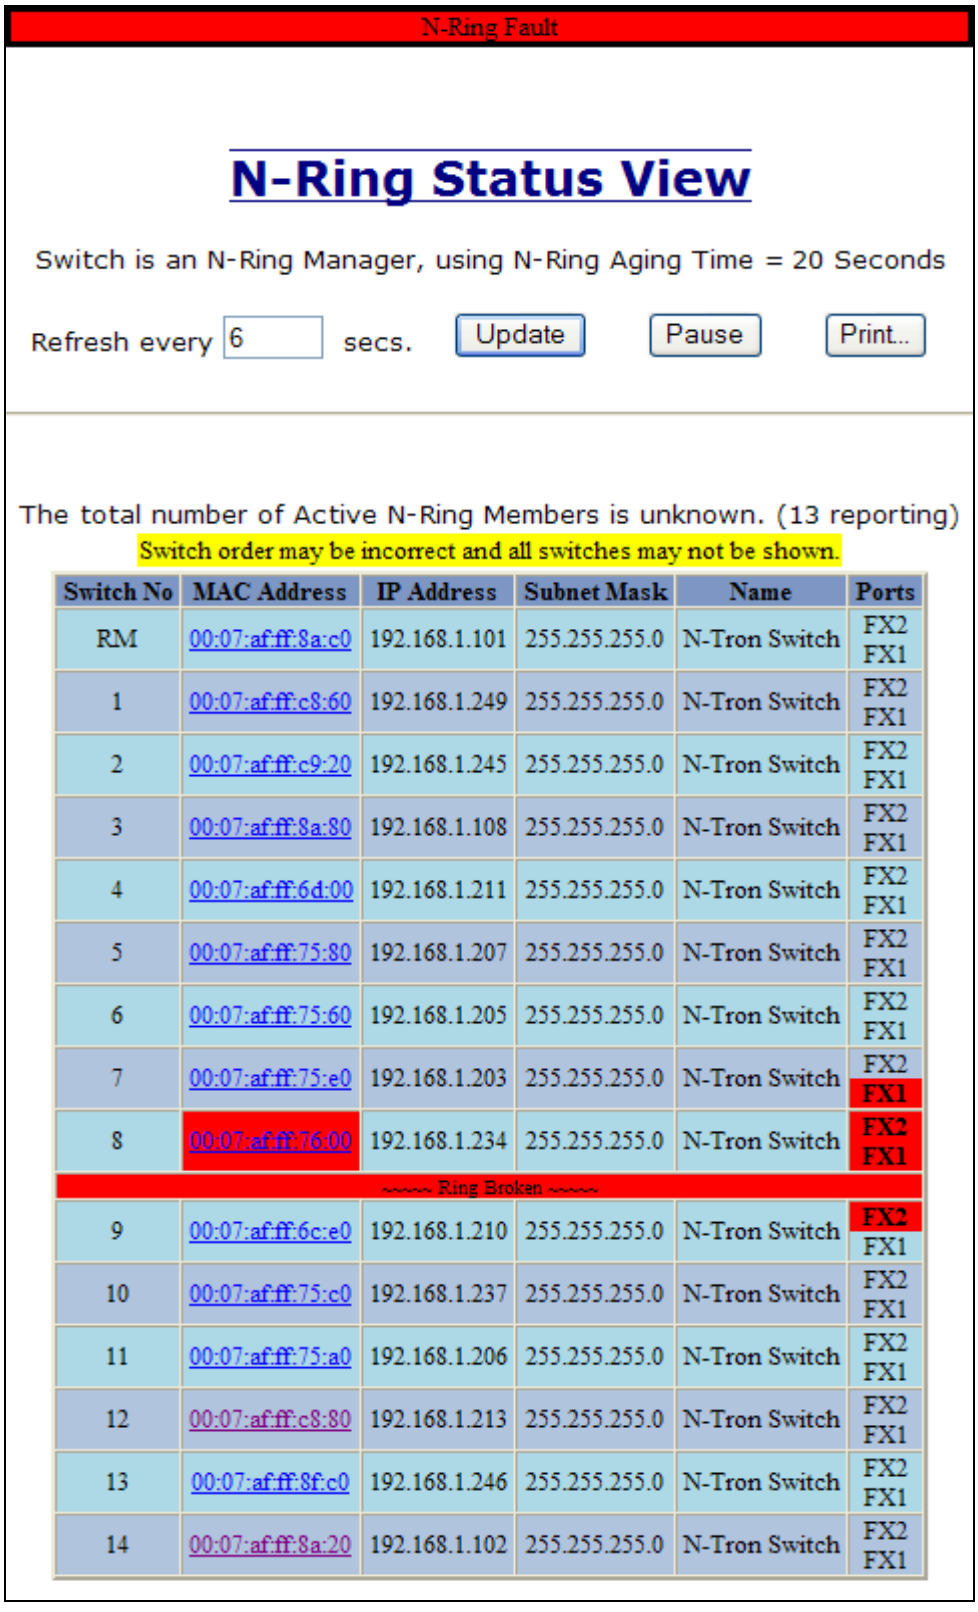

N-Ring Fault

N-Ring Status View

Switch is an N-Ring Manager, using N-Ring Aging Time = 20 Seconds

Refresh every 6 secs. Update Pause Print...

The total number of Active N-Ring Members is unknown. (13 reporting)

Switch order may be incorrect and all switches may not be shown.

Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:ff:8a:c0	192.168.1.101	255.255.255.0	N-Tron Switch	FX2 FX1
1	00:07:af:ff:c8:60	192.168.1.249	255.255.255.0	N-Tron Switch	FX2 FX1
2	00:07:af:ff:c9:20	192.168.1.245	255.255.255.0	N-Tron Switch	FX2 FX1
3	00:07:af:ff:8a:80	192.168.1.108	255.255.255.0	N-Tron Switch	FX2 FX1
4	00:07:af:ff:6d:00	192.168.1.211	255.255.255.0	N-Tron Switch	FX2 FX1
5	00:07:af:ff:75:80	192.168.1.207	255.255.255.0	N-Tron Switch	FX2 FX1
6	00:07:af:ff:75:60	192.168.1.205	255.255.255.0	N-Tron Switch	FX2 FX1
7	00:07:af:ff:75:e0	192.168.1.203	255.255.255.0	N-Tron Switch	FX2 **FX1**
8	00:07:af:ff:76:00	192.168.1.234	255.255.255.0	N-Tron Switch	**FX2 FX1**
~~ Ring Broken ~~~~~					
9	00:07:af:ff:6c:e0	192.168.1.210	255.255.255.0	N-Tron Switch	**FX2** FX1
10	00:07:af:ff:75:c0	192.168.1.237	255.255.255.0	N-Tron Switch	FX2 FX1
11	00:07:af:ff:75:a0	192.168.1.206	255.255.255.0	N-Tron Switch	FX2 FX1
12	00:07:af:ff:c8:80	192.168.1.213	255.255.255.0	N-Tron Switch	FX2 FX1
13	00:07:af:ff:8f:c0	192.168.1.246	255.255.255.0	N-Tron Switch	FX2 FX1
14	00:07:af:ff:8a:20	192.168.1.102	255.255.255.0	N-Tron Switch	FX2 FX1

N-Ring – Status, Continued…

In rare cases an N-Ring can have a “Partial Fault”. An example of this is to have a break in just one fiber in a duplex channel fiber pair. The screenshot below shows N-Ring Manager Status when a ‘Higher’ N-Ring Port (TX2, TX8/FX2, ir GB2) is not receiving self health frames all the way around the N-Ring, though the other (low TX1, TX7/FX1, or GB1) N-Ring port is:

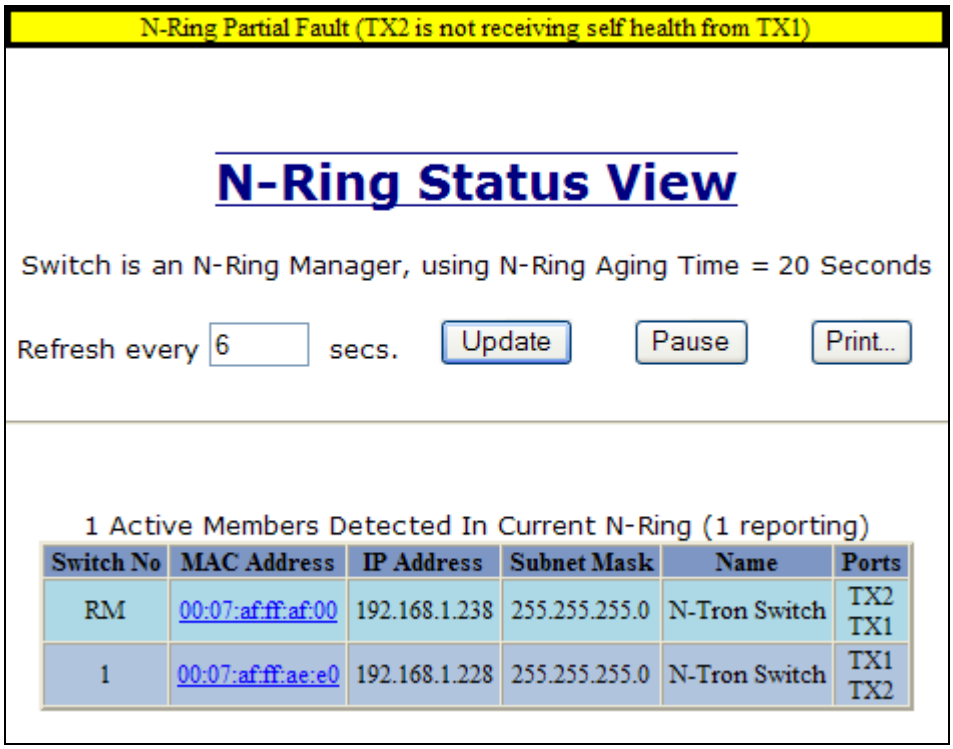
N-Ring Partial Fault (TX2 is not receiving self health from TX1)
N-Ring Status View
Switch is an N-Ring Manager, using N-Ring Aging Time = 20 Seconds
Refresh every 6 secs.
Update
Pause
Print...
1 Active Members Detected In Current N-Ring (1 reporting)
Switch No | MAC Address | IP Address | Subnet Mask | Name | Ports
RM | 00:07:af:ff:af:00 | 192.168.1.238 | 255.255.255.0 | N-Tron Switch | TX2 TX1
1 | 00:07:af:ff:ae:e0 | 192.168.1.228 | 255.255.255.0 | N-Tron Switch | TX1 TX2

The screenshot below shows N-Ring Manager Status when a ‘Lower’ N-Ring Port (TX1, TX7/FX1, or GB1) is not receiving self health frames all the way around the N-Ring, though the other (high TX2 , TX8/FX2, or GB2) N-Ring port is:

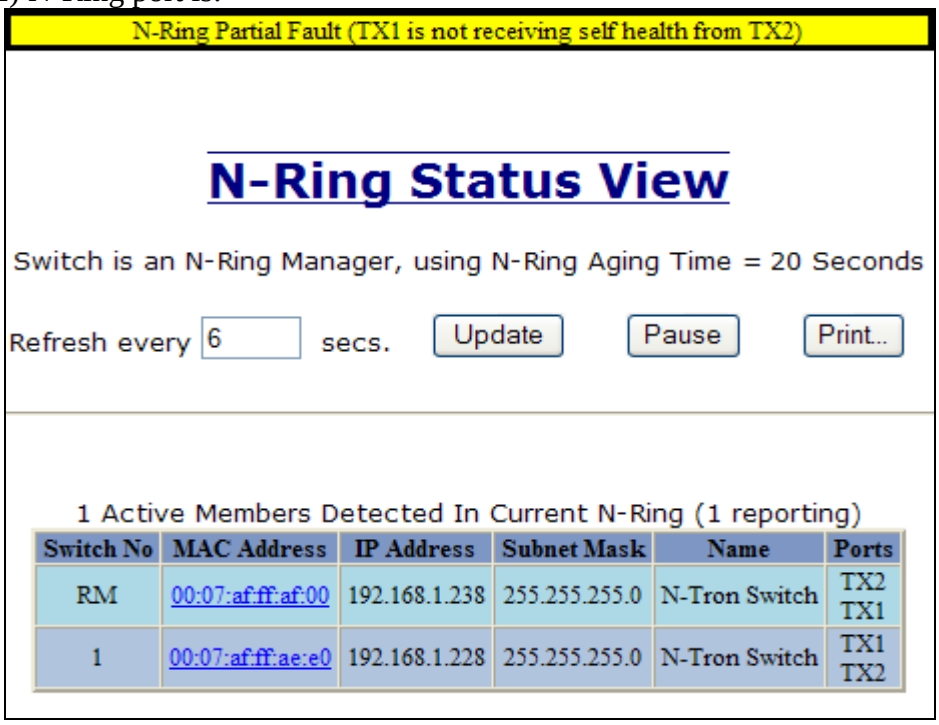
N-Ring Partial Fault (TX1 is not receiving self health from TX2)
N-Ring Status View
Switch is an N-Ring Manager, using N-Ring Aging Time = 20 Seconds
Refresh every 6 secs.
Update
Pause
Print...
1 Active Members Detected In Current N-Ring (1 reporting)
Switch No | MAC Address | IP Address | Subnet Mask | Name | Ports
RM | 00:07:af:ff:af:00 | 192.168.1.238 | 255.255.255.0 | N-Tron Switch | TX2 TX1
1 | 00:07:af:ff:ae:e0 | 192.168.1.228 | 255.255.255.0 | N-Tron Switch | TX1 TX2

N-Link – Configuration

The purpose of N-Link is to provide a way to redundantly couple an N-Ring topology to one or more other topologies, usually other N-Ring topologies. Each N-Link configuration requires 4 switches: N-Link Master, N-Link Slave, N-Link Primary Coupler, and N-Link Standby Coupler.

Standard N-Link Configuration (Example):

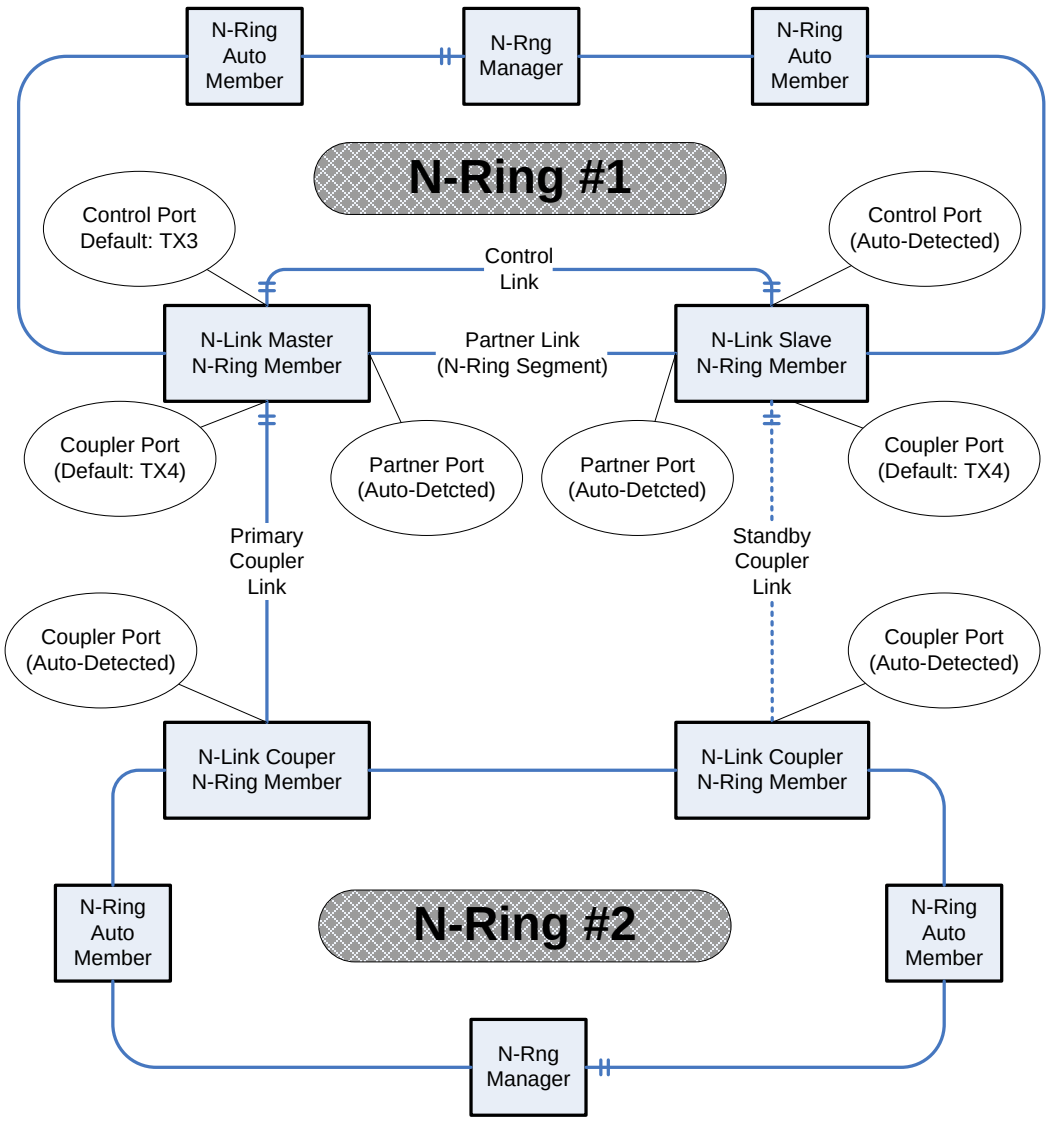

For convenience, a diagram similar to the above is provided in the switch's browser help for N-Link.

N-Link – Configuration, Continued…

Complex N-Link Configuration (Example):

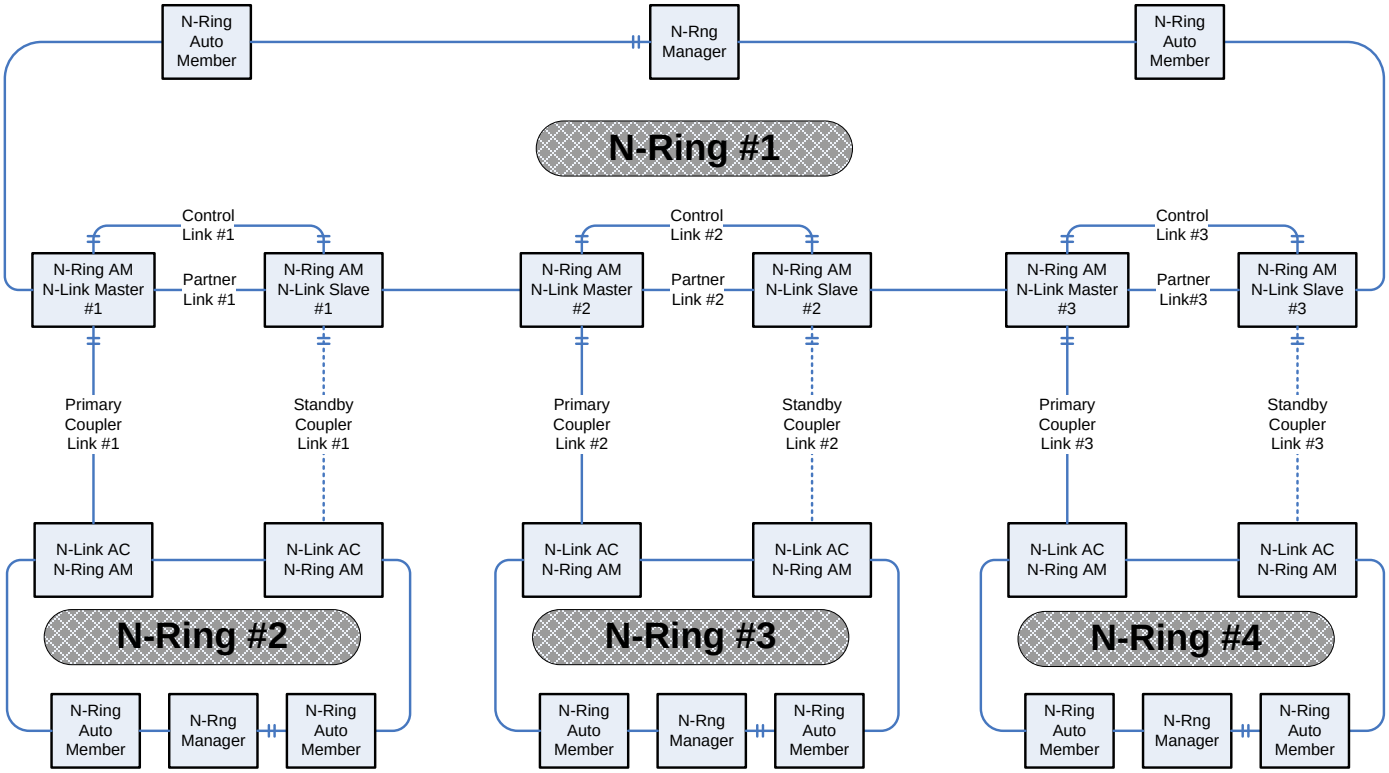

Configuration Notes:

- The Master and Slave must be part of the N-Ring topology.
- If using default configuration choices, the administrator only needs to configure the N-Link Master. The N-Link Slave and both Coupler switches will auto-detect any needed configuration.
- If not using default configuration choices, the administrator may also need to configure the Default Coupler port on the N-Link Slave.
- There must be a direct link between the Master and Slave Control ports. Use of media converters or other switches is not supported.
- There must be a direct link between the Master and Slave Partner ports. Use of media converters or other switches is not supported.
- There must be at least one other switch, besides the Master and Slave, that supports N-Link on the N-Ring.
- N-Link will only support a single point of failure. Multiple points of failure and misconfiguration are not supported and may cause a network storm under some circumstances.

Configuration Steps to redundantly couple 2 N-Ring networks:

1. Ensure the Coupler and Control cables are disconnected at this point.
2. Get Both N-Rings working with a status of OK.
3. Configure N-Link Slave: Ensure that the N-Link Slave is set to Auto Configure and select a Default Coupler Port. Save Configuration.
4. Configure N-Link Master: Select the Control and Coupler ports. Save the Configuration.
5. Connect the Control Link cable. Ensure that the Slave switch status now shows a state of “Slave”
6. Connect the Coupler Link cables.
7. Check N-Link status by selecting the N-Link Status View page.

N-Link – Configuration, Continued…

The Configuration tab under the N-Link category will display the configuration settings. By default, N-Link is in Auto Configure mode and will use TX4 as the Default Coupler port.

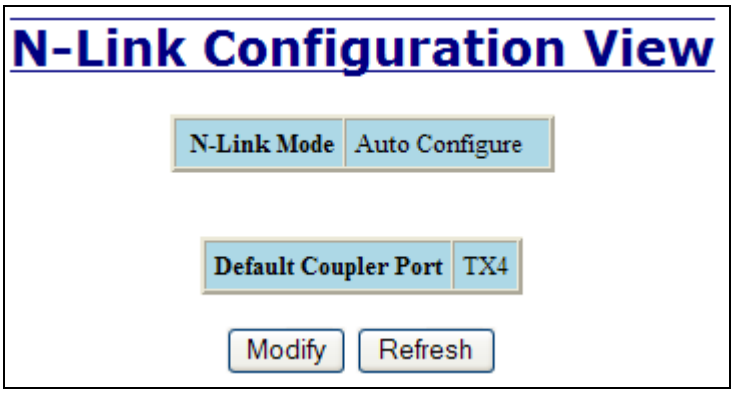

Following the Modify button on the above example, the administrator will see a list of configurable fields for the N-Link configuration, as below.

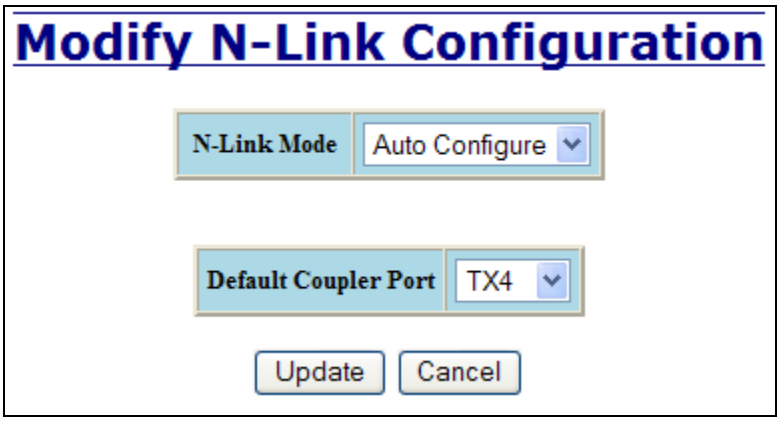

The port configured as the Default Coupler Port will be used as the Standby Coupler port if the switch detects an N-Link Master and becomes an N-Link Slave.

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.

N-Link – Configuration, Continued…

The “N-Link Mode” is one of two choices, as below:

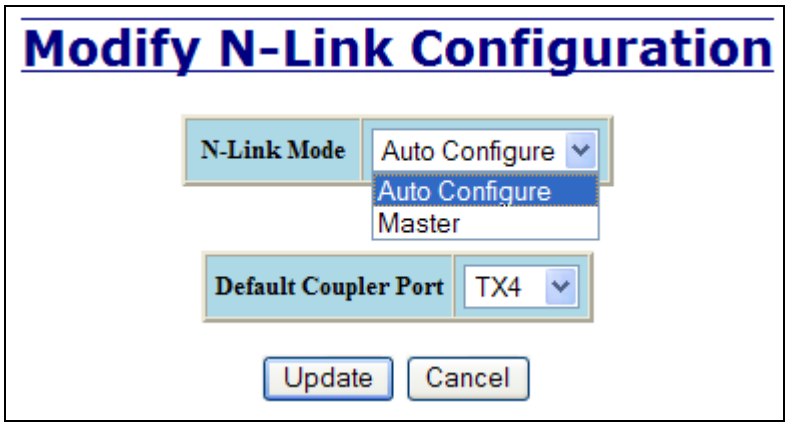

If N-Link mode is “Master”, then the administrator must configure the Control Port (default: TX3) and the Primary Coupler Port (default: TX4).

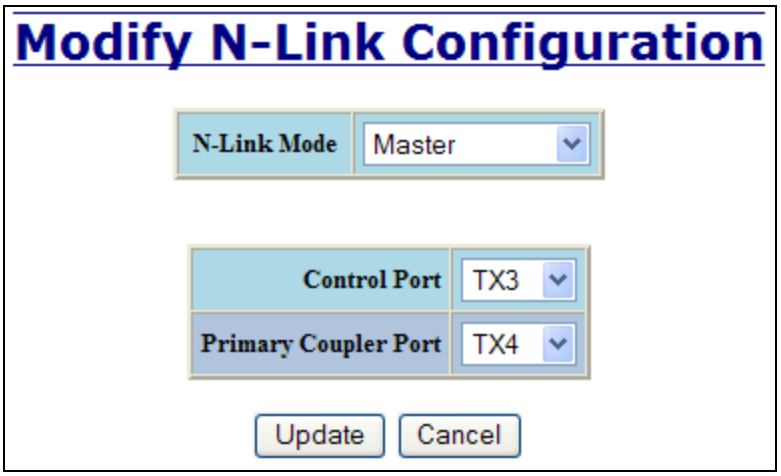

Once these fields are filled in to meet the needs of the administrator’s network, the changes may be saved by clicking the Update button at the bottom of the page.

N-Link – Status

The Status tab under the N-Link category will display the N-Link status.

If the switch is an N-Link Master or Slave, the following switch status and partner status information will be shown. Fields with a red background designate a fault condition.

State:	Current N-Link mode of switch.
Control Port:	The port being used to convey control information. There must be a direct link between the Master and Slave Control ports. Use of media converters or other switches is not supported.
Partner Port:	The port being used for normal communication between the N-Link Master and N-Link Slave switch. There must be a direct link between the Master and Slave Partner ports. Use of media converters or other switches is not supported. This port will be detected automatically.
Coupler Port:	The port being used to establish a redundant path for ethernet data transmission.
Coupler Port State:	Blocking, Forwarding.
Status:	No errors will show "OK", otherwise a description of the Faults detected.

N-Link Partner Information

State:	Current N-Link mode of switch.
MAC:	The MAC Address of the N-Link Partner switch.
Coupler Port State:	Blocking, Forwarding.
Status:	No errors will show "OK", otherwise a description of the Faults detected.

If switch is an N-Link Auto Configure and not a Slave, the Coupler port, if known, will be shown.

N-Link State:	Current N-Link mode of switch.
Coupler Port:	The port used to establish a redundant path for ethernet data transmission. This port will be detected automatically.

Below is an example of N-Link Status from a switch in defaults (N-Link Auto Configure) that is not an N-Link Master and has not become an N-Link Slave or an N-Link Coupler:

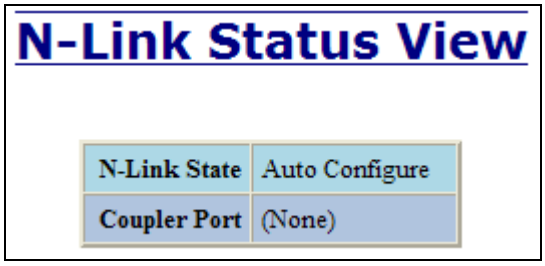

N-Link – Status, Continued…

Below is an example of N-Link Status from an N-Link Coupler switch:

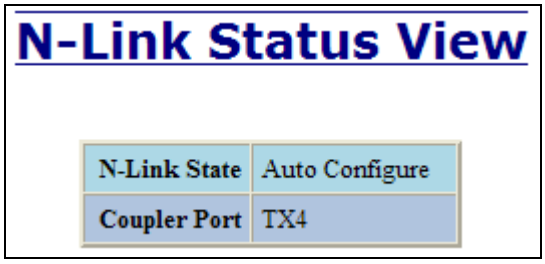

N-Link Status View

N-Link State	Auto Configure
Coupler Port	TX4

Below is an example of N-Link Status from an N-Link Master switch:

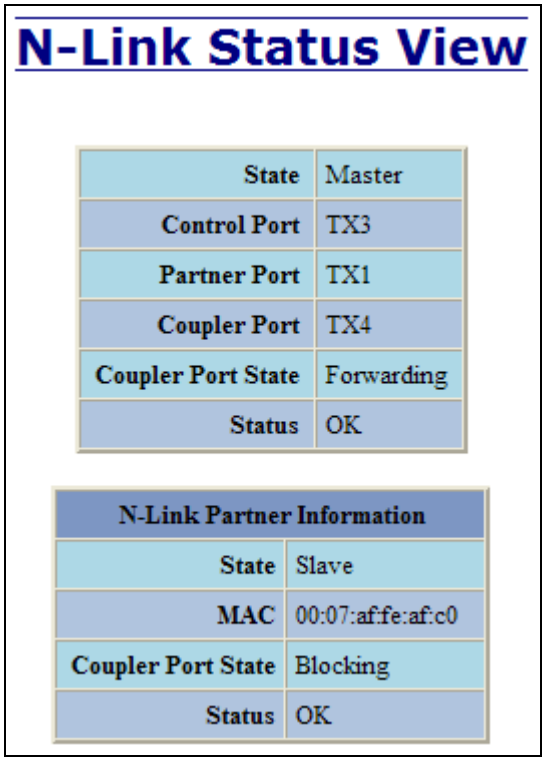

N-Link Status View

State	Master
Control Port	TX3
Partner Port	TX1
Coupler Port	TX4
Coupler Port State	Forwarding
Status	OK

N-Link Partner Information	
State	Slave
MAC	00:07:af:fe:af:c0
Coupler Port State	Blocking
Status	OK

N-Link – Status, Continued…

Below is an example of N-Link Status from an N-Link Slave switch:

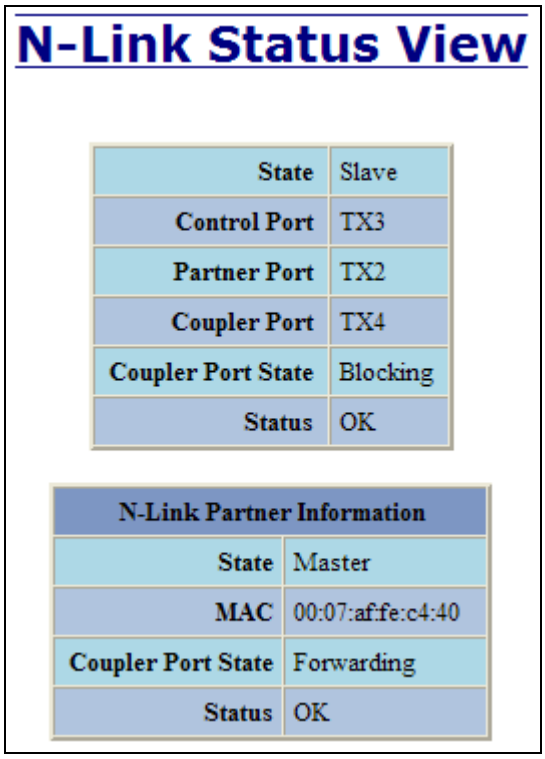

N-Link Status View

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Blocking
Status	OK

N-Link Partner Information	
State	Master
MAC	00:07:af:fe:c4:40
Coupler Port State	Forwarding
Status	OK

Below is an example of N-Link Status from an N-Link Master and Slave where the Primary Coupler link is broken:

N-Link Status View

State	Master
Control Port	TX3
Partner Port	TX1
Coupler Port	TX4
Coupler Port State	Blocking
Status	Redundancy lost. Primary Coupler failure.

N-Link Partner Information	
State	Slave
MAC	00:07:af:fe:af:c0
Coupler Port State	Forwarding
Status	OK

N-Link Status View

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Forwarding
Status	OK

N-Link Partner Information	
State	Master
MAC	00:07:af:fe:c4:40
Coupler Port State	Blocking
Status	Redundancy lost. Primary Coupler failure.

N-Link – Status, Continued…

Below is an example of N-Link Status from an N-Link Master and Slave where the Standby Coupler link is broken:

N-Link Status View

State	Master
Control Port	TX3
Partner Port	TX1
Coupler Port	TX4
Coupler Port State	Forwarding
Status	OK

N-Link Partner Information	
State	Slave
MAC	00:07:af:fe:af:c0
Coupler Port State	Blocking
Status	Redundancy lost. Standby Coupler failure.

N-Link Status View

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Blocking
Status	Redundancy lost. Standby Coupler failure.

N-Link Partner Information	
State	Master
MAC	00:07:af:fe:c4:40
Coupler Port State	Forwarding
Status	OK

Below is an example of N-Link Status from an N-Link Master and Slave where the Control link is broken:

N-Link Status View

State	Master
Control Port	TX3
Partner Port	TX1
Coupler Port	TX4
Coupler Port State	Forwarding
Status	Redundancy lost. Control failure.

N-Link Partner Information	
State	Unknown
MAC	00:07:af:fe:af:c0
Coupler Port State	Unknown
Status	Unknown

N-Link Status View

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Blocking
Status	Redundancy lost. Control failure.

N-Link Partner Information	
State	Unknown
MAC	00:07:af:fe:c4:40
Coupler Port State	Unknown
Status	Unknown

N-Link – Status, Continued…

Below is an example of N-Link Status from an N-Link Master and Slave where the Partner link is broken:

N-Link Status View

State	Master
Control Port	TX3
Partner Port	(None)
Coupler Port	TX4
Coupler Port State	Forwarding
Status	Partner port is not know.

N-Link Partner Information	
State	Slave
MAC	00:07:af:fe:af:c0
Coupler Port State	Blocking
Status	Partner port is not know.

N-Link Status View

State	Slave
Control Port	TX3
Partner Port	(None)
Coupler Port	TX4
Coupler Port State	Blocking
Status	Partner port is not know.

N-Link Partner Information	
State	Master
MAC	00:07:af:fe:c4:40
Coupler Port State	Forwarding
Status	Partner port is not know.

Firmware/Config – TFTP

The TFTP tab under the Firmware/Config category gives the administrator the ability to upload or download a config file for a 7018 Series switch. This allows administrators to backup their configurations to a server offsite in case they need to reload their custom configurations at a later time. It is important not to cycle power on the switch or interrupt the data connection between the TFTP server and the switch while you are uploading/downloading a config file. The switch will not stop working if this does occur, but the administrator will have to retransfer the file. This dialog allows for selection of configuration items to save, and of configurations items to download, if available in the configuration file.

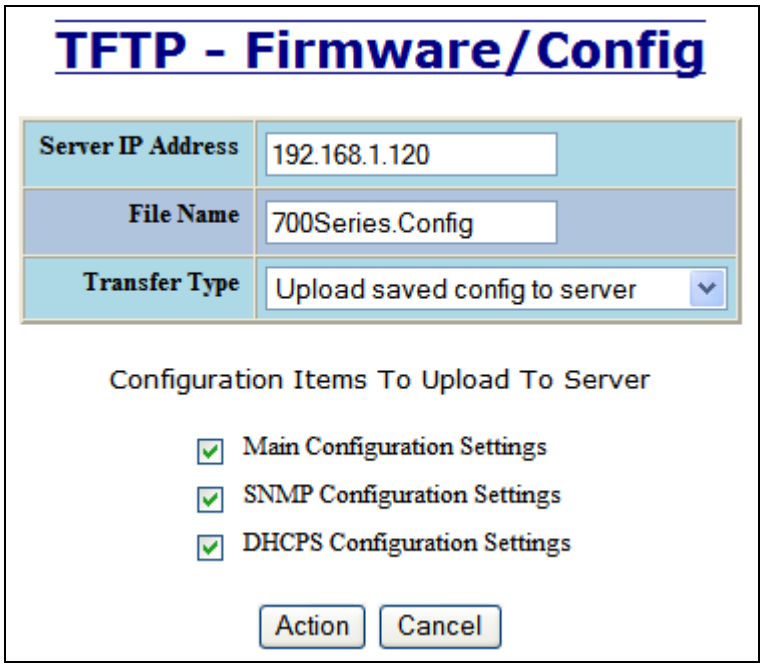

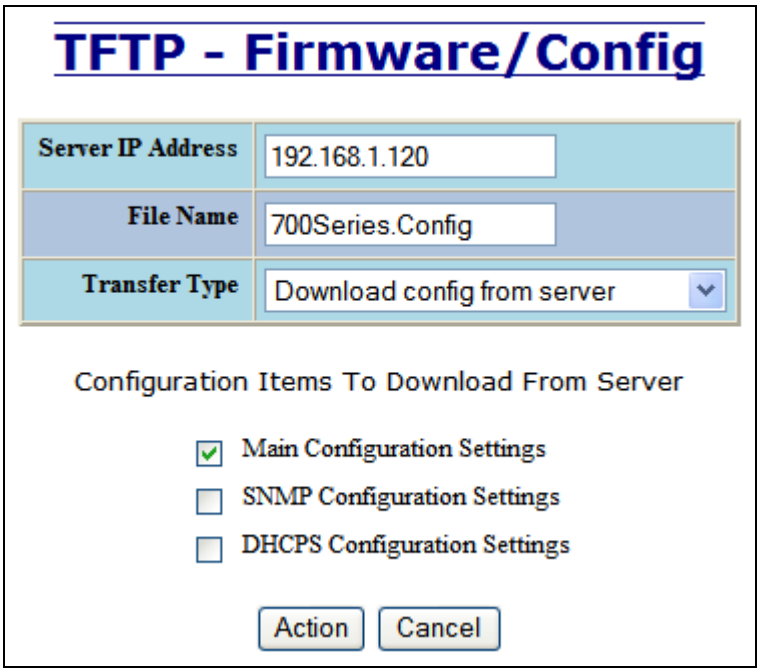

Firmware/Config – TFTP, Continued…

Administrators can also download an Image or Boot Image file to the switch via TFTP. This allows for upgrades of Firmware on the switch in the field, and without having to send the switch back to N-Tron for future updates. It is important not to cycle power on the switch or interrupt the data connection between the TFTP server and the switch that you are flashing the firmware to.

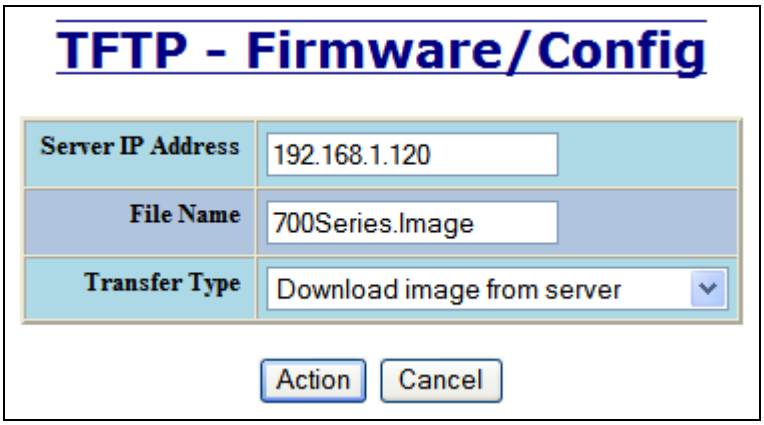

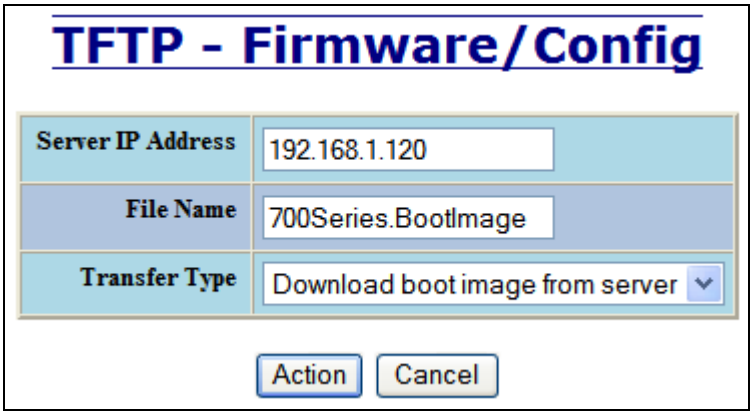

Support – Web Site and E-mail

If at any point in time you get confused or would like additional support directly from N-Tron, you may visit N-Tron's web site, or e-mail N-Tron directly with the links provided for more information.

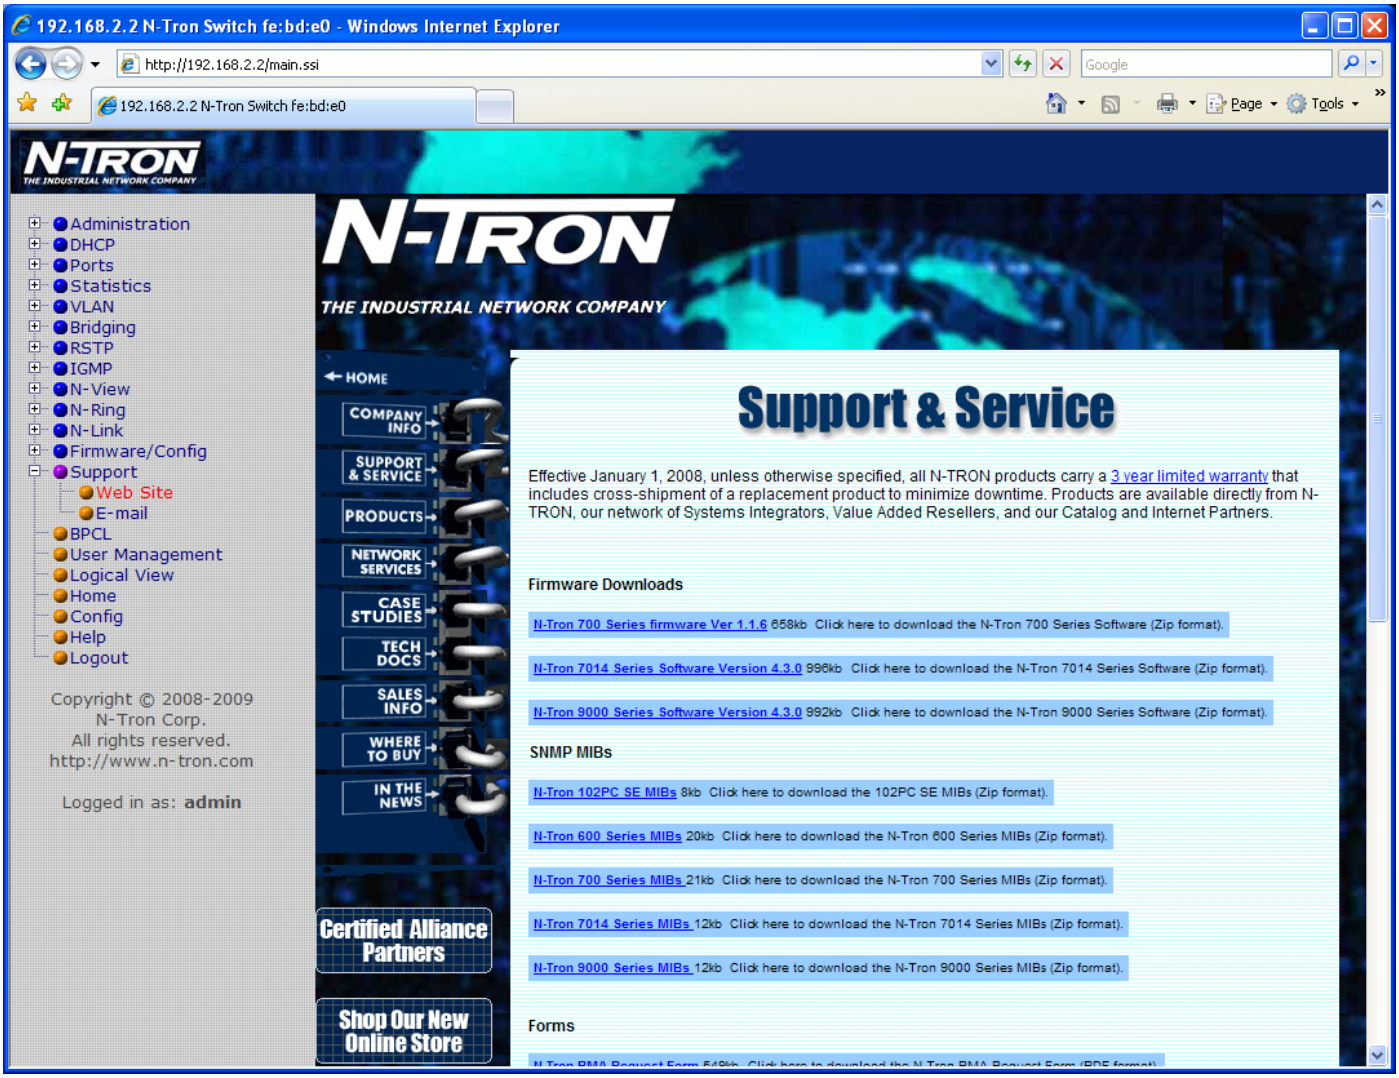
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
N-TRON
THE INDUSTRIAL NETWORK COMPANY
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
Web Site
E-mail
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
HOME
COMPANY INFO
SUPPORT & SERVICE
PRODUCTS
NETWORK SERVICES
CASE STUDIES
TECH DOCS
SALES INFO
WHERE TO BUY
IN THE NEWS
Certified Alliance Partners
Shop Our New Online Store
Support & Service
Effective January 1, 2008, unless otherwise specified, all N-TRON products carry a 3 year limited warranty that includes cross-shipment of a replacement product to minimize downtime. Products are available directly from N-TRON, our network of Systems Integrators, Value Added Resellers, and our Catalog and Internet Partners.
Firmware Downloads
N-Tron 700 Series firmware Ver 1.1.6 658kb Click here to download the N-Tron 700 Series Software (Zip format).
N-Tron 7014 Series Software Version 4.3.0 996kb Click here to download the N-Tron 7014 Series Software (Zip format).
N-Tron 9000 Series Software Version 4.3.0 992kb Click here to download the N-Tron 9000 Series Software (Zip format).
SNMP MIBs
N-Tron 102PC SE MIBs 8kb Click here to download the 102PC SE MIBs (Zip format).
N-Tron 600 Series MIBs 20kb Click here to download the N-Tron 600 Series MIBs (Zip format).
N-Tron 700 Series MIBs 21kb Click here to download the N-Tron 700 Series MIBs (Zip format).
N-Tron 7014 Series MIBs 12kb Click here to download the N-Tron 7014 Series MIBs (Zip format).
N-Tron 9000 Series MIBs 12kb Click here to download the N-Tron 9000 Series MIBs (Zip format).
Forms

BPCL – Broadcast Packet Count Limit Configuration

The BPCL link will display all the ports that are installed in the 7018 Series unit and will list the BPCL Percentage for each port. BPCL defaults to 3%. A Modify button is provided to change these fields.

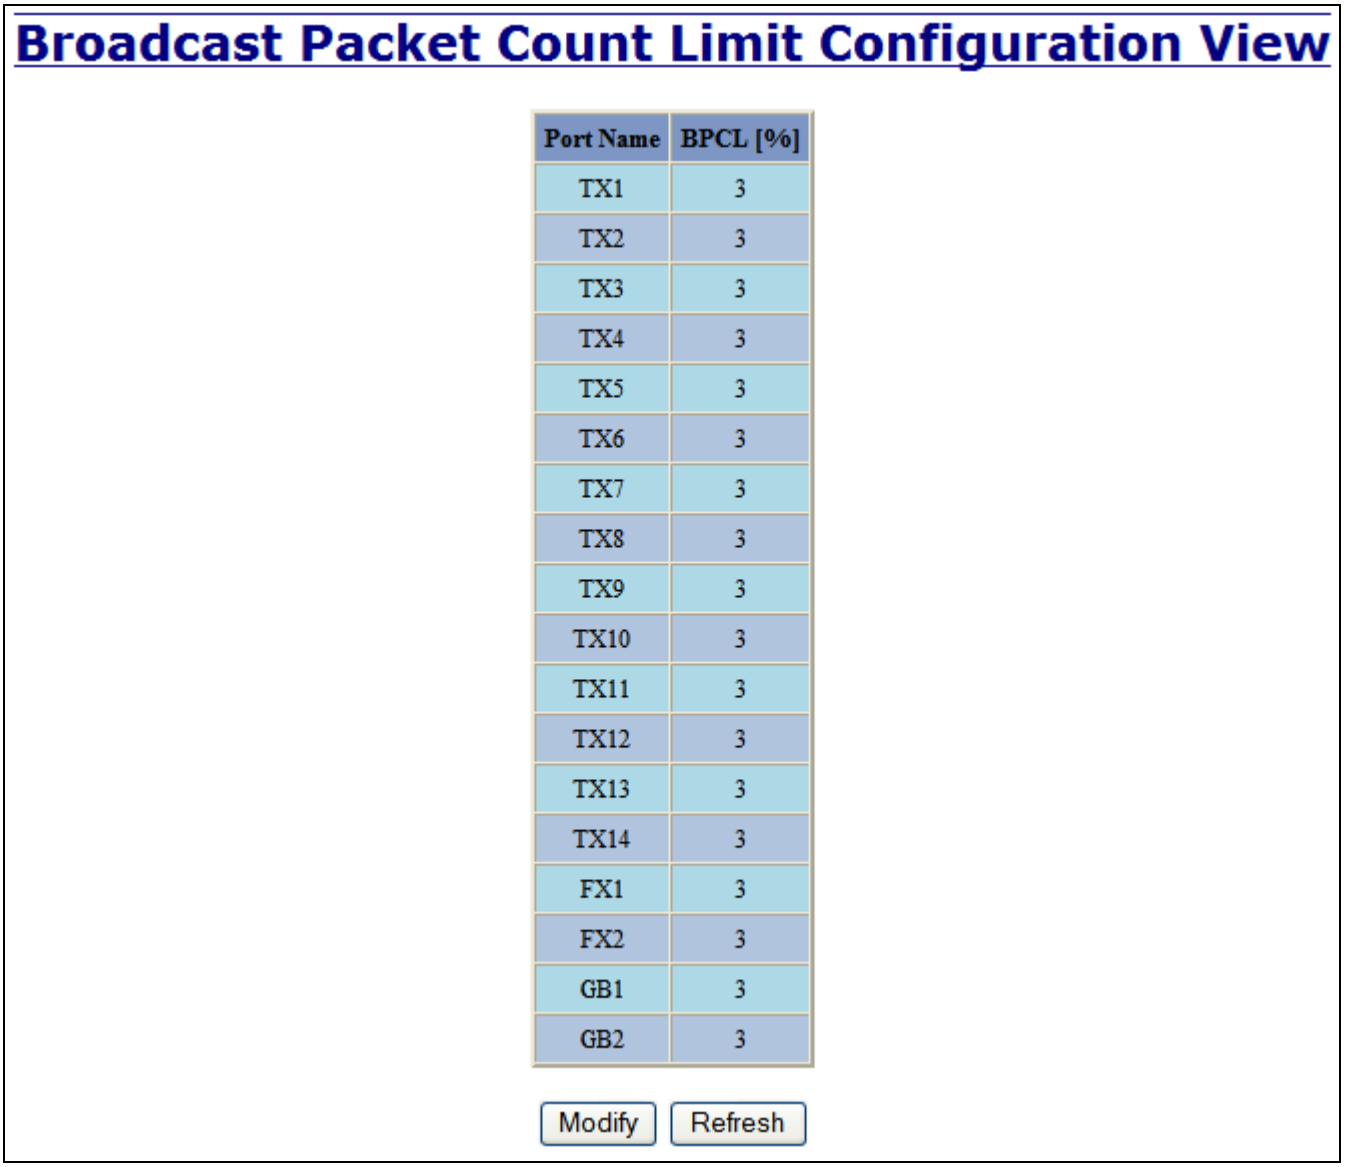

Following the Modify button on the above example, the administrator can modify the BPCL Percentage for each and every port.

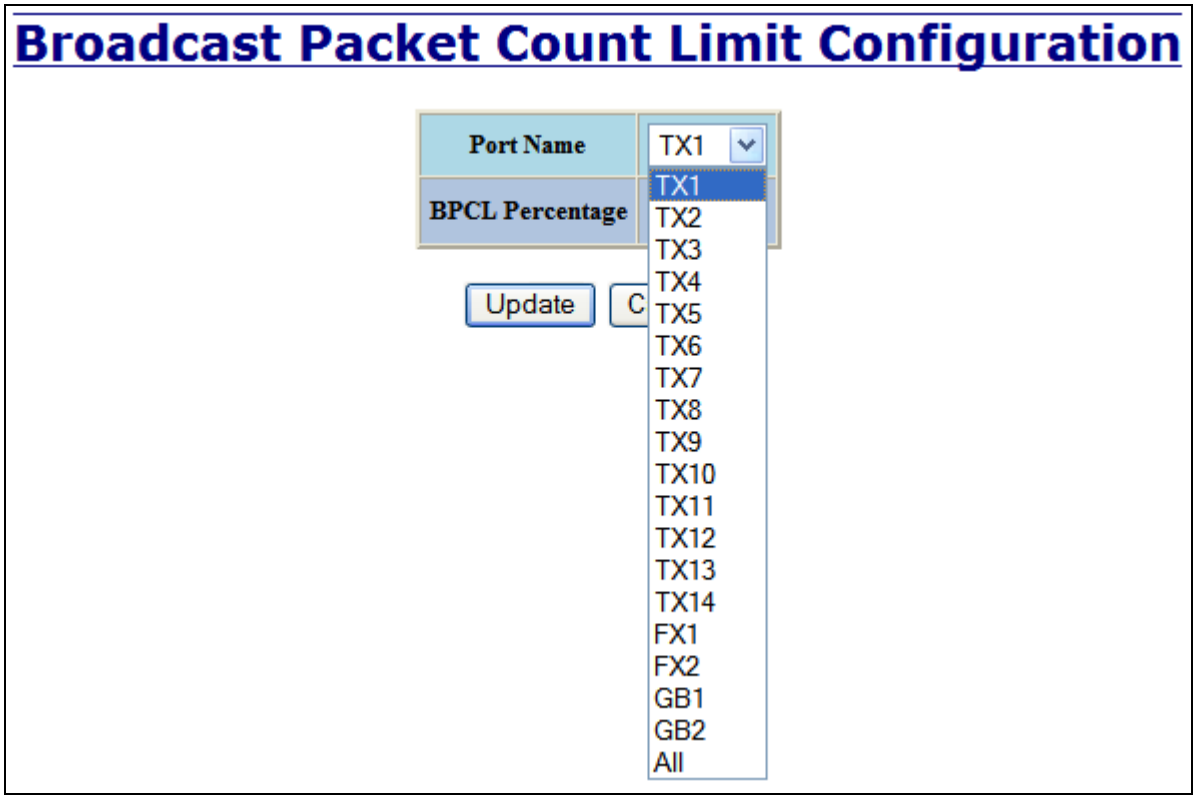
Broadcast Packet Count Limit Configuration
Port Name
TX1
BPCL Percentage
Update
C
TX1
TX2
TX3
TX4
TX5
TX6
TX7
TX8
TX9
TX10
TX11
TX12
TX13
TX14
FX1
FX2
GB1
GB2
All

User Management – Adding Users

The User Management link will display a list of all the users who have access to the management features of the switch and their access permissions.

Following the Add button on the above example, the administrator can add another user and assign the user a username, a password, and the user's permissions (user/administrator).

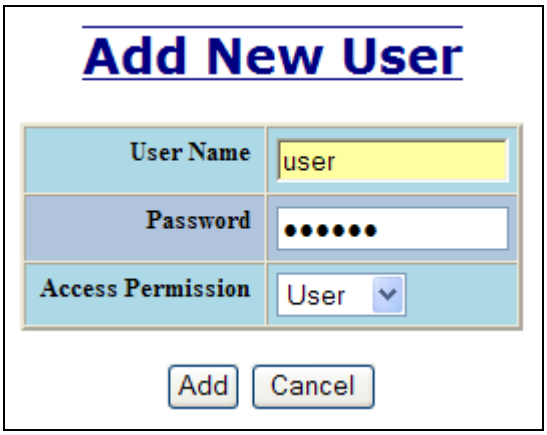

A page should display after the administrator clicks the Add button indicating that the user was successfully added.

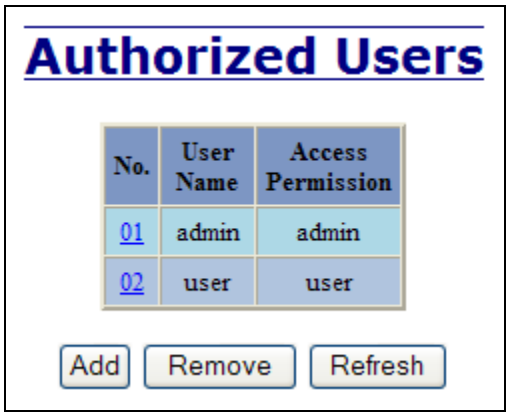

User Management – Removing Users

In order to remove a user, simply click on the Remove button at the bottom of the page.

Following the Remove button on the above example, the administrator can remove a user by entering in the user's name and clicking the Remove button.

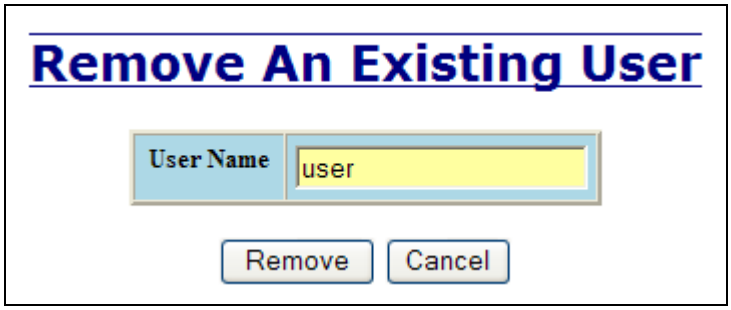

A page should follow indicating that the user was successfully removed from the list.

Note: *There are a maximum number of 5 users per switch. User permissions have the right to view switch configurations and to view current port settings, but cannot make any changes to these settings. Admin permissions have the right to change and view any switch configuration and to change and view any current port settings.*

LogicalView

The 7018 Web Management offers a logical view of the switch. Here a user or administrator can see a graphical depiction of the 7018 series switch. Ports that are linked will appear in green, while ports that are not linked will appear in black. The example below shows a 7018FX2 with ports 1, 2, and 8 linked. The other ports are currently in the down state (not being used).

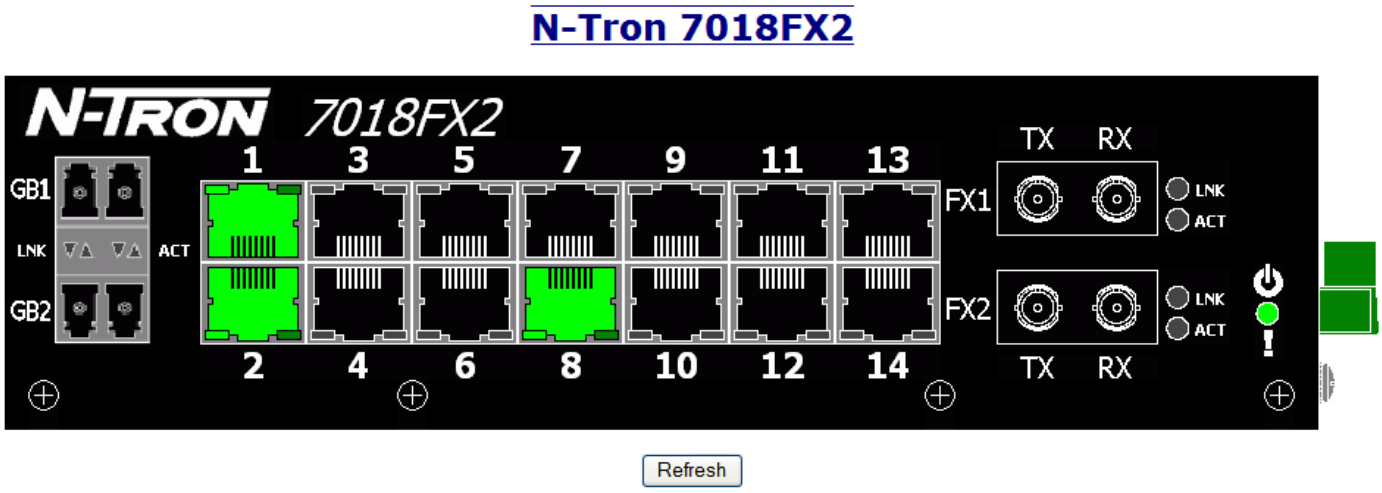

Configuration – Save or Reset

The Configuration section of web management gives an administrator the ability to save a running configuration into the NVRAM. This step is needed in order for the switch to remember any changes after a power cycle.

The “Save” button will save all current changes to the configuration for use after the next power cycle.

The “Reset” button will discard all unsaved changes, reset the switch and load the most recently saved configuration settings.

The “Factory” button will reload N-Tron’s factory default configuration settings. Doing so will reconfigure the 7018 Series switch to factory defaults. In many cases it is desirable to restore factory defaults but retain certain settings. Checkboxes are provided to select the desired behavior.

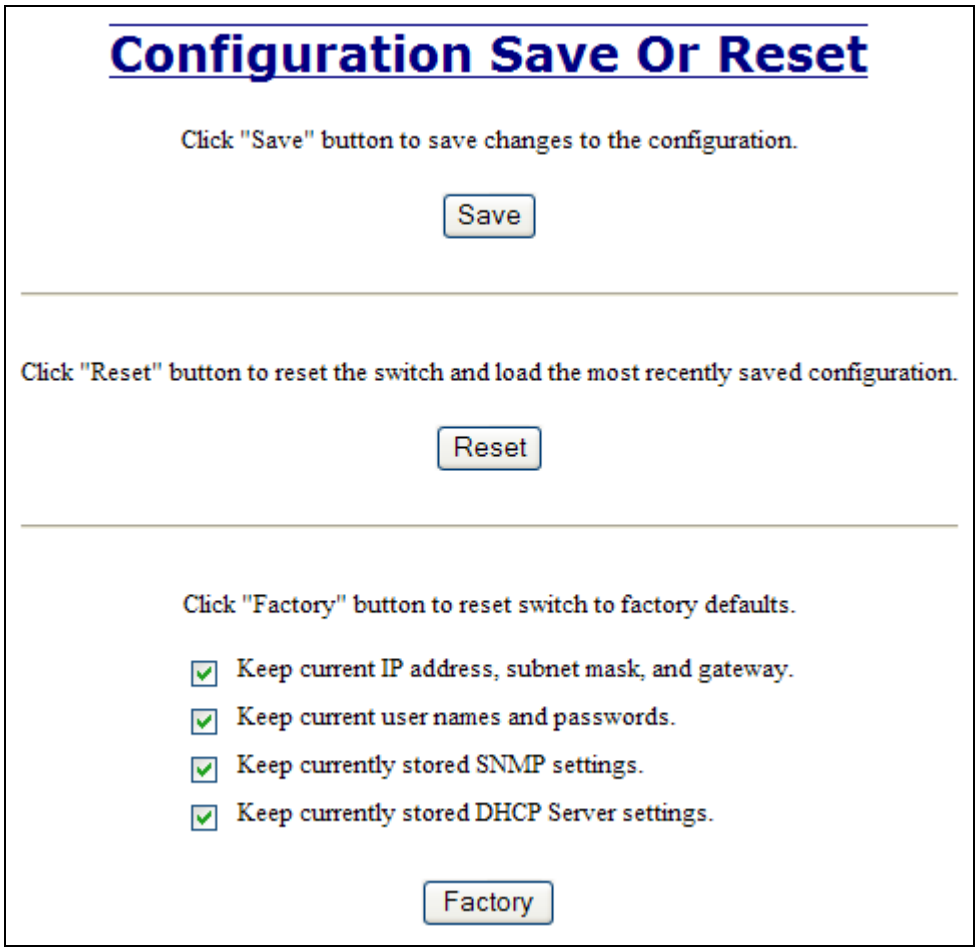
Configuration Save Or Reset
Click "Save" button to save changes to the configuration.
Save
Click "Reset" button to reset the switch and load the most recently saved configuration.
Reset
Click "Factory" button to reset switch to factory defaults.
Keep current IP address, subnet mask, and gateway.
Keep current user names and passwords.
Keep currently stored SNMP settings.
Keep currently stored DHCP Server settings.
Factory

Help

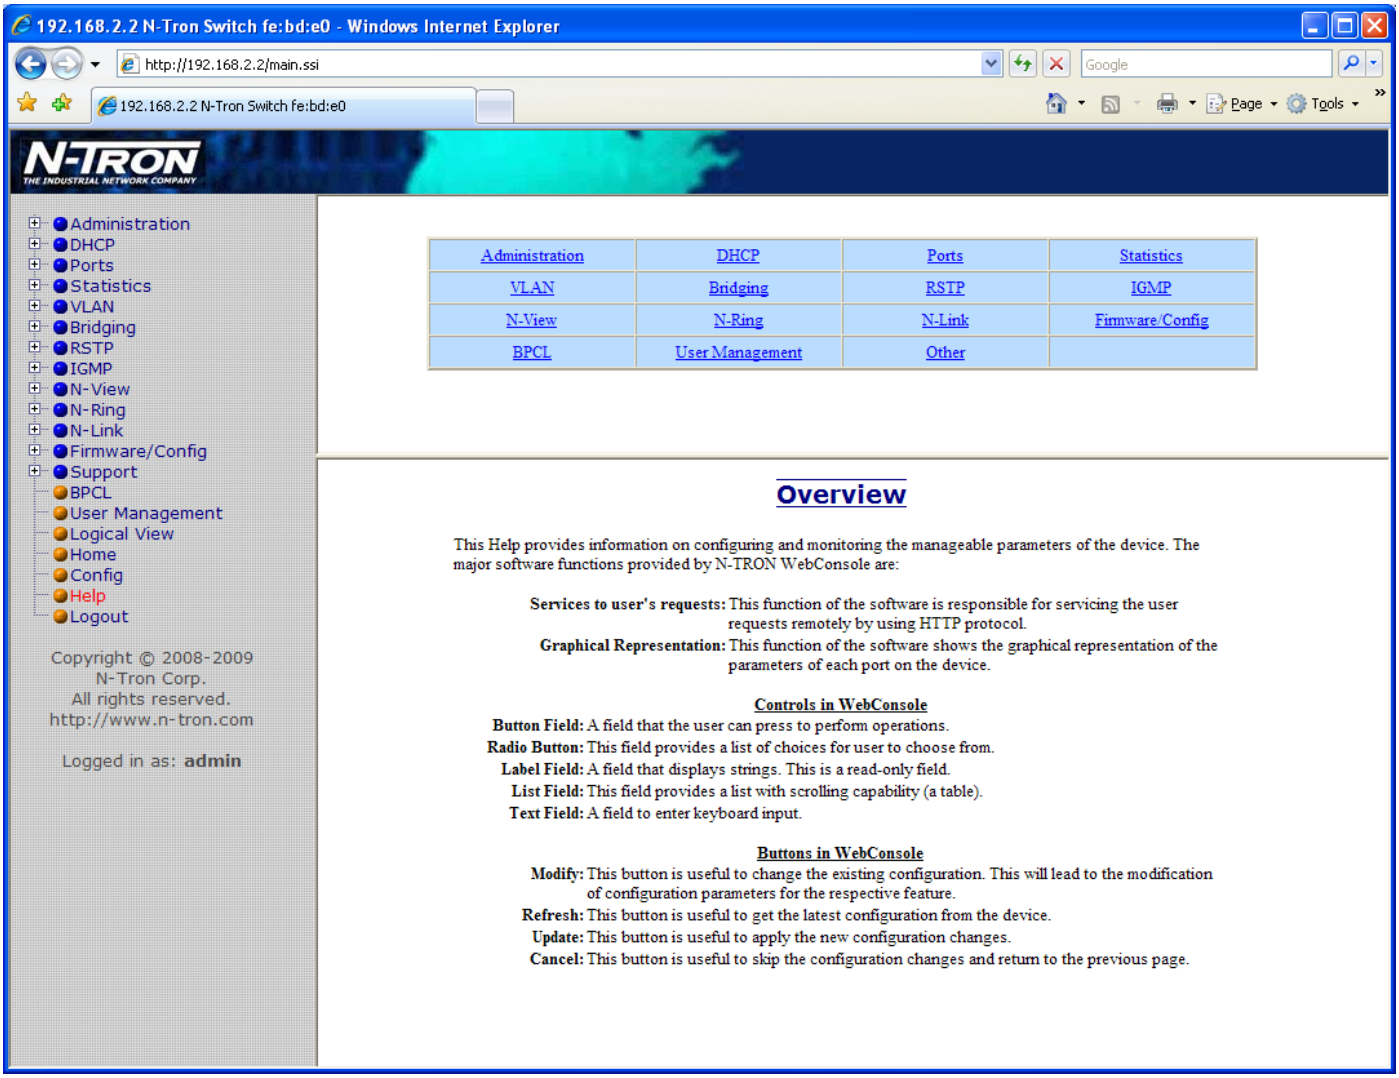
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Page
Tools
N-TRON
THE INDUSTRIAL NETWORK COMPANY
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
Overview
This Help provides information on configuring and monitoring the manageable parameters of the device. The major software functions provided by N-TRON WebConsole are:
Services to user's requests: This function of the software is responsible for servicing the user requests remotely by using HTTP protocol.
Graphical Representation: This function of the software shows the graphical representation of the parameters of each port on the device.
Controls in WebConsole
Button Field: A field that the user can press to perform operations.
Radio Button: This field provides a list of choices for user to choose from.
Label Field: A field that displays strings. This is a read-only field.
List Field: This field provides a list with scrolling capability (a table).
Text Field: A field to enter keyboard input.
Buttons in WebConsole
Modify: This button is useful to change the existing configuration. This will lead to the modification of configuration parameters for the respective feature.
Refresh: This button is useful to get the latest configuration from the device.
Update: This button is useful to apply the new configuration changes.
Cancel: This button is useful to skip the configuration changes and return to the previous page.

When the Help link is clicked on, you will see the Overview page that will have some basic definitions and more specific choices at the top of the screen. Although this page is not as detailed as the manual, it gives you a basic feel for different features the 7018 offers.

Help – Administration

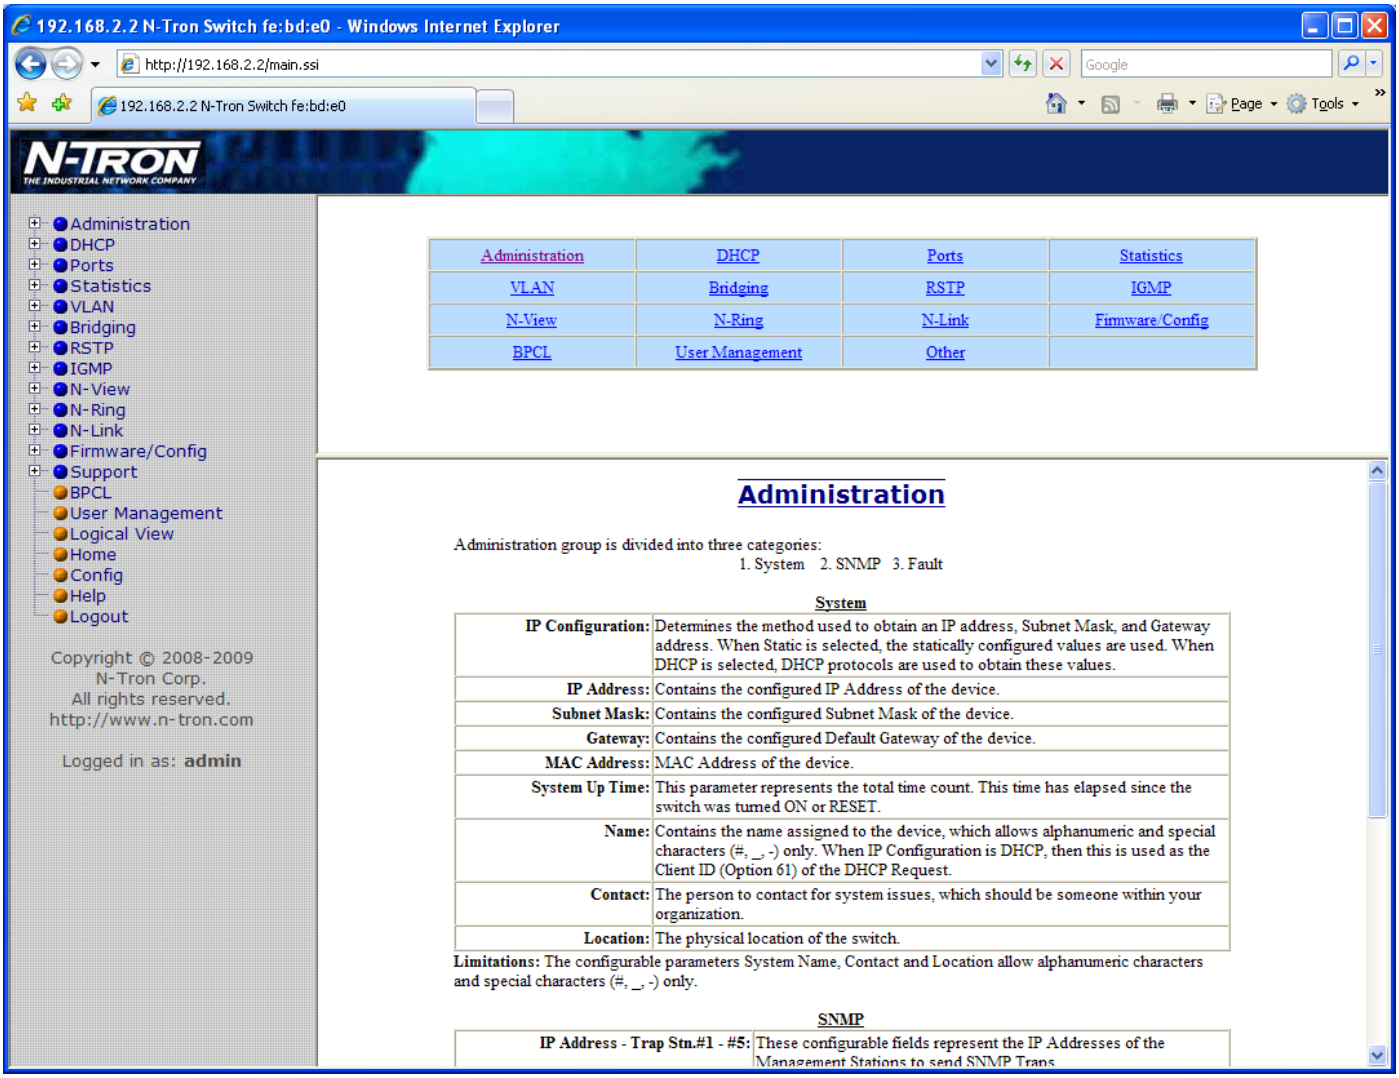
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
N-TRON
THE INDUSTRIAL NETWORK COMPANY
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
Administration
Administration group is divided into three categories:
1. System 2. SNMP 3. Fault
System
IP Configuration: Determines the method used to obtain an IP address, Subnet Mask, and Gateway address. When Static is selected, the statically configured values are used. When DHCP is selected, DHCP protocols are used to obtain these values.
IP Address: Contains the configured IP Address of the device.
Subnet Mask: Contains the configured Subnet Mask of the device.
Gateway: Contains the configured Default Gateway of the device.
MAC Address: MAC Address of the device.
System Up Time: This parameter represents the total time count. This time has elapsed since the switch was turned ON or RESET.
Name: Contains the name assigned to the device, which allows alphanumeric and special characters (#, _, -) only. When IP Configuration is DHCP, then this is used as the Client ID (Option 61) of the DHCP Request.
Contact: The person to contact for system issues, which should be someone within your organization.
Location: The physical location of the switch.
Limitations: The configurable parameters System Name, Contact and Location allow alphanumeric characters and special characters (#, _, -) only.
SNMP
IP Address - Trap Stn.#1 - #5: These configurable fields represent the IP Addresses of the Management Stations to send SNMP Traps

Following the Administration link on the help page, the administrator or user can see some information regarding the configuration options in the Administration category on the left side of the web management.

Help – DHCP

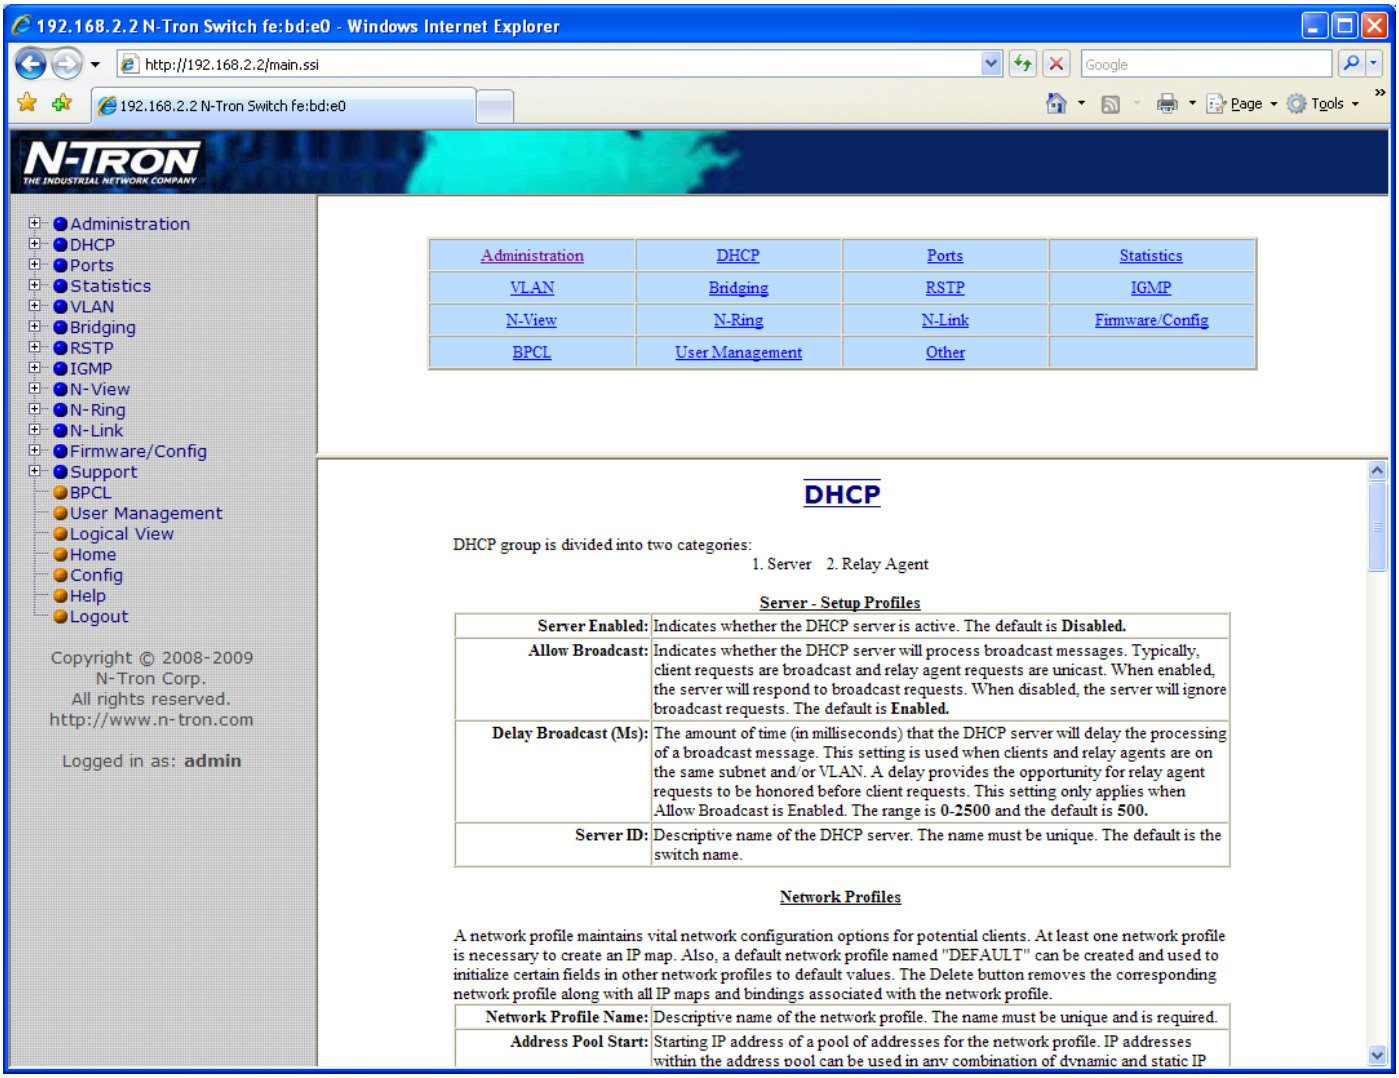
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
DHCP
DHCP group is divided into two categories:
1. Server 2. Relay Agent
Server - Setup Profiles
Server Enabled: Indicates whether the DHCP server is active. The default is Disabled.
Allow Broadcast: Indicates whether the DHCP server will process broadcast messages. Typically, client requests are broadcast and relay agent requests are unicast. When enabled, the server will respond to broadcast requests. When disabled, the server will ignore broadcast requests. The default is Enabled.
Delay Broadcast (Ms): The amount of time (in milliseconds) that the DHCP server will delay the processing of a broadcast message. This setting is used when clients and relay agents are on the same subnet and/or VLAN. A delay provides the opportunity for relay agent requests to be honored before client requests. This setting only applies when Allow Broadcast is Enabled. The range is 0-2500 and the default is 500.
Server ID: Descriptive name of the DHCP server. The name must be unique. The default is the switch name.
Network Profiles
A network profile maintains vital network configuration options for potential clients. At least one network profile is necessary to create an IP map. Also, a default network profile named "DEFAULT" can be created and used to initialize certain fields in other network profiles to default values. The Delete button removes the corresponding network profile along with all IP maps and bindings associated with the network profile.
Network Profile Name: Descriptive name of the network profile. The name must be unique and is required.
Address Pool Start: Starting IP address of a pool of addresses for the network profile. IP addresses

Following the DHCP link on the help page, the administrator or user can see some information regarding the configuration options under the DHCP categories on the left side of the web management.

Help – Ports

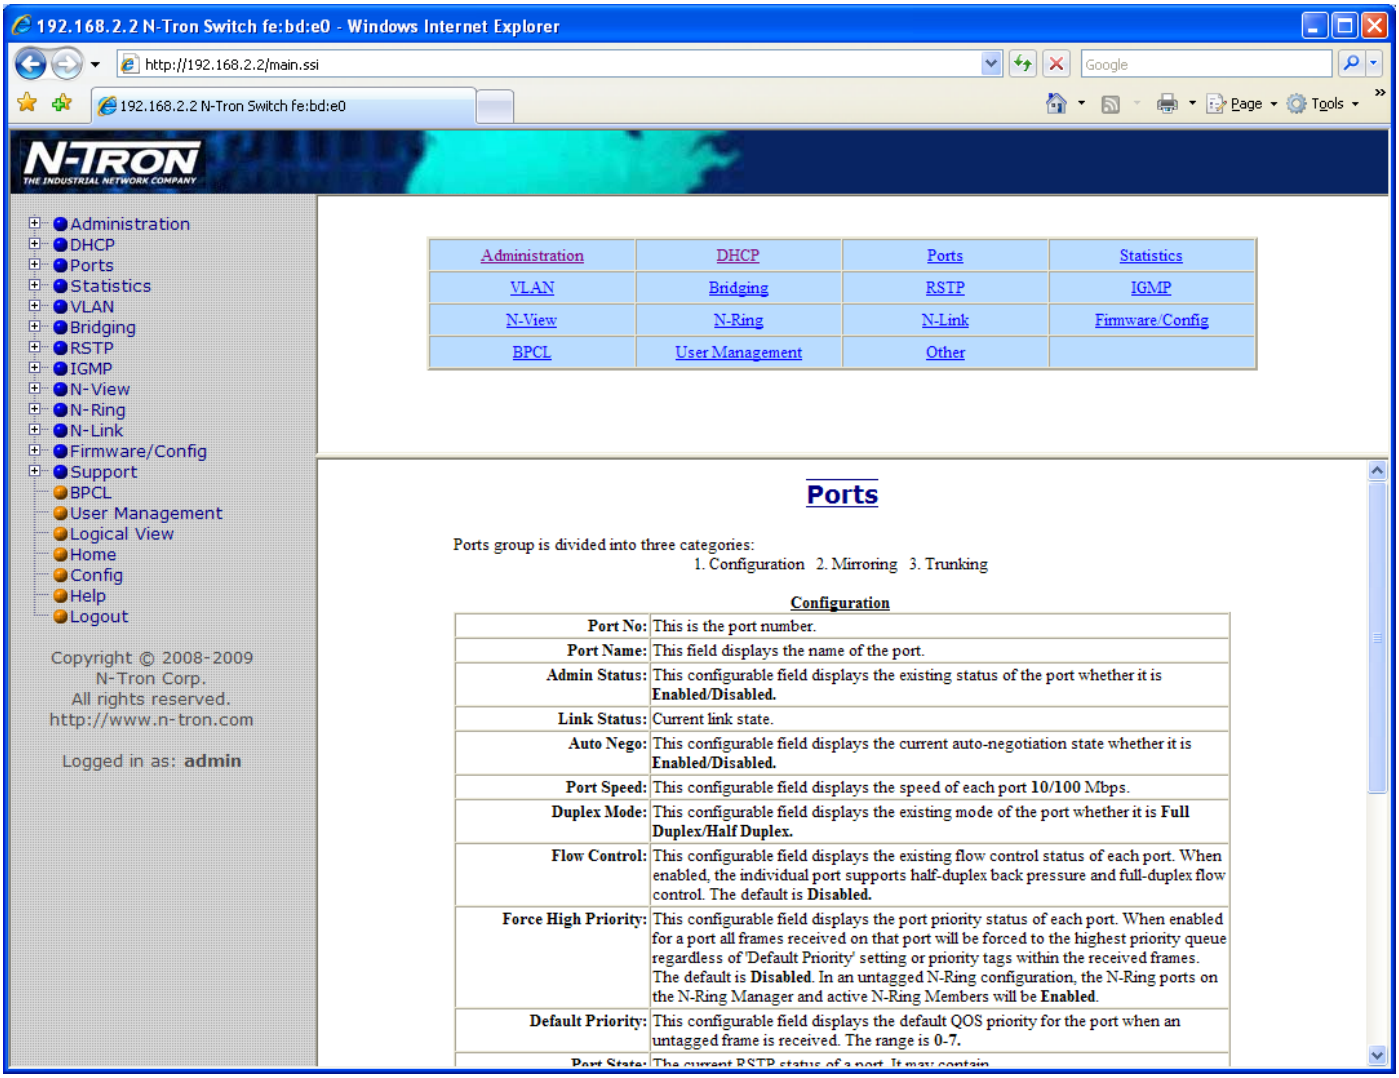
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
Ports
Ports group is divided into three categories:
1. Configuration 2. Mirroring 3. Trunking
Configuration
Port No: This is the port number.
Port Name: This field displays the name of the port.
Admin Status: This configurable field displays the existing status of the port whether it is Enabled/Disabled.
Link Status: Current link state.
Auto Nego: This configurable field displays the current auto-negotiation state whether it is Enabled/Disabled.
Port Speed: This configurable field displays the speed of each port 10/100 Mbps.
Duplex Mode: This configurable field displays the existing mode of the port whether it is Full Duplex/Half Duplex.
Flow Control: This configurable field displays the existing flow control status of each port. When enabled, the individual port supports half-duplex back pressure and full-duplex flow control. The default is Disabled.
Force High Priority: This configurable field displays the port priority status of each port. When enabled for a port all frames received on that port will be forced to the highest priority queue regardless of 'Default Priority' setting or priority tags within the received frames. The default is Disabled. In an untagged N-Ring configuration, the N-Ring ports on the N-Ring Manager and active N-Ring Members will be Enabled.
Default Priority: This configurable field displays the default QOS priority for the port when an untagged frame is received. The range is 0-7.

Following the Ports link on the help page, the administrator or user can see some information regarding the configuration options in the Ports category on the left side of the web management.

Help – Statistics

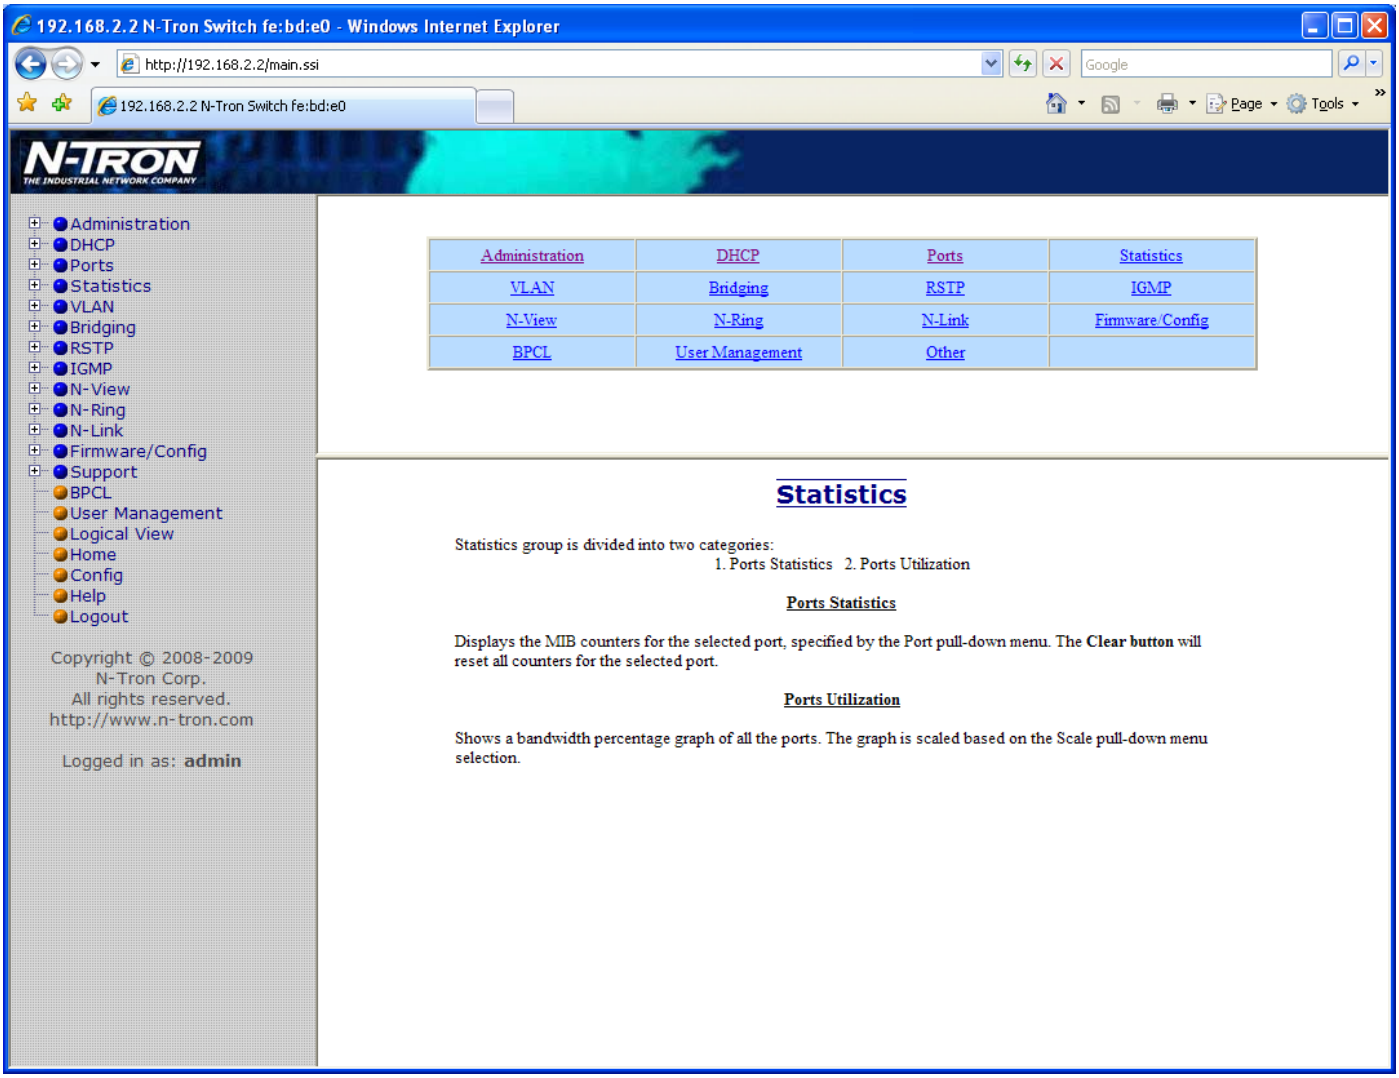

Following the Statistics link on the help page, the administrator or user can see some information regarding the configuration options in the Statistics category on the left side of the web management.

Help – VLAN

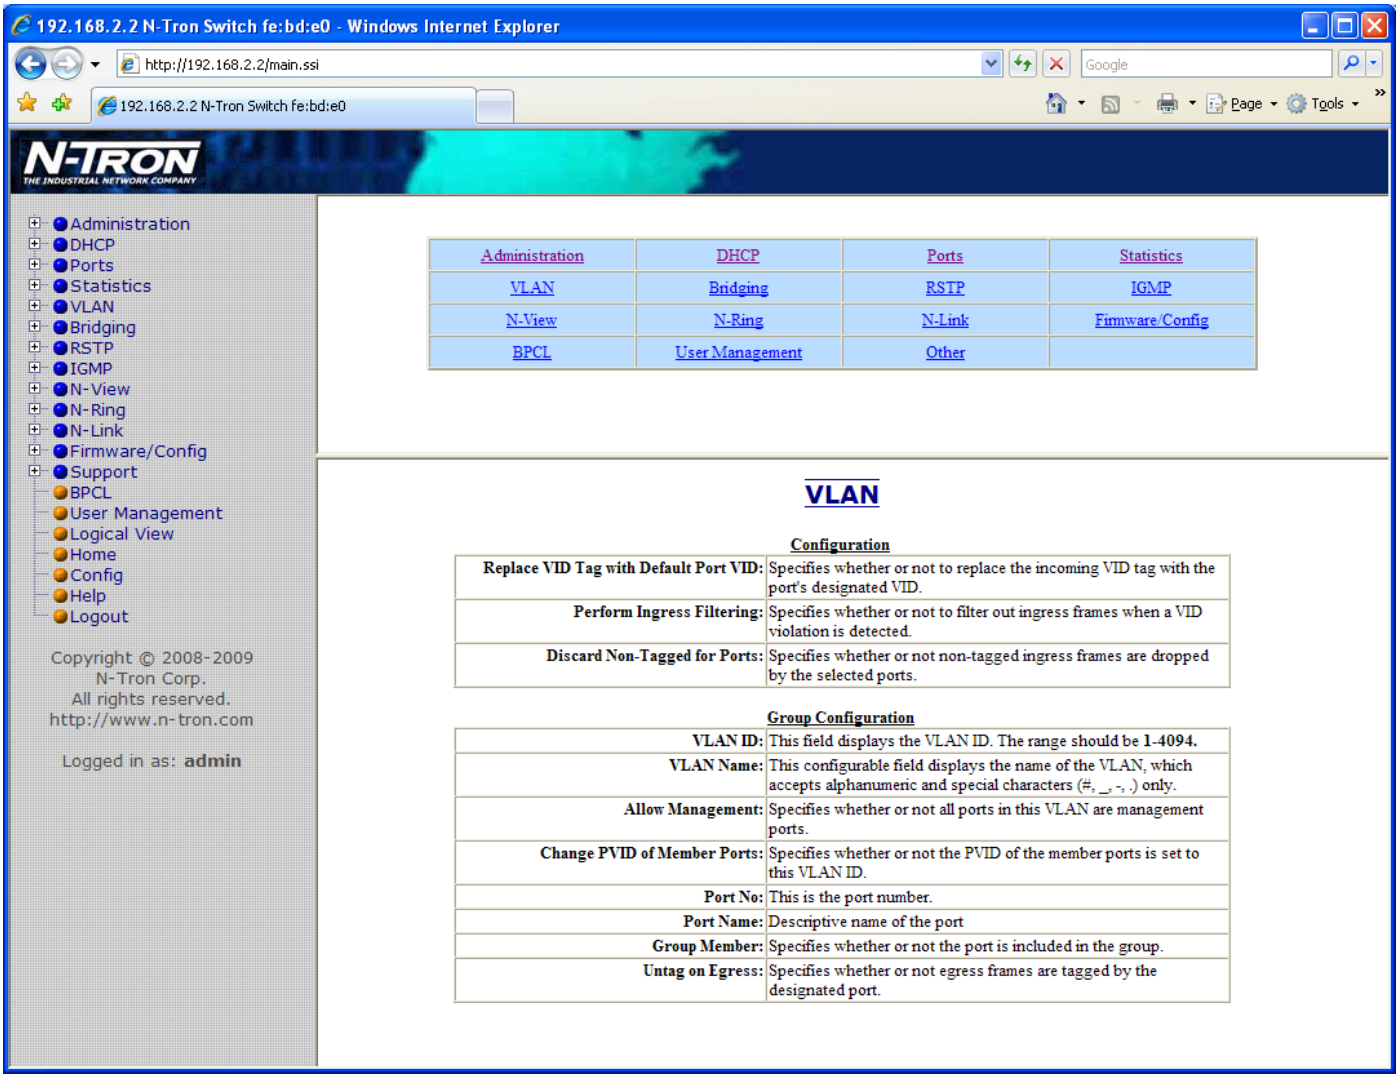
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
N-TRON
THE INDUSTRIAL NETWORK COMPANY
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
VLAN
Configuration
Replace VID Tag with Default Port VID: Specifies whether or not to replace the incoming VID tag with the port's designated VID.
Perform Ingress Filtering: Specifies whether or not to filter out ingress frames when a VID violation is detected.
Discard Non-Tagged for Ports: Specifies whether or not non-tagged ingress frames are dropped by the selected ports.
Group Configuration
VLAN ID: This field displays the VLAN ID. The range should be 1-4094.
VLAN Name: This configurable field displays the name of the VLAN, which accepts alphanumeric and special characters (#, _, -, .) only.
Allow Management: Specifies whether or not all ports in this VLAN are management ports.
Change PVID of Member Ports: Specifies whether or not the PVID of the member ports is set to this VLAN ID.
Port No: This is the port number.
Port Name: Descriptive name of the port
Group Member: Specifies whether or not the port is included in the group.
Untag on Egress: Specifies whether or not egress frames are tagged by the designated port.

Following the VLAN link on the help page, the administrator or user can see some information regarding the configuration options in the VLAN category on the left side of the web management.

Help – BPCL

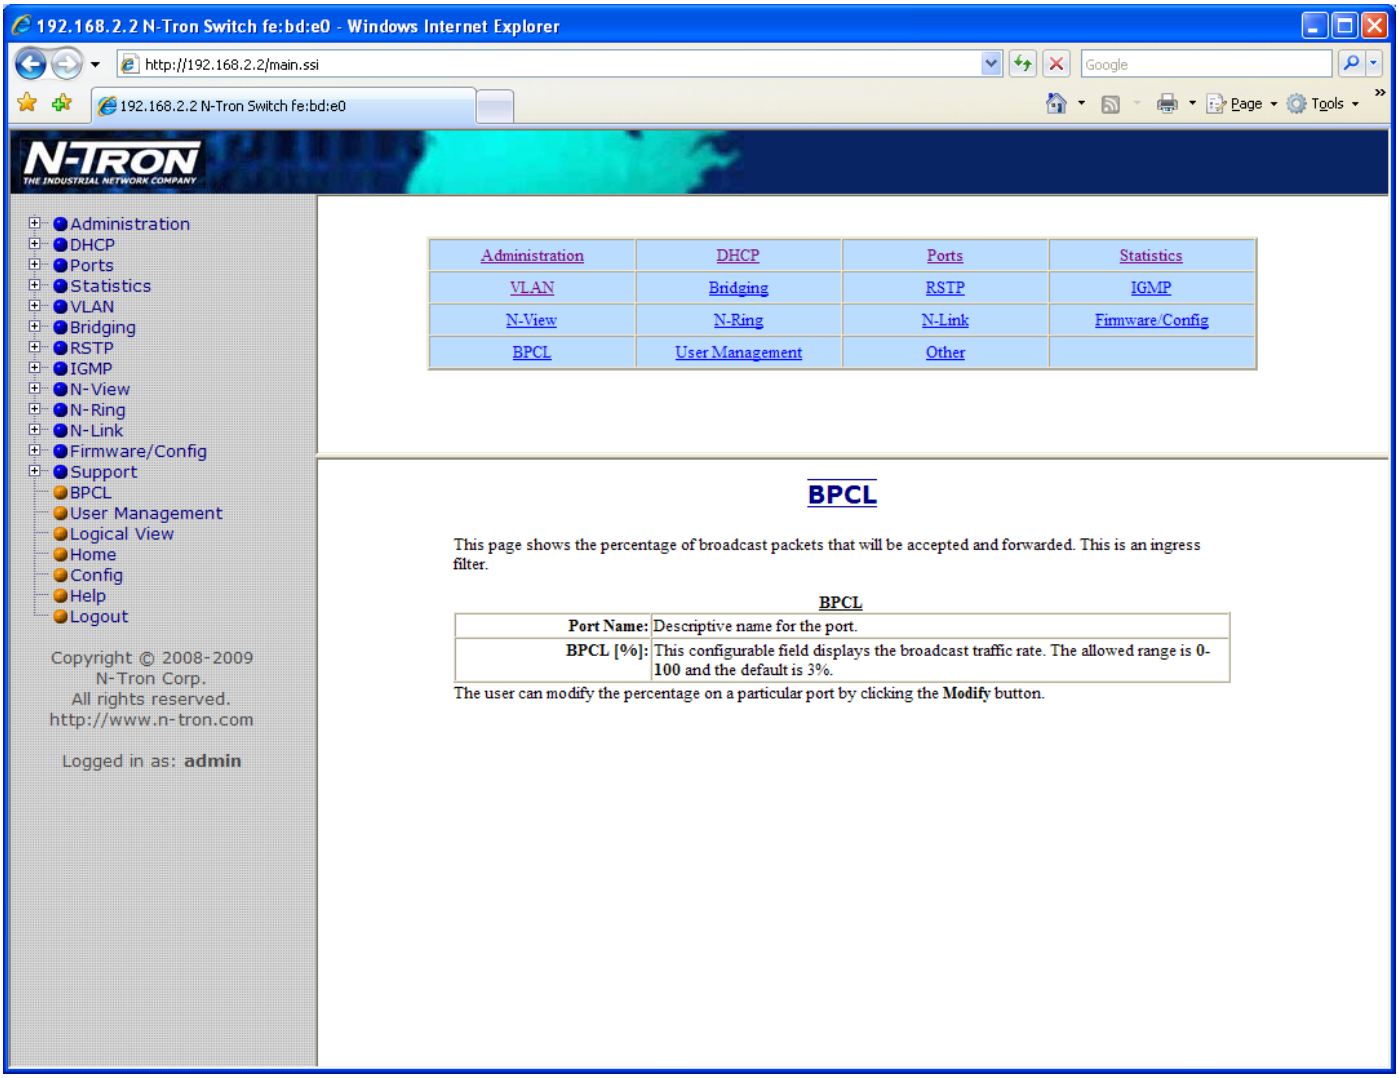

Following the BPCL link on the help page, the administrator or user can see some information regarding the configuration options in the BPCL category on the left side of the web management.

Help – IGMP

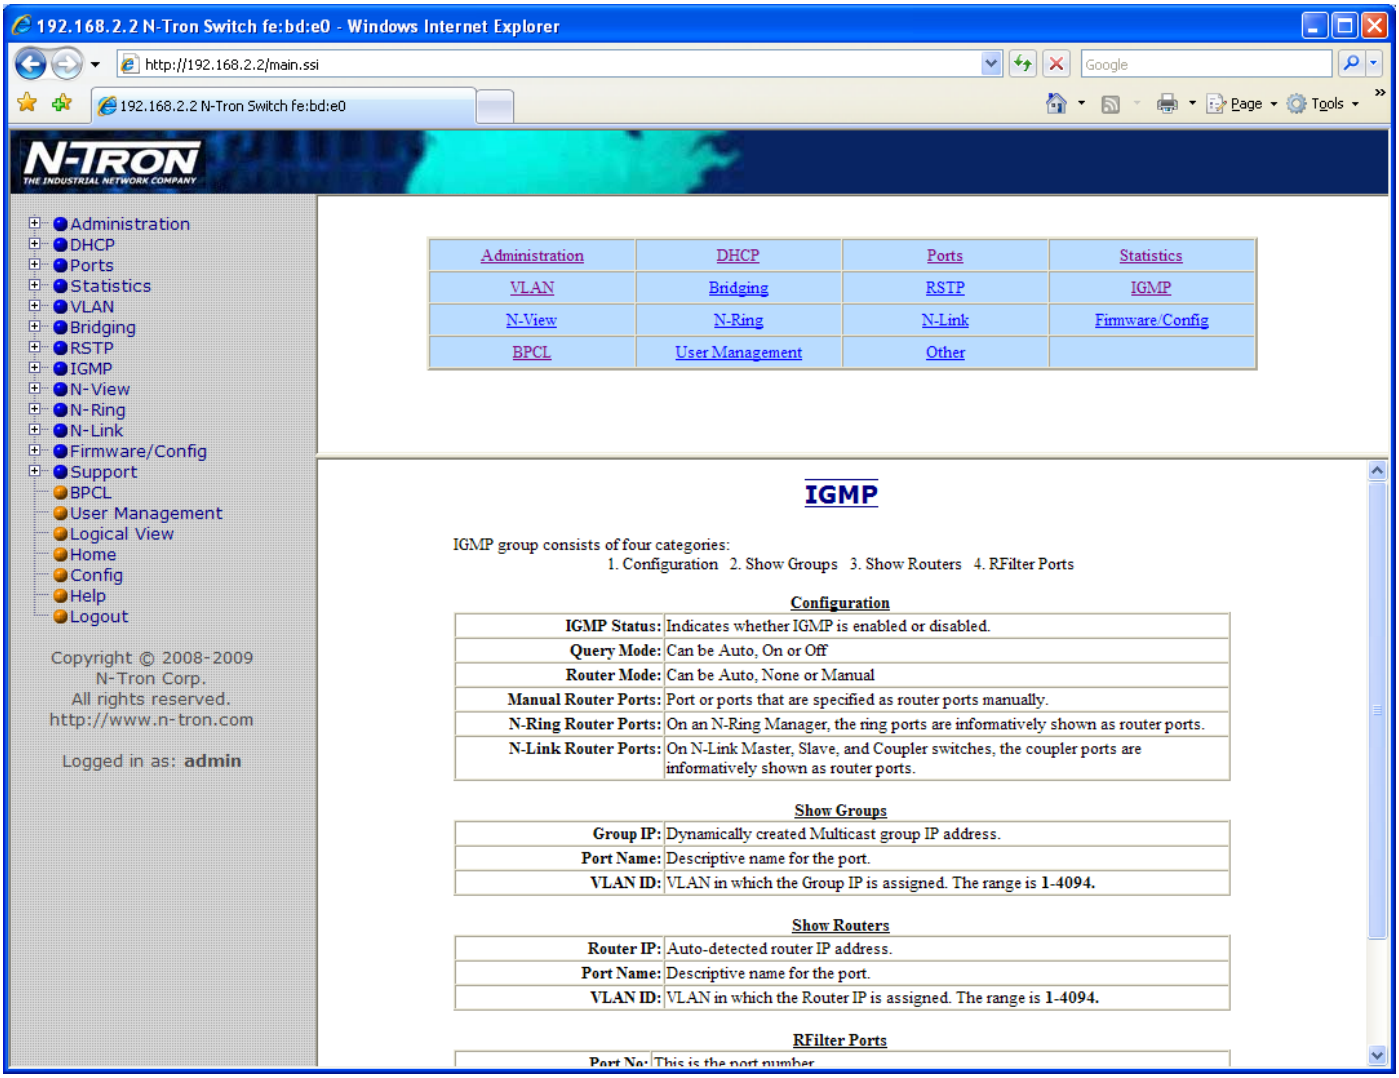
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009 N-Tron Corp. All rights reserved. http://www.n-tron.com
Logged in as: admin
IGMP
IGMP group consists of four categories:
1. Configuration 2. Show Groups 3. Show Routers 4. RFilter Ports
Configuration
IGMP Status: Indicates whether IGMP is enabled or disabled.
Query Mode: Can be Auto, On or Off
Router Mode: Can be Auto, None or Manual
Manual Router Ports: Port or ports that are specified as router ports manually.
N-Ring Router Ports: On an N-Ring Manager, the ring ports are informatively shown as router ports.
N-Link Router Ports: On N-Link Master, Slave, and Coupler switches, the coupler ports are informatively shown as router ports.
Show Groups
Group IP: Dynamically created Multicast group IP address.
Port Name: Descriptive name for the port.
VLAN ID: VLAN in which the Group IP is assigned. The range is 1-4094.
Show Routers
Router IP: Auto-detected router IP address.
Port Name: Descriptive name for the port.
VLAN ID: VLAN in which the Router IP is assigned. The range is 1-4094.
RFilter Ports

Following the IGMP link on the help page, the administrator or user can see some information regarding the configuration options in the IGMP category on the left side of the web management.

Help – Bridging

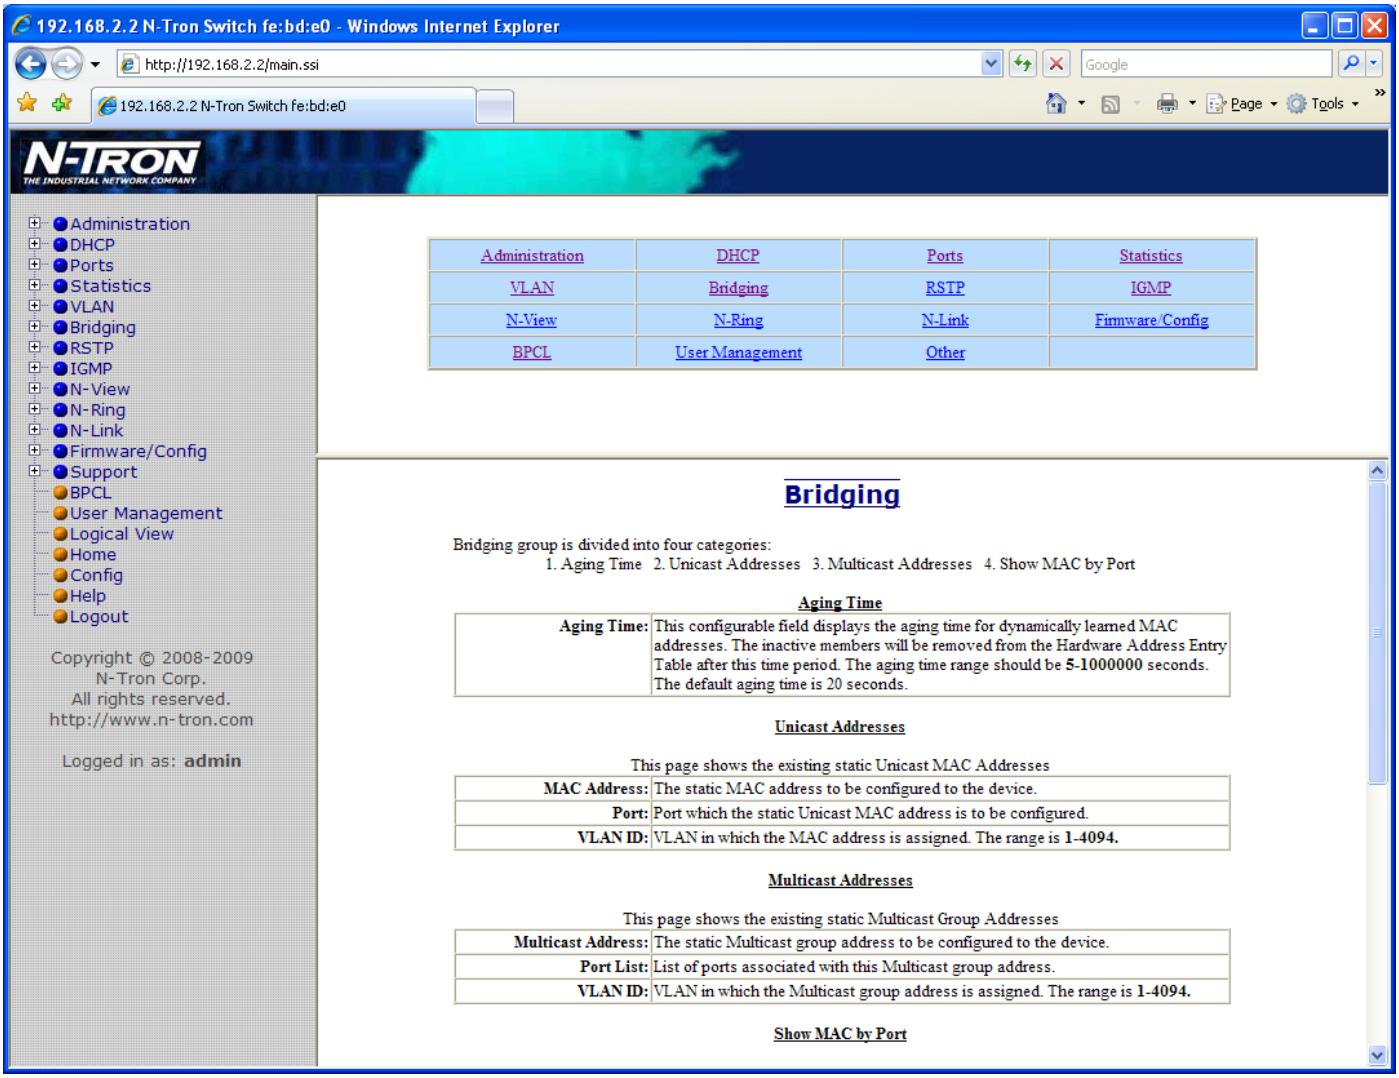
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
Bridging
Bridging group is divided into four categories:
1. Aging Time 2. Unicast Addresses 3. Multicast Addresses 4. Show MAC by Port
Aging Time
Aging Time: This configurable field displays the aging time for dynamically learned MAC addresses. The inactive members will be removed from the Hardware Address Entry Table after this time period. The aging time range should be 5-1000000 seconds. The default aging time is 20 seconds.
Unicast Addresses
This page shows the existing static Unicast MAC Addresses
MAC Address: The static MAC address to be configured to the device.
Port: Port which the static Unicast MAC address is to be configured.
VLAN ID: VLAN in which the MAC address is assigned. The range is 1-4094.
Multicast Addresses
This page shows the existing static Multicast Group Addresses
Multicast Address: The static Multicast group address to be configured to the device.
Port List: List of ports associated with this Multicast group address.
VLAN ID: VLAN in which the Multicast group address is assigned. The range is 1-4094.
Show MAC by Port

Following the Bridging link on the help page, the administrator or user can see some information regarding the configuration options in the Bridging category on the left side of the web management.

Help – RSTP

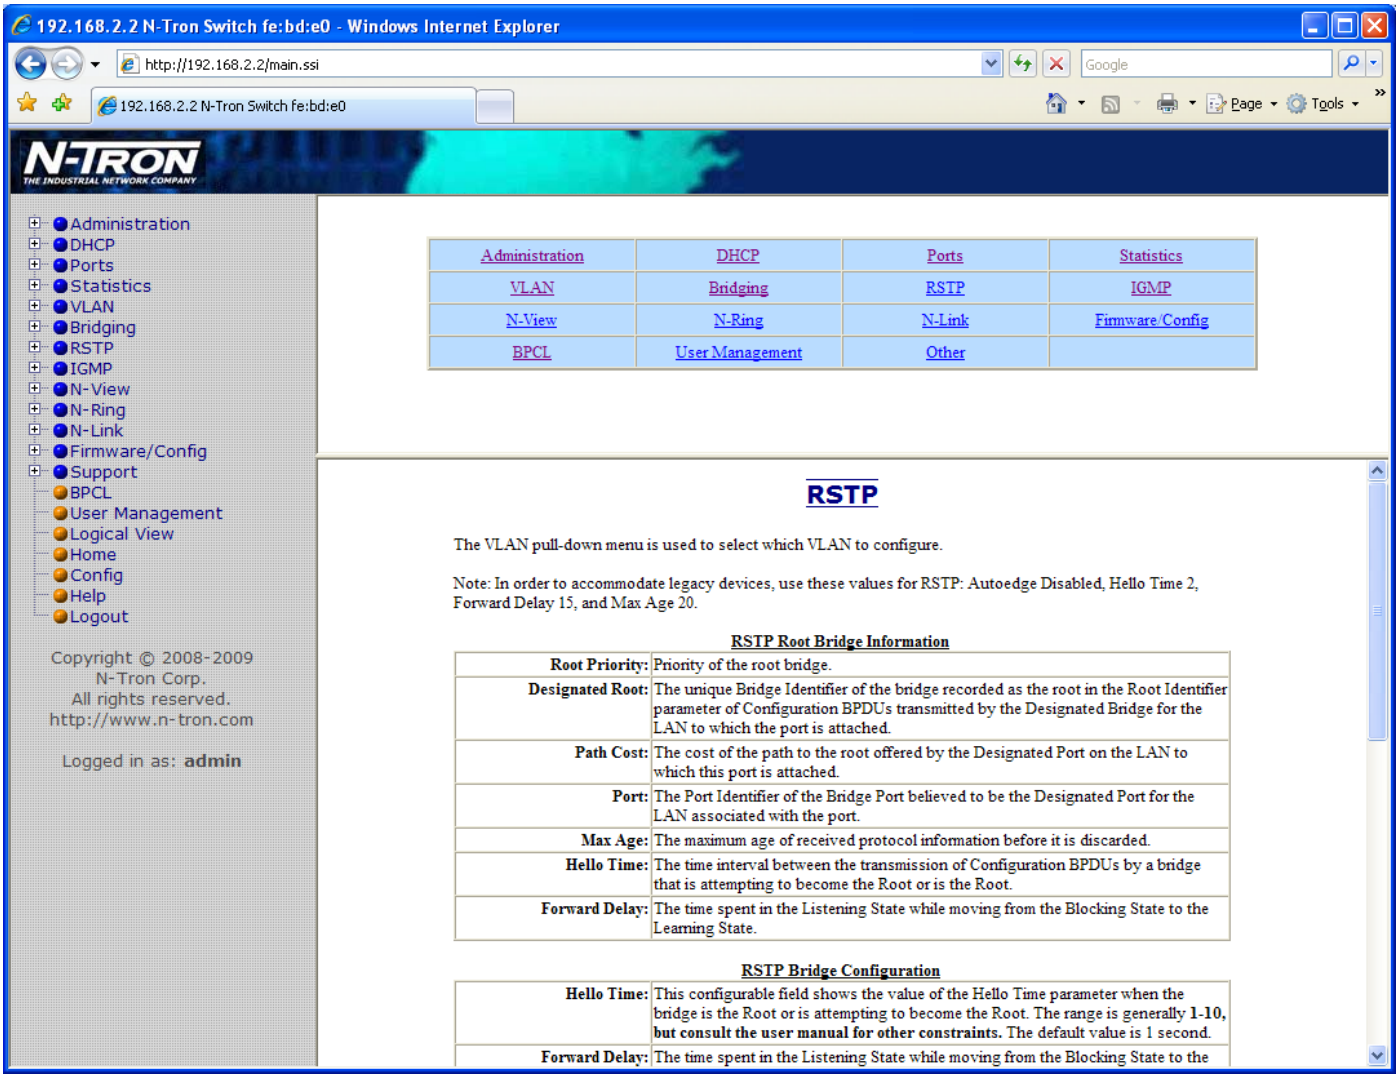
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009 N-Tron Corp. All rights reserved. http://www.n-tron.com
Logged in as: admin
RSTP
The VLAN pull-down menu is used to select which VLAN to configure.
Note: In order to accommodate legacy devices, use these values for RSTP: Autoedge Disabled, Hello Time 2, Forward Delay 15, and Max Age 20.
RSTP Root Bridge Information
Root Priority: Priority of the root bridge.
Designated Root: The unique Bridge Identifier of the bridge recorded as the root in the Root Identifier parameter of Configuration BPDUs transmitted by the Designated Bridge for the LAN to which the port is attached.
Path Cost: The cost of the path to the root offered by the Designated Port on the LAN to which this port is attached.
Port: The Port Identifier of the Bridge Port believed to be the Designated Port for the LAN associated with the port.
Max Age: The maximum age of received protocol information before it is discarded.
Hello Time: The time interval between the transmission of Configuration BPDUs by a bridge that is attempting to become the Root or is the Root.
Forward Delay: The time spent in the Listening State while moving from the Blocking State to the Learning State.
RSTP Bridge Configuration
Hello Time: This configurable field shows the value of the Hello Time parameter when the bridge is the Root or is attempting to become the Root. The range is generally 1-10, but consult the user manual for other constraints. The default value is 1 second.
Forward Delay: The time spent in the Listening State while moving from the Blocking State to the

Following the RSTP link on the help page, the administrator or user can see some information regarding the configuration options in the RSTP category on the left side of the web management.

Help – Firmware/Config

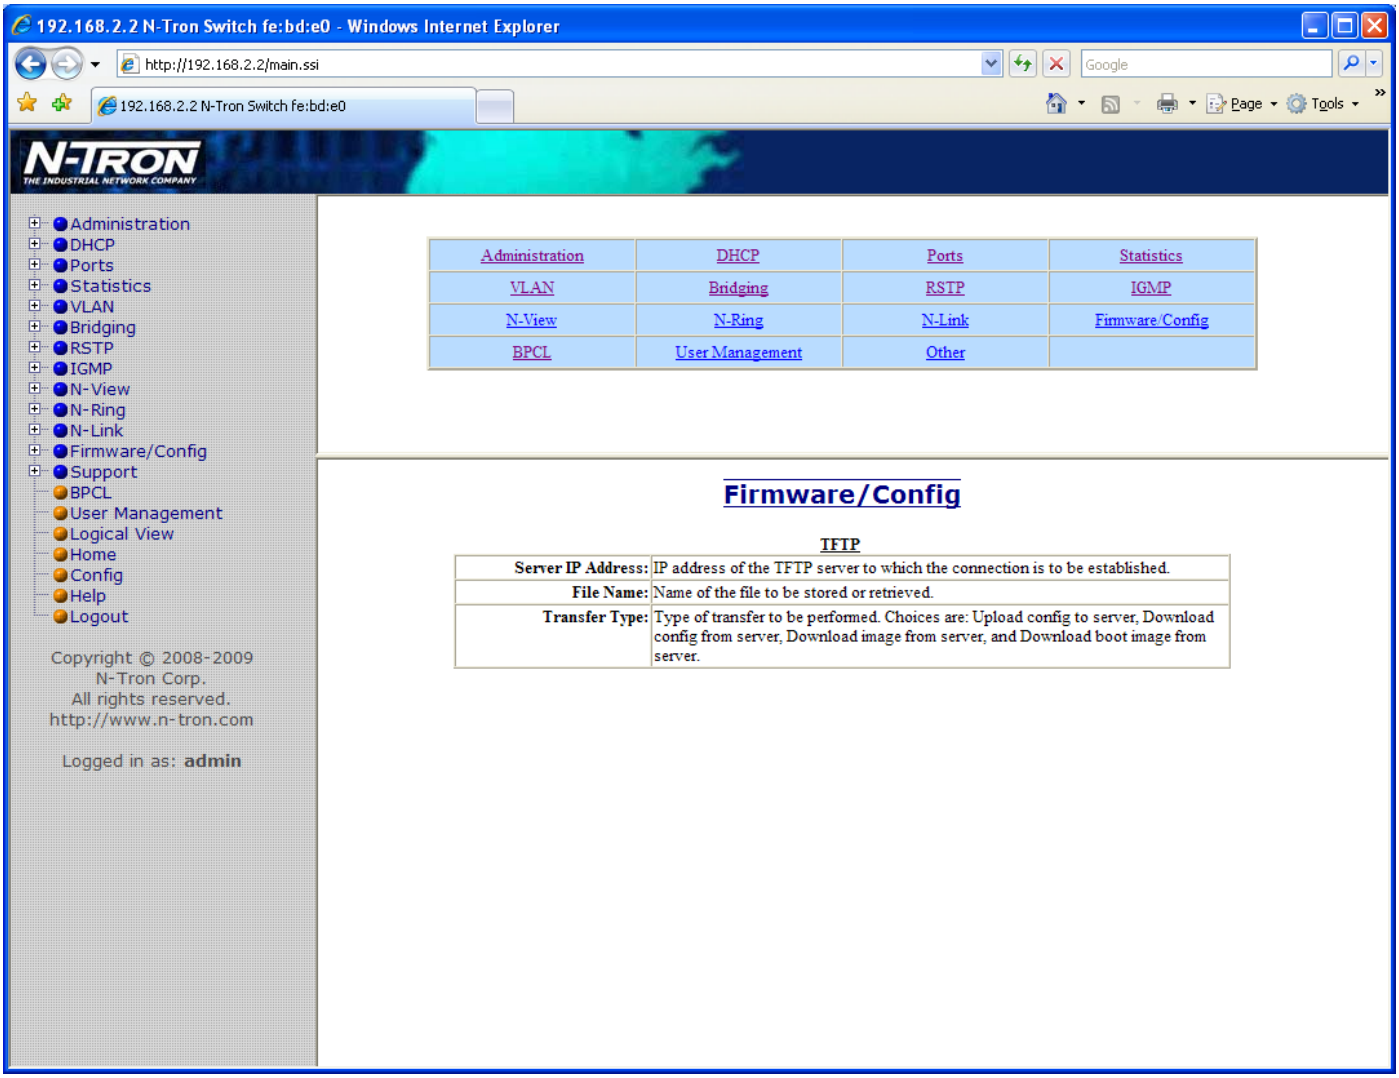

Following the Firmware/Config link on the help page, the administrator or user can see some information regarding the configuration options in the Firmware/Config category on the left side of the web management.

Help – User Management

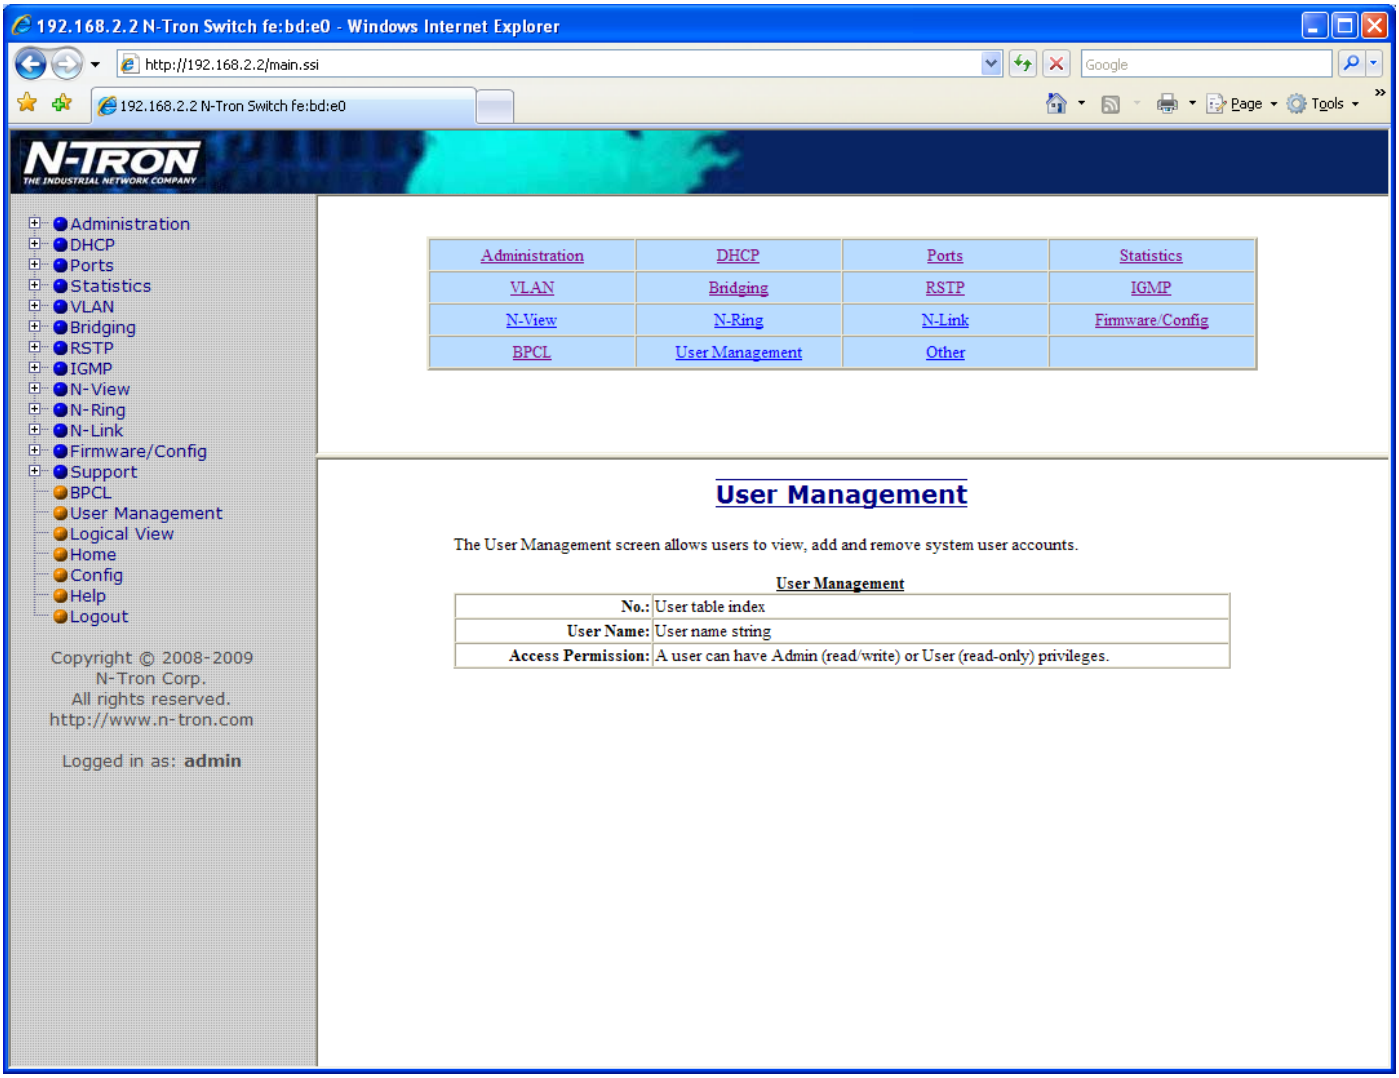

Following the User Management link on the help page, the administrator or user can see some information regarding the configuration options in the User Management category on the left side of the web management.

Help – N-View

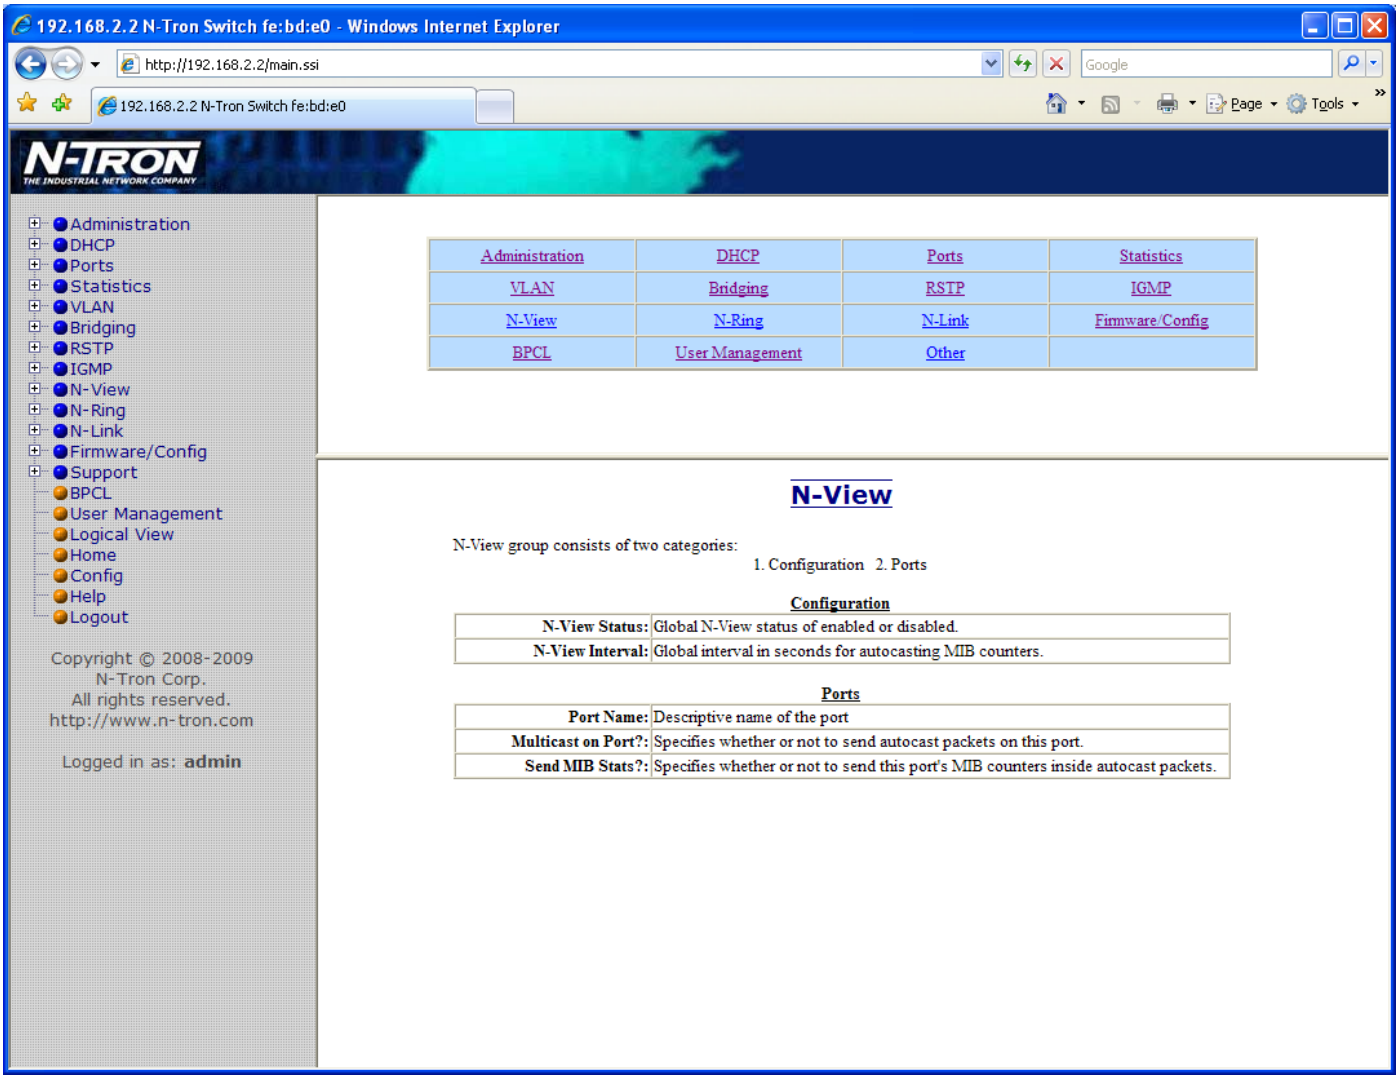

Following the N-View link on the help page, the administrator or user can see some information regarding the configuration options in the N-View category on the left side of the web management.

Help – N-Ring

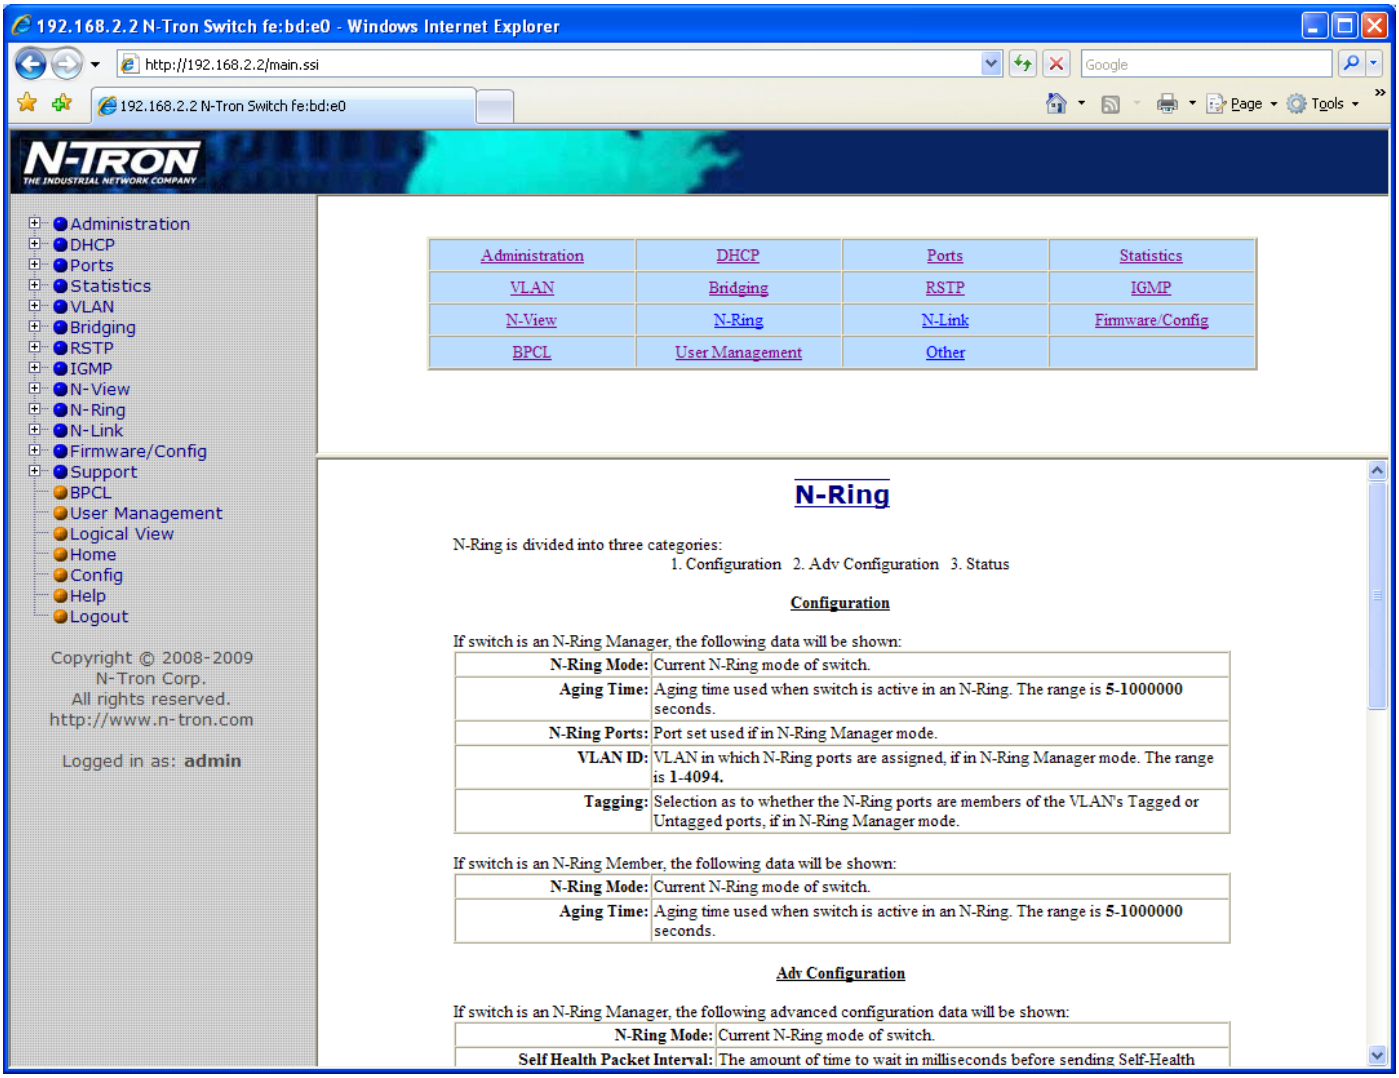

Following the N-Ring link on the help page, the administrator or user can see some information regarding the configuration options in the N-Ring category on the left side of the web management.

Help – N-Link

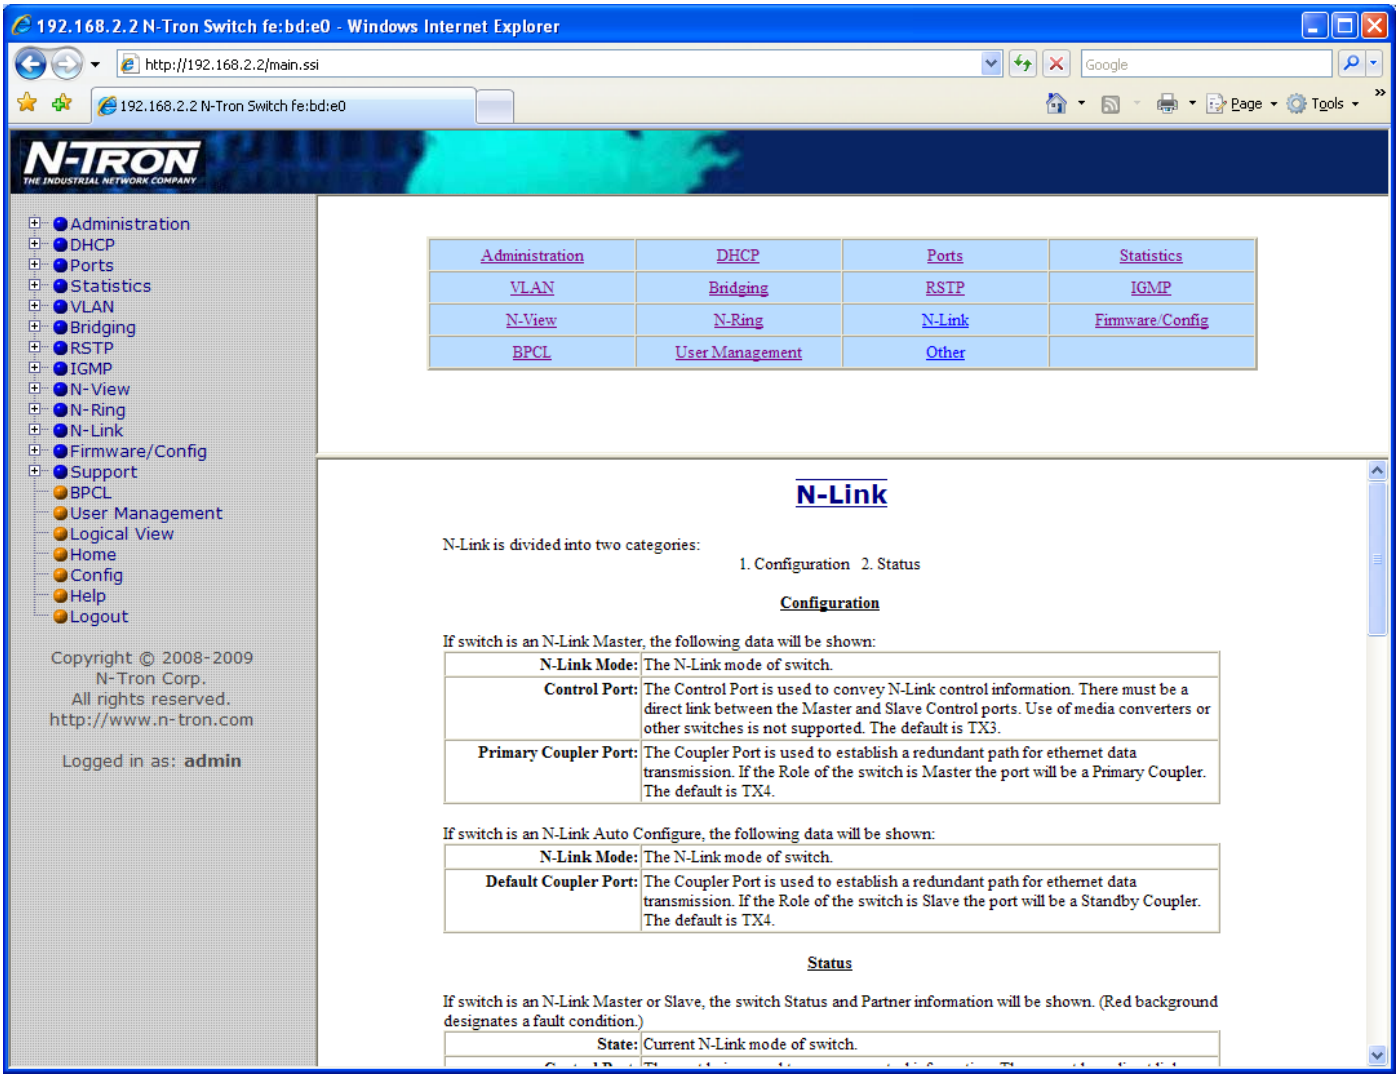
192.168.2.2 N-Tron Switch fe:bd:e0 - Windows Internet Explorer
http://192.168.2.2/main.ssi
192.168.2.2 N-Tron Switch fe:bd:e0
Page
Tools
N-TRON
THE INDUSTRIAL NETWORK COMPANY
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
Support
BPCL
User Management
Logical View
Home
Config
Help
Logout
Copyright © 2008-2009
N-Tron Corp.
All rights reserved.
http://www.n-tron.com
Logged in as: admin
Administration
DHCP
Ports
Statistics
VLAN
Bridging
RSTP
IGMP
N-View
N-Ring
N-Link
Firmware/Config
BPCL
User Management
Other
N-Link
N-Link is divided into two categories:
1. Configuration 2. Status
Configuration
If switch is an N-Link Master, the following data will be shown:
N-Link Mode: The N-Link mode of switch.
Control Port: The Control Port is used to convey N-Link control information. There must be a direct link between the Master and Slave Control ports. Use of media converters or other switches is not supported. The default is TX3.
Primary Coupler Port: The Coupler Port is used to establish a redundant path for ethernet data transmission. If the Role of the switch is Master the port will be a Primary Coupler. The default is TX4.
If switch is an N-Link Auto Configure, the following data will be shown:
N-Link Mode: The N-Link mode of switch.
Default Coupler Port: The Coupler Port is used to establish a redundant path for ethernet data transmission. If the Role of the switch is Slave the port will be a Standby Coupler. The default is TX4.
Status
If switch is an N-Link Master or Slave, the switch Status and Partner information will be shown. (Red background designates a fault condition.)
State: Current N-Link mode of switch.

Following the N-Link link on the help page, the administrator or user can see some information regarding the configuration options in the N-Link category on the left side of the web management.

Help – Other

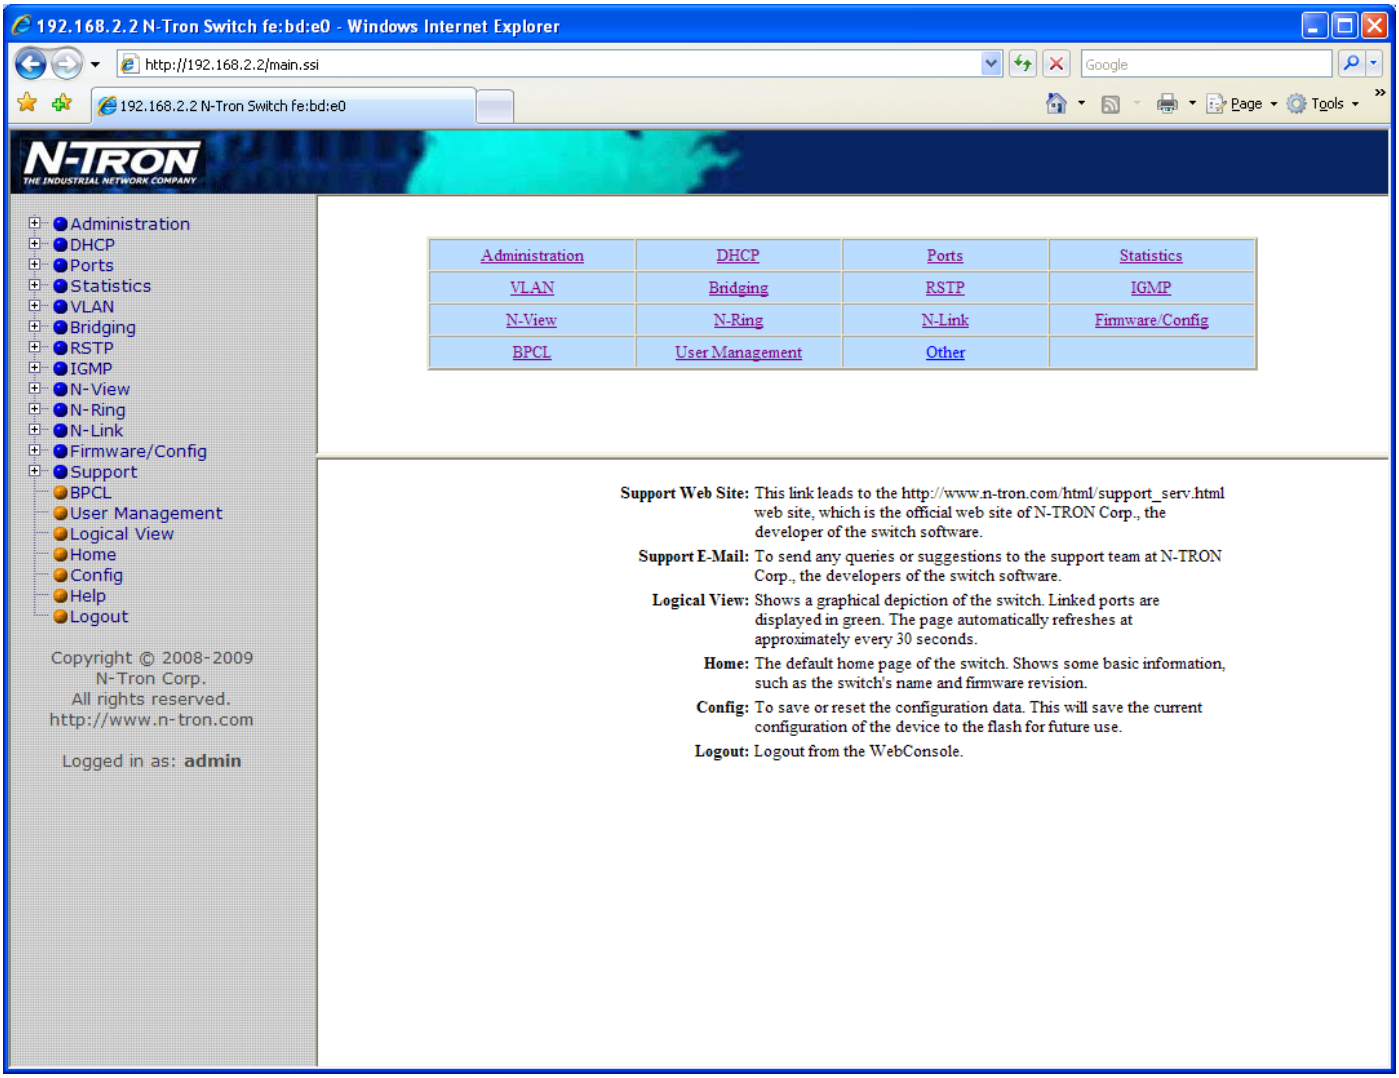

Following the Other link on the help page, the administrator or user can see some information regarding other links or categories on the left hand side of the web manager, as above.

CLI Commands

"?" (Help)

Command Name	**"?"**
Description	Show a list of all commands or get help on a specific command. Without *cmd*, this command will list all the available commands. If *cmd* is specified and if it matches a specific command, the **usage** of the command will be displayed; otherwise, if *cmd* matches the prefix of a command, the name of the command will be listed. If **?** is preceded by another **?**, the usage and description of this command will be displayed.
Syntax	**?** [cmd]
Parameters	**cmd** The command for which to get help.
Examples	**N-TRON/Admin> ?** *The above command displays all the available commands.* **N-TRON/Admin> abcd ?** Unknown Command: "abcd" Type "?" for a list of available commands. **N-TRON/Admin> logout ?** Logout Log out of console interface. SYNTAX: Logout **N-TRON/Admin> ? pi** Ping Ping a host. … **N-TRON/Admin> ? ?** ? Show a list of all commands or get help on a specific command. SYNTAX: ? [cmd] OPTIONS: cmd : The command for which to get help.
NOTES	

Logout

Command Name	**logout**
Description	Log out of console interface
Syntax	**logout**
Parameters	**None**
Examples	**N-TRON/Admin> logout**
NOTES	

CLI Commands, Continued…

Show, Add, or Delete ARL Entries

Command Name	**arl**
Description	Show, Add, or Delete Arl Entries.
Syntax	**arl** show | showmct | add mac port cpu static vid | del[ete] mac vid
Parameters	**show** Show entire ARL table. **showmct** Show entire ARL MCT (Multicast Index) table. **delete** Delete MAC address. **add** Add MAC address. **mac** MAC Address. **port** Port Number. **cpu** 1 = Send to CPU also. **static** 1 = This is a static address; 0 = Non-Static. **vid** VLAN ID (0-4095)
Example	**N-TRON/Admin> arl show** No. Val Age Pri Mod Usr Sta VLAN MAC Port(s) ---- --- --- --- --- --- --- ---- ----------------- ---------- 1 1 1 0 0 0 1 1 00:07:af:ff:b8:00 CPU 2 1 0 0 0 0 0 1 00:19:b9:03:aa:77 TX3 **N-TRON/Admin> arl showmct** No. Idx Val Port Mask Port(s) --- --- --- ---------- ---------- 1 0 1 0x00000000 (None) 2 1 1 0x00000001 TX1 **N-TRON/Admin> arl add 00:19:b9:03:aa:79 3 0 1 1** **N-TRON/Admin> arl del 00:19:b9:03:aa:79 1**
Notes	

CLI Commands, Continued…

Save or Reset the Configuration Settings

Command Name	**config**
Description	Save or reset configuration settings
Syntax	**config** s[ave] | r[eset]
Parameters	**save** save current running configuration settings. **reset** reset configuration settings to factory defaults.
Examples	**N-TRON/Admin> config save** Save Settings... Settings have been saved. **N-TRON/Admin> config reset** Resetting to factory defaults... Load factory default settings [y/n]?y Keep IP, subnet mask, and gateway addresses [y/n]?y Keep current user names and passwords [y/n]?y …
NOTES	

Show or Set IGMP Configuration

Command Name	**igmp**
Description	Show or set IGMP configuration. If no parameters are specified, this command will show the IGMP configuration (same as -show parameter).
Syntax	**igmp** [-show] [-status state]
Parameters	**-show** Show configuration. **-status state** Set the IGMP status to e(nabled) or d(isabled).
Examples	**N-TRON/Admin> igmp –show** IGMP Status : Enabled Query Mode : Auto Router Mode : Auto Manual Router Ports : (None) **N-TRON/Admin> igmp –status disabled** IGMP Status : Disabled Query Mode : Auto Router Mode : Auto Manual Router Ports : (None) Changes have been made that have not been saved. …
NOTES	

CLI Commands, Continued…

Show or Set Mirror Configuration

Command Name	**Mirror**
Description	Show or set Mirror configuration. If no parameters are specified, this command will show the Mirror configuration (same as -show parameter).
Syntax	**mirror** [-show] [-status state] [-dp portno] [-tx portlist] [-rx portlist]
Parameters	**-show** Show configuration. **-status state** Set the Mirror status to e(nabled) or d(isabled). **-dp portno** Set the destination port number for mirrored frames. **-tx portlist** Set the source ports to mirror frames that are transmitted. **-rx portlist** Set the source ports to mirror frames that are received.
Examples	**N-TRON/Admin> mirror –show** Mirror Status : Disabled Destination Port : TX1 Tx Source Ports : (None) Rx Source Ports : (None) **N-TRON/Admin> mirror –status enabled –dp 6 –tx 1,3-5 –rx 1,3,5** Mirror Status : Enabled Destination Port : TX6 Tx Source Ports : TX1, TX3-TX5 Rx Source Ports : TX1, TX3, TX5 Changes have been made that have not been saved. …
NOTES	The portlist consists of port numbers and ranges, separated by commas. It may not contain space characters. Use “all” to set all ports as source ports, and use “none” to clear all ports from source ports.

CLI Commands, Continued…

Show or Set N-Ring Configuration

Command Name	**Nring**
Description	Show or set N-Ring configuration. If no parameters are specified, this command will show the N-Ring configuration (same as -show parameter).
Syntax	**nring** [-show] [-mode d | a | m] [-ports set_id]
Parameters	**-show** Show configuration. **-mode** Set the N-Ring mode. d = disabled, a = auto member, m = manager **-ports** set_id Set the ring ports for N-Ring manager mode. Specify port set identifier or use '?' to list available port sets.
Examples	**N-TRON/Admin> nring –show** N-Ring Mode : Auto Member Aging Time : 20 **N-TRON/Admin> nring –ports ?** ID Port Set -- -------- 1 TX1 / TX2 2 TX7 / TX8 **N-TRON/Admin> nring –mode m –ports 2** Do you Want to Save Changes and Restart the System Now [y/n]? …
NOTES	

Show or Set N-View Configuration

Command Name	**Nview**
Description	Show or set N-View configuration. If no parameters are specified, this command will show the N-View configuration (same as -show parameter).
Syntax	**nview** [-show] [-status state]
Parameters	**-show** Show configuration. **-status state** Set the N-View status to e(nabled) or d(isabled).
Examples	**N-TRON/Admin> nview –show** N-View Status : Enabled N-View Interval : 5 **N-TRON/Admin> nview –status disabled** N-View Status : Disabled N-View Interval : 5 Changes have been made that have not been saved. …
NOTES	

CLI Commands, Continued…

Ping a Host

Command Name	**Ping**
Description	Ping a host
Syntax	**ping** [-t] [-n count] [-w timeout] target_name
Parameters	**target_name** IP Address or host name. **-t** Ping the specified host until stopped. To see statistics and continue - type Space; To stop - type Control-C. **-n count** Number of echo requests to send. **-w timeout** Timeout in milliseconds to wait for each reply.
Example	**N-TRON/Admin> ping 192.168.1.119** **…** **N-TRON/Admin> ping –n 6 192.168.1.119** **…** **N-TRON/Admin> ping –t 192.168.1.119** **…** **N-TRON/Admin> ping –w 2000 192.168.1.119** Reply from 192.168.1.119: time=970ms Reply from 192.168.1.119: time<10ms Reply from 192.168.1.119: time<10ms Ping statistics for 192.168.1.119: Packets: Sent = 4, Received = 3, Lost = 1 (25% loss) Approximate round trip times in milliseconds: Minimum = 0ms, Maximum = 970ms, Average = 320ms
Notes	

CLI Commands, Continued…

Show or Set Port Configuration

Command Name	**Port**
Description	Show or set Port configuration.
Syntax	**port** [-show] [-admin state] [-sd auto | 10h | 10f | 100h | 100f | 1000h | 1000f] [-flow state] [-fhp state] [-dp prio] [-pvid vid] portno
Parameters	**portno** Port number to configure or show. Specify "all" to show all ports. **-show** Show configuration. **-admin state** Set the admin status for the port to e(nabled) or d(isabled). **-sd** Set the speed and duplex mode for the port. auto = enable auto-negotiation **-flow state** Set the flow control for the port to e(nabled) or d(isabled). **-fhp state** Set force high priority for the port to e(nabled) or d(isabled). **-dp** Set the default QOS priority for the port. The range is 0-7. **-pvid** Set the VLAN ID for the port. The range is 1-4094.
Examples	**N-TRON/Admin> port –sd 100f –flow enabled –dp 7 –pvid 2 5** Port Port Admin Link Auto Port Dupl Flow Force Def Port No Name Status Stat Nego Spd Mode Control High Pri Pri State PVID ---- ---- -------- ---- -------- ---- ---- -------- -------- --- ---------- ---- 5 TX5 Enabled Down Disabled 100 Full Enabled Disabled 7 Disabled 2 Changes have been made that have not been saved. …
NOTES	

Reset the Switch

Command Name	**Reset**
Description	Reset (reboot) the switch
Syntax	**Reset**
Parameters	**None**
Example	**N-TRON/Admin> reset** Performing Soft-Reset... …
Notes	

CLI Commands, Continued…

Show or Set SNMP Configuration

Command Name	**Snmp**
Description	Show or set SNMP configuration. If no parameters are specified, this command will show the SNMP configuration (same as -show parameter).
Syntax	**snmp** [-show] [-ro name] [-rw name] [-trap name]
Parameters	**-show** Show configuration. **-ro name** Set the Authorized Community Name for SNMP Get requests. **-rw name** Set the Authorized Community Name for SNMP Set requests. **-trap name** Set the Authorized Community Name for SNMP Traps.
Examples	**N-TRON/Admin> snmp –ro users** IP Address - Trap Stn.#1 : Value Not Configured IP Address - Trap Stn.#2 : Value Not Configured IP Address - Trap Stn.#3 : Value Not Configured IP Address - Trap Stn.#4 : Value Not Configured IP Address - Trap Stn.#5 : Value Not Configured Read-Only Community Name : users Read-Write Community Name : private Trap Community Name : public Changes have been made that have not been saved. …
NOTES	Community names may only contain alphanumeric, space, '-', '_', and '#' characters, and may not begin with a number, space, or underscore. A name with embedded space characters must be enclosed in quotes. The maximum length is 15 characters.

Show or Clear the Last System Error

Command Name	**Syserr**
Description	Show or clear the last system error If *clear* is not supplied, then the last system error is displayed.
Syntax	**syserr** [clear]
Parameters	**Clear** Clear the last system error.
Example	**N-TRON/Admin> syserr** Last System Error: None. **N-TRON/Admin> syserr clear** Last System Error: Cleared.
Notes	

CLI Commands, Continued…

Show System Information

Command Name	**Sysinfo**
Description	Show system information
Syntax	**Sysinfo**
Parameters	**None**
Example	**N-TRON/Admin> sysinfo** ++ + + N-Tron 700/7000 Series + ++ + + Model: 7018TX + Boot Loader: BL 2.0.5.1 (0x02000501) + OS Version: 2.0.5 + Build Date: Mar 16 2009 at 11:19:27 + Copyright: Copyright (c) 2008-2009 N-Tron Corp. All rights reserved. + + Processor: 66 MHz (66000000) + SDRAM Size: 16 MB + Flash Size: 8 MB + File System: 6422528 Bytes, 1432576 Free, 4989952 Used, 0 Bad + MAC Address: 00:07:af:fe:af:c0 + IP Address: 192.168.1.201 + Subnet Mask: 255.255.255.0 + Gateway: 192.168.1.1 + ++
Notes	

CLI Commands, Continued…

Set or Show the System IP Configuration

Command Name	**Sysip**
Description	Set system IP configuration mode, IP address, subnet mask, and gateway If no parameters are specified, this command will show the system IP addresses. Static IP, subnet mask, or gateway can only be set while in static configuration mode. All system addresses must be formatted as: xxx.xxx.xxx.xxx.
Syntax	**sysip** [-c config_mode] [-i static_ip] [-s static_subnet_mask] [-g static_gateway]
Parameters	**-c config_mode** s(tatic) or d(hcp). **-i static_ip** Static IP address (for static config mode). **-s static_subnet_mask** Static sub net mask (for static config mode). **-g static_gateway** Static gateway address (for static config mode).
Example	**N-TRON/Admin> sysip** IP Configuration Mode : Static Static IP Address : 192.168.1.225 Static subnet Mask : 255.255.255.0 Static gateway : 192.168.1.1 **N-TRON/Admin> sysip -c dhcp** IP Configuration Mode : DHCP (has been changed) Static IP Address : 192.168.1.225 Static subnet Mask : 255.255.255.0 Static gateway : 192.168.1.1 Do you Want to Save Changes and Restart the System Now [y/n]? … **N-TRON/Admin> sysip -i 192.168.1.119 -s 225.225.225.0 -g 192.168.1.1** IP Configuration Mode : Static Static IP Address : 192.168.1.119 (has been changed) Static subnet Mask : 225.225.225.0 (has been changed) Static gateway : 192.168.1.1 (has been changed) Do you Want to Save Changes and Restart the System Now [y/n]? …
NOTES	

CLI Commands, Continued…

Show or Set System Configuration

Command Name	**System**
Description	Show or set System configuration. If no parameters are specified, this command will show the System configuration (same as -show parameter).
Syntax	**system** [-show] [-name label] [-browser state]
Parameters	**-show** Show configuration. **-name label** Set the switch name. **-browser state** Set the browser access status to e(nabled) or d(isabled).
Examples	**N-TRON/Admin> system –name "Private switch" –browser disabled** IP Configuration : Static IP Address : 192.168.1.201 Subnet Mask : 255.255.255.0 Gateway : 192.168.1.1 MAC Address : 00:07:af:fb:fa:40 System Up Time : 0 days, 17 hours, 10 mins, 56 secs Name : Private switch Contact : N-Tron Admin Location : Mobile, AL 36609 Browser Access : Disabled Changes have been made that have not been saved. …
NOTES	A switch name may only contain alphanumeric, space, ':', '-', '_', and '#' characters, and may not begin with a number, space, or underscore. A name with embedded space characters must be enclosed in quotes.

VLAN Addition and Deletion Example

The screen capture below is the factory default VLAN configuration.

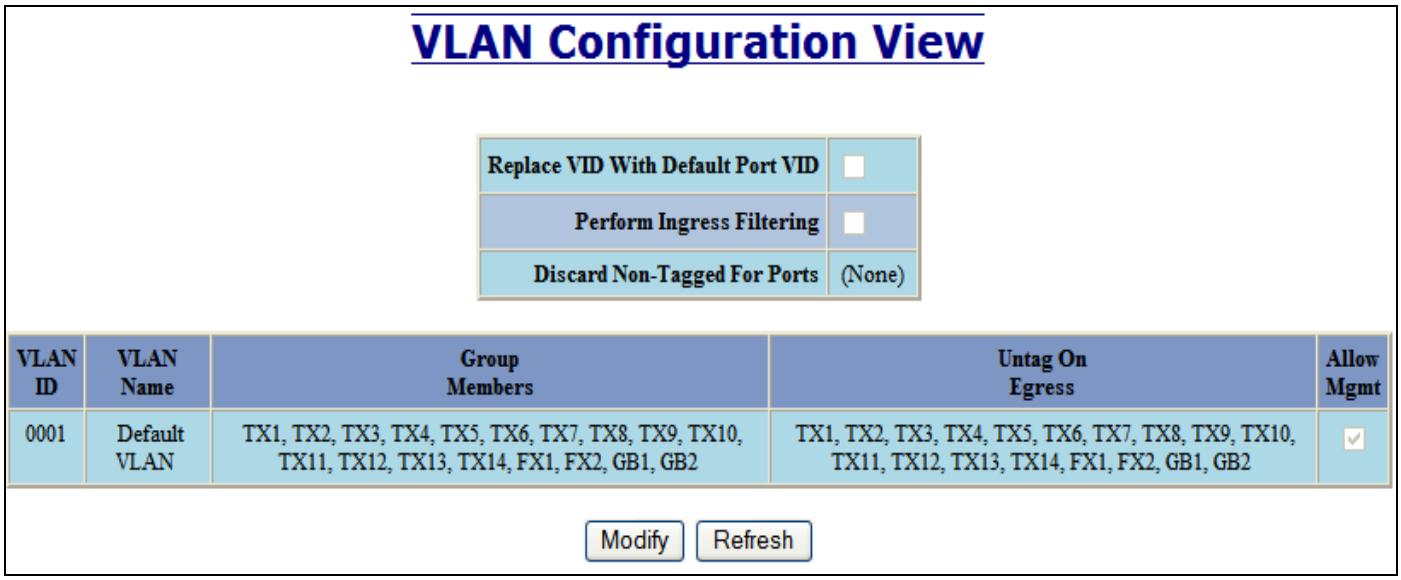
VLAN Configuration View
Replace VID With Default Port VID
Perform Ingress Filtering
Discard Non-Tagged For Ports
(None)
VLAN ID
VLAN Name
Group Members
Untag On Egress
Allow Mgmt
0001
Default VLAN
TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2
TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2
Modify
Refresh

Clicking on the “Modify” button allows one to add a new VLAN:

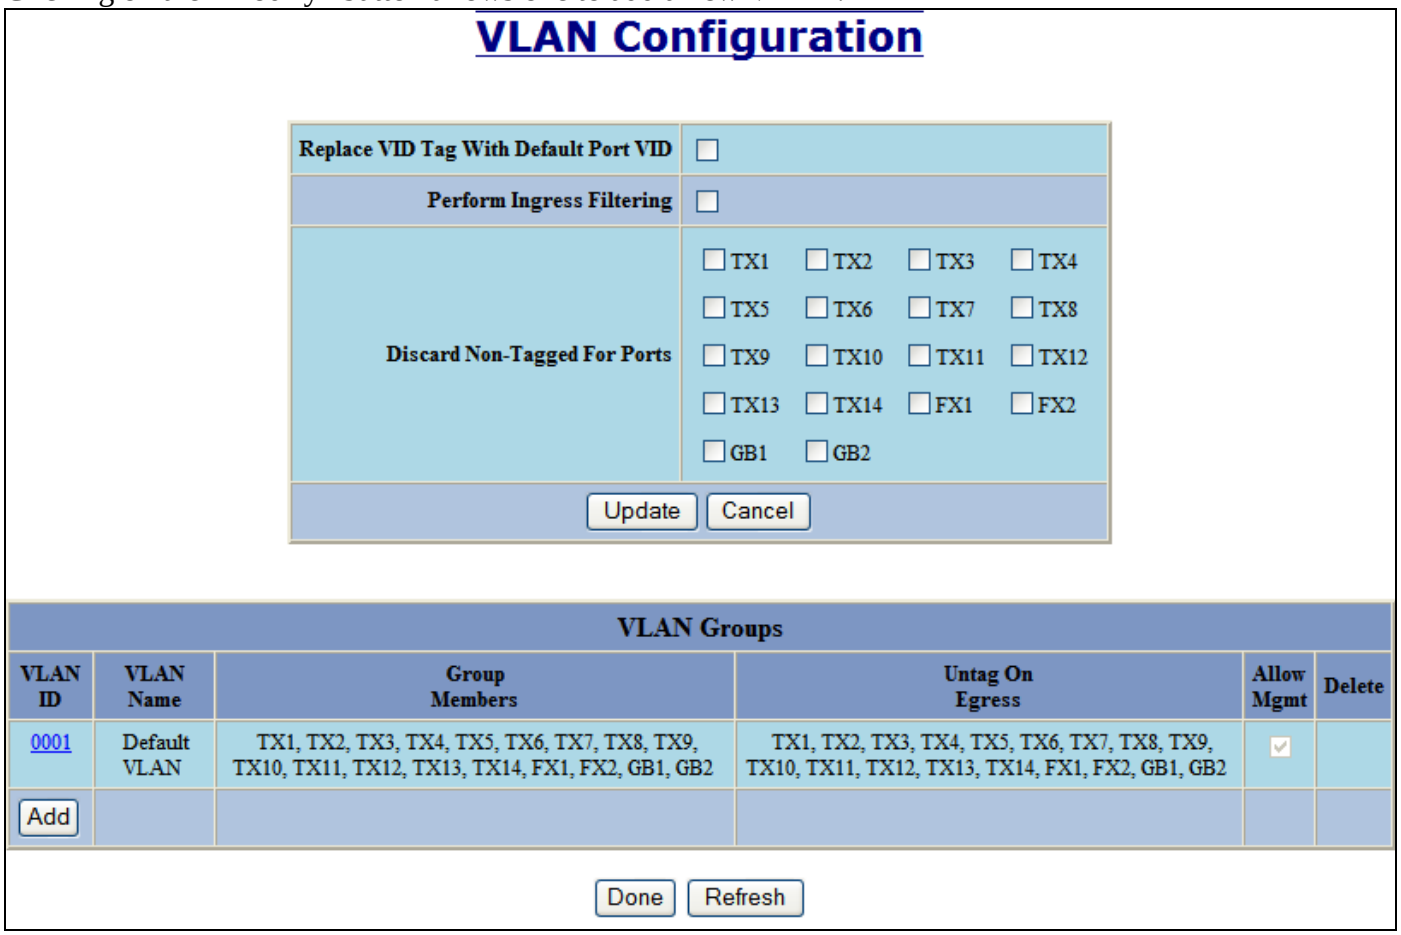

When creating a new VLAN, a numeric ID is required, Name is entered. Note that N-Ring VLAN is a reserved name with a special meaning. Choices such as “Allow Management” and “Change PVID of Member Ports” are made at this time as well as the ports which are going to belong to the new VLAN. Additionally, the ports may be “Untagged on Egress”.

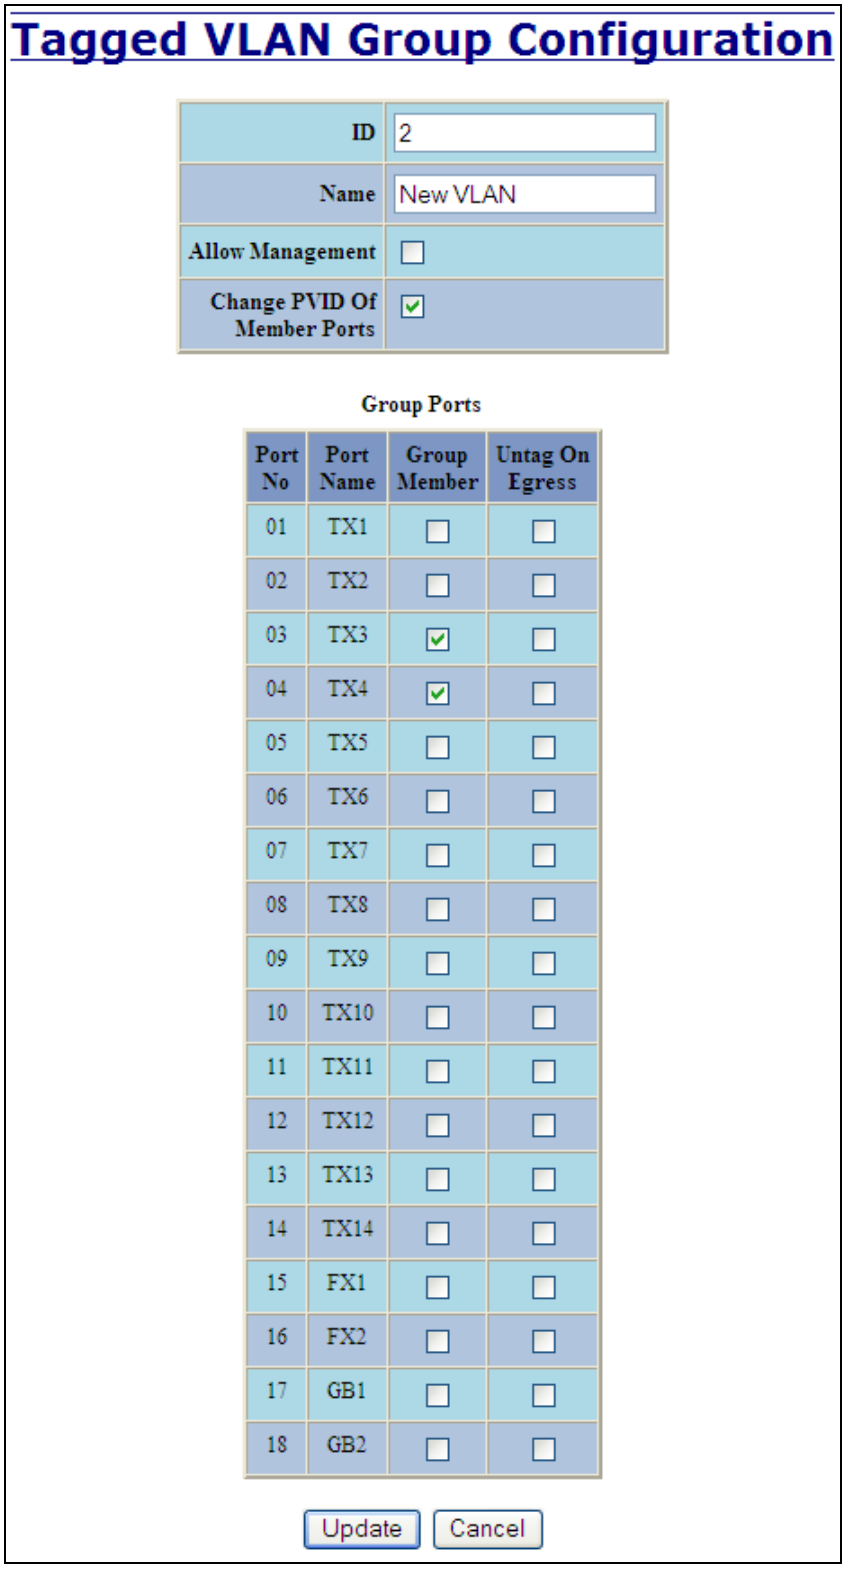

The result of add is a “New VLAN”. In this case, it does not overlap the “Default VLAN” ports.

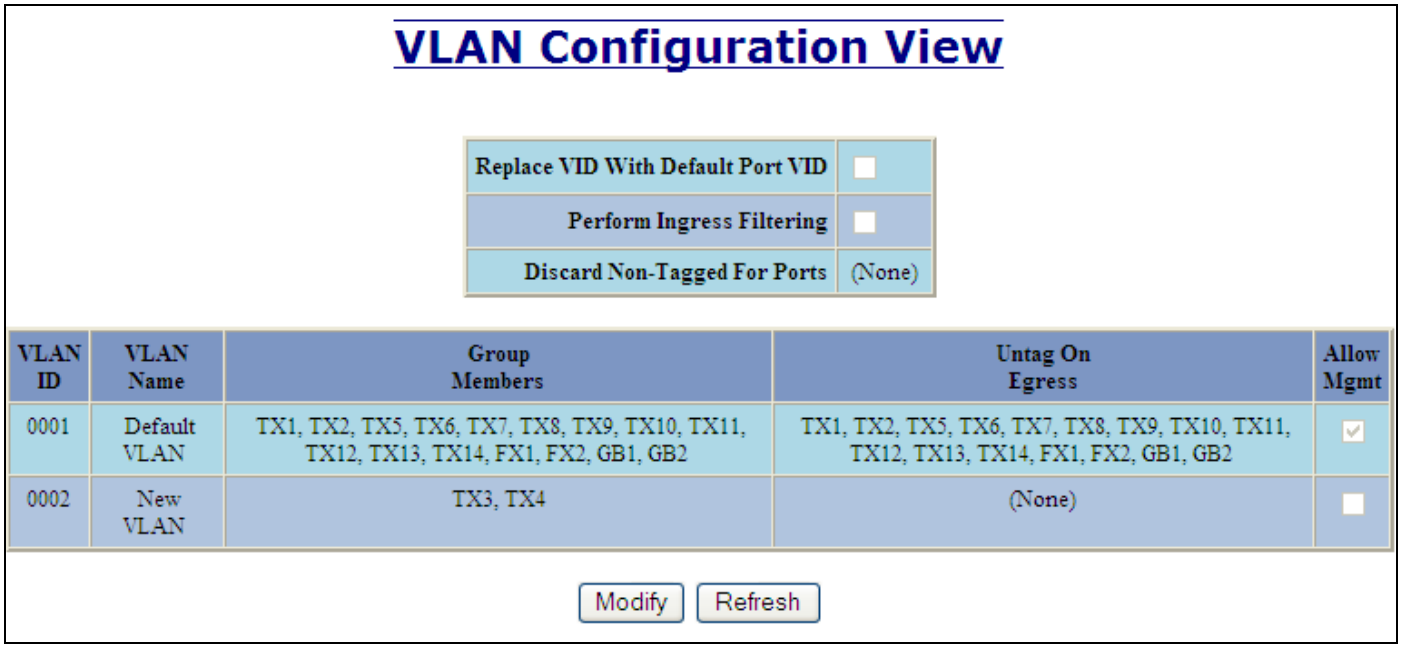

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX1, TX2, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	TX1, TX2, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	☑
0002	New VLAN	TX3, TX4	(None)	☐

Modify Refresh

The ports of ”New VLAN” may be added back to “Default VLAN” to create overlapping VLANs.

Note: If there are multiple ports on different VLANs, the 7018 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. If the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

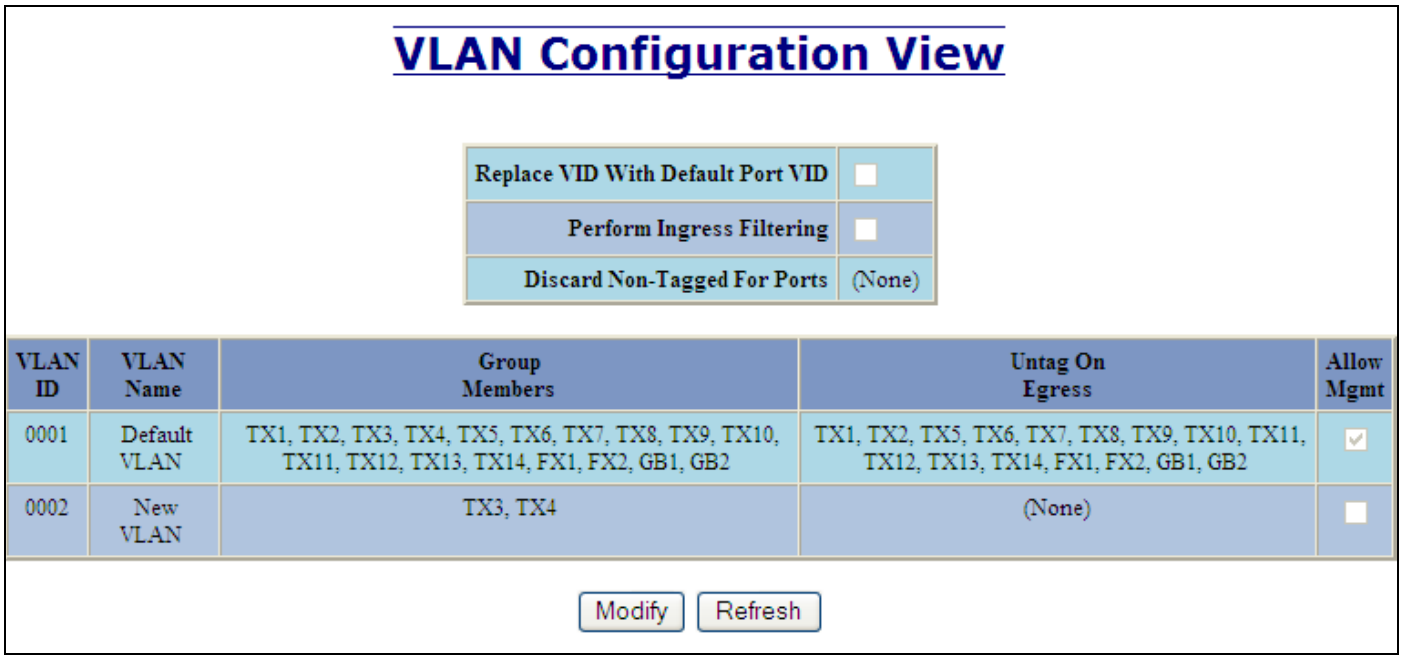

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	TX1, TX2, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	☑
0002	New VLAN	TX3, TX4	(None)	☐

Modify Refresh

But notice that the ports in “New VLAN” are not marked as “Untag on Egress” and are thus still tagged.

And the “New VLAN” may be deleted when it is no longer required:

VLAN Configuration

Replace VID Tag With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	☐ TX1 ☐ TX2 ☐ TX3 ☐ TX4 ☐ TX5 ☐ TX6 ☐ TX7 ☐ TX8 ☐ TX9 ☐ TX10 ☐ TX11 ☐ TX12 ☐ TX13 ☐ TX14 ☐ FX1 ☐ FX2 ☐ GB1 ☐ GB2

Update Cancel

VLAN Groups

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt	Delete
0001	Default VLAN	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	TX1, TX2, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	☑	
0002	New VLAN	TX3, TX4	(None)	☐	Delete
Add					

Done Refresh

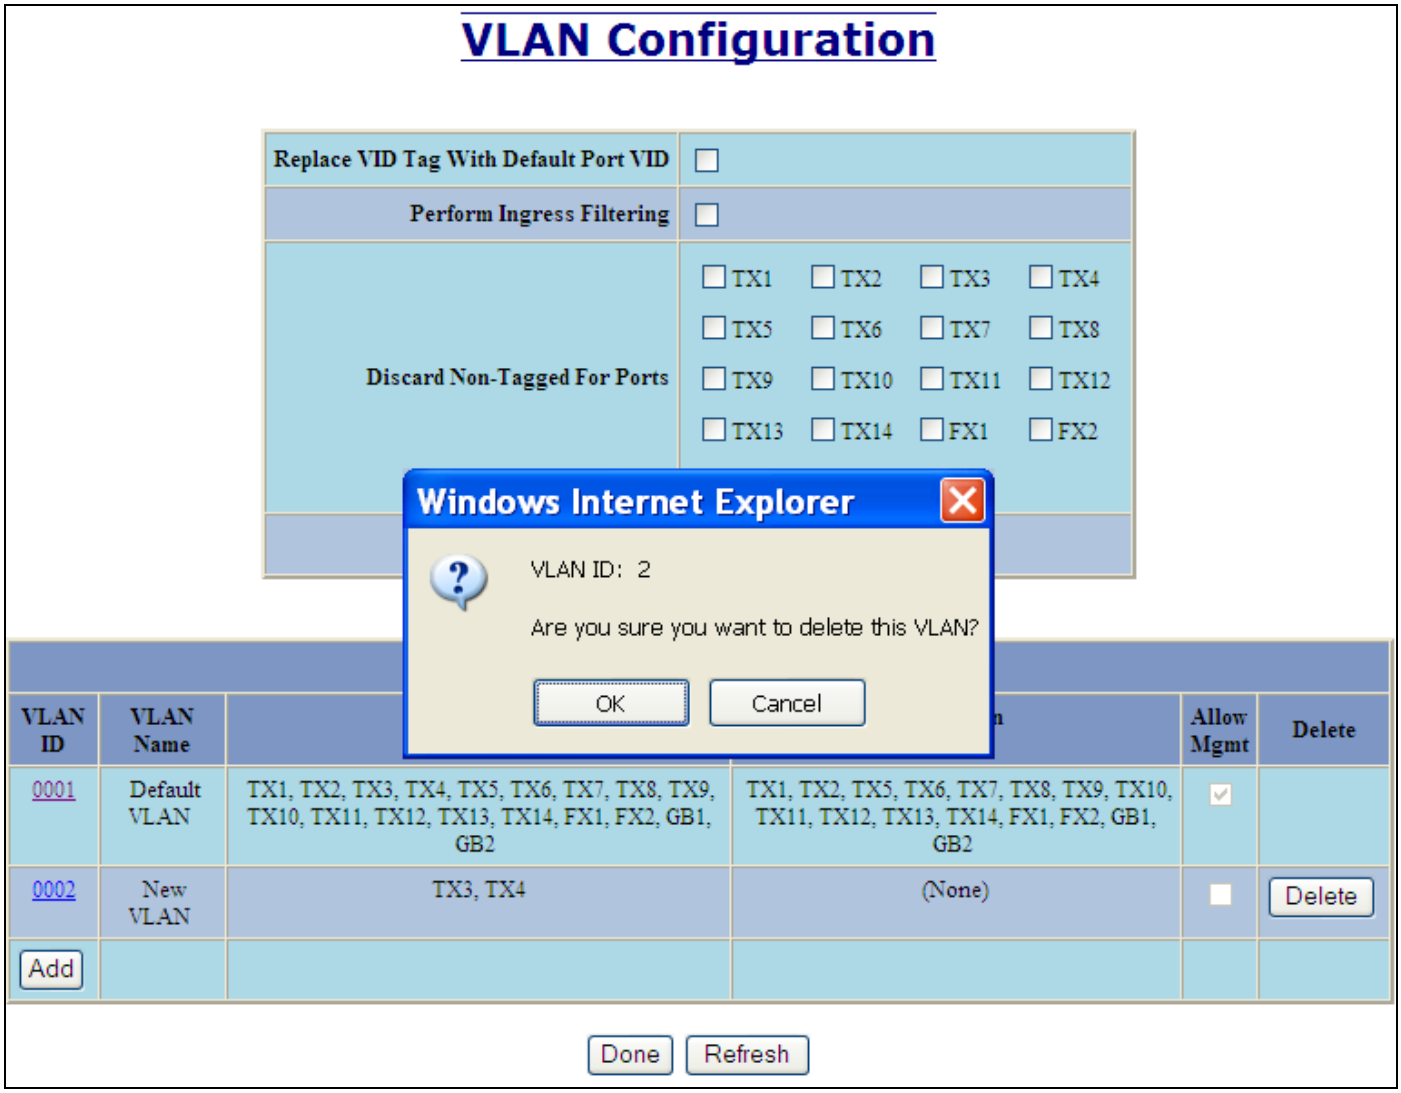

And the “New VLAN” is removed. Note that the new configuration of the switch must be saved if the configuration must survive a power cycle.

VLAN Configuration

Replace VID Tag With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	☐ TX1 ☐ TX2 ☐ TX3 ☐ TX4 ☐ TX5 ☐ TX6 ☐ TX7 ☐ TX8 ☐ TX9 ☐ TX10 ☐ TX11 ☐ TX12 ☐ TX13 ☐ TX14 ☐ FX1 ☐ FX2 ☐ GB1 ☐ GB2

Update Cancel

VLAN Groups

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt	Delete
0001	Default VLAN	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	TX1, TX2, TX5, TX6, TX7, TX8, TX9, TX10, TX11, TX12, TX13, TX14, FX1, FX2, GB1, GB2	☑	
Add					

Done Refresh

VLAN Configuration Examples

A VLAN is an administratively configured LAN segment that limits the traffic in multiple broadcast domains. Instead of physically reconnecting a device to a different LAN, network administrators can accomplish this task by configuring a VLAN compliant switch to create logical network segments.

Tagged VLAN allows switch segmentation to span across multiple managed switches. This type of VLAN is ideal for LANs that consist of various types of communication groups such as Office LANs, Controls Systems, and IP Cameras. When used properly, it will effectively isolate two or more groups from each other in a logical manner. This means that Broadcast, Multicast, and Unicast frames in one VLAN will not interfere with another isolated VLAN group.

The examples in this section are shown as configured on a 708TX switch, but the 7018 series may be configured similarly with the additional ports.

Example 1 – Basic understanding of port-based VLANs

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX4, TX5, TX6, TX7, TX8	TX3, TX4, TX5, TX6, TX7, TX8	☑
0002	VLAN-2	TX1, TX2	TX1, TX2	☐

Port Configuration View

Port No	Port Name	PVID
01	TX1	2
02	TX2	2
03	TX3	1
04	TX4	1
05	TX5	1
06	TX6	1
07	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2	TX2	Unicast Traffic
TX1	Untagged	Unknown MAC	TX2	Floods VLAN 2
TX1	VID 4	MAC on port TX2	--	Packet Discarded
TX3	Untagged	MAC on port TX5	TX5	Unicast Traffic
TX3	Untagged	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX6	--	Packet Discarded

Example 2 – Basic understanding of tagged VLANs (Admit – Tagged Only)

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	TX1, TX2, TX3, TX5, TX6, TX7, TX8

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX5, TX6, TX7, TX8	(None)	☐
0002	VLAN-2	TX1, TX2	(None)	☐
0003	VLAN-3	TX4	(None)	☑

Port Configuration View

Port No	Port Name	PVID
01	TX1	1
02	TX2	1
03	TX3	1
04	TX4	3
05	TX5	1
06	TX6	1
07	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2	--	Packet Discarded
TX1	VID 2	MAC on port TX2	TX2	Unicast Traffic
TX1	VID 4	MAC on port TX2	--	Packet Discarded
TX1	VID 2	MAC on port TX5	TX2	Floods VLAN 2
TX3	Untagged	MAC on port TX1	--	Packet Discarded
TX3	VID 1	MAC on port TX6	TX6	Unicast Traffic
TX3	VID 1	Unknown MAC	TX5-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX8	--	Packet Discarded

Example 3 – Basic understanding of tagged VLANs (Admit – All)

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX4, TX5, TX6, TX7, TX8	(None)	☑
0002	VLAN-2	TX1, TX2	(None)	☐

Port Configuration View

Port No	Port Name	PVID
01	TX1	2
02	TX2	2
03	TX3	1
04	TX4	1
05	TX5	1
06	TX6	1
07	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2	TX2	Adds VID 2 to packet
TX1	VID 2	MAC on port TX2	TX2	Unicast Traffic
TX1	VID 4	MAC on port TX2	--	Packet Discarded
TX1	VID 2	Unknown MAC	TX2	Floods VLAN 2
TX3	Untagged	Unknown MAC	TX4-TX8	Adds VID 1 to packet & Floods VLAN 1
TX3	VID 1	MAC on port TX6	TX6	Unicast Traffic
TX3	VID 1	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX7	--	Packet Discarded

Example 4 – Basic understanding of Hybrid VLANs

VLAN Configuration View **Port Configuration View**

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX4, TX5, TX6, TX7, TX8	TX3, TX4, TX5, TX6, TX7, TX8	☑
0002	VLAN-2	TX1, TX2, TX3, TX4	TX1, TX2	☐

Port No	Port Name	PVID
01	TX1	2
02	TX2	2
03	TX3	1
04	TX4	1
05	TX5	1
06	TX6	1
07	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2	TX2	Unicast Traffic
TX1	Untagged	MAC on port TX3	TX3	Adds VID 2 in the packet
TX1	VID 4	MAC on port TX2	--	Packet Discarded
TX1	VID 4	MAC on port TX3	--	Packet Discarded
TX1	VID 2	MAC on port TX2	TX2	Strips VID off packet
TX3	Untagged	MAC on port TX6	TX6	Unicast Traffic
TX3	Untagged	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX5	--	Packet Discarded
TX3	VID 4	MAC on port TX4	--	Packet Discarded
TX3	VID 2	MAC on port TX4	TX4	Does not strip VID off packet
TX3	VID 2	MAC on port TX1	TX1	Strips VID off packet

Example 5 – Basic understanding of Overlapping VLANs

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	(None)	(None)	☐
0002	VLAN-2	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	☐
0003	VLAN-3	TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX2, TX3, TX4, TX5, TX6, TX7, TX8	☑
0004	VLAN-4	TX1, TX2	TX1, TX2	☐

Port Configuration View

Port No	Port Name	PVID
01	TX1	4
02	TX2	2
03	TX3	3
04	TX4	3
05	TX5	3
06	TX6	3
07	TX7	3
08	TX8	3

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2, VID=4	TX2	Unicast Traffic
TX1	Untagged	MAC on port TX3	TX2	Floods VLAN 4
TX1	VID 4	MAC on port TX2, VID=4	TX2	Strips VID off packet
TX1	VID 4	Unknown MAC	TX2	Strips VID off packet & Floods VLAN 4
TX2	Untagged	MAC on port TX1, VID=2	TX1	Unicast Traffic
TX2	Untagged	MAC on port TX5, VID=2	TX5	Unicast Traffic
TX2	VID 2 or 3	MAC on port TX5, VID=2 and 3	TX5	Strips VID off packet (or floods if MAC is unknown for VID)
TX2	Untagged	Unknown MAC	TX1, TX3-TX8	Floods VLAN 2
TX3	Untagged	MAC on port TX1, VID=3	TX2, TX4-TX8	Floods VLAN 3
TX3	Untagged	MAC on port TX2, VID=3	TX2	Unicast Traffic
TX3	Untagged	MAC on port TX5, VID=3	TX5	Unicast Traffic
TX3	VID 2 or 3	MAC on port TX2, VID=2 and 3	TX2	Strips VID off packet (or floods if MAC is unknown for VID)

Example 6 – Basic understanding of VLANs with Multicast Filtering

VLAN Configuration View

Replace VID With Default Port VID	☐
Perform Ingress Filtering	☐
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	(None)	(None)	☐
0002	VLAN-2	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	☐
0003	VLAN-3	TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX2, TX3, TX4, TX5, TX6, TX7, TX8	☑
0004	VLAN-4	TX1, TX2	TX1, TX2	☐

Port Configuration View

Port No	Port Name	PVID
01	TX1	4
02	TX2	2
03	TX3	3
04	TX4	3
05	TX5	3
06	TX6	3
07	TX7	3
08	TX8	3

Top of Form
Bottom of Form

Static Multicast Group Address Filters		
Multicast Address	**Port List**	**VLAN ID**
01:00:00:00:00:01	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	2
01:00:00:00:00:02	TX1, TX6, TX8	3

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	01:00:00:00:00:01	TX2	Goes to ports TX1-TX8, but TX1 can only send to TX2 (VLAN 4)
TX3	Untagged	01:00:00:00:00:02	TX6, TX8	Goes to ports TX2, TX6-TX8 (VLAN 3) but filter keeps it on ports TX6 and TX8 only
TX2	Untagged	01:00:00:00:00:01	TX1,TX3-TX8	Goes to ports TX1-TX8, but won't go back out the port it came in on
TX2	Untagged	01:00:00:00:00:02	TX1,TX3-TX8	Goes to ports TX1,TX3-TX8
TX3	Untagged	01:00:00:00:00:01	TX2, TX4-TX8	Goes to ports TX2, TX4-TX8
TX6	Untagged	01:00:00:00:00:02	TX8	Goes to port TX8
TX3	Untagged	01:00:00:00:00:02	TX6, TX8	Goes to ports TX6 and TX8

Note: If there are multiple ports on different VLANs, the 7018 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. If the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

For further information and examples on overlapping vlans, see:
http://www.n-tron.com/pdf/OverlappingPortVLAN.pdf

KEY SPECIFICATION

Switch Properties

Number of MAC Addresses: 8,000
Aging Time: Programmable
Latency Type: 2.6 µs
Switching Method: Store & Forward

Physical

Height: 2.27" / 5.76cm
Width: *8*.25" / 20.95cm
Depth: 4.75" / 12.06cm
Weight (max): 3.3 lbs / 1.49 kg
Din-Rail mount: 35mm

Electrical

Redundant Input Voltage: 10-30VDC (Regulated)
Input Current (max): *62*0mA max. @ 24VDC
-HV (High Voltage Option)
Redundant Input Voltage: 40-160VDC (Regulated)
Input Current (max): *160*mA max. @ 124VDC

Input Ripple: Less than 100 mV
N-TRON Power Supply: NTPS-24-1.3 (1.3 Amp@24VDC*)* (NOTE: Not appropriate for use with M12, POE, and HV models.)

Environmental

Operating Temperature: -40°C to 70°C
Storage Temperature: -40°C to 85°C

Operating Humidity: 5% to 95% (Non Condensing)

Operating Altitude 0 to 10,000 ft.

Shock and Vibration (bulkhead mounting)

Shock: 200g @ 10ms
Vibration/Seismic: 50g, 5-200Hz,Triaxial

Reliability

MTBF: >2 Million Hours

Warranty: 3 years from the date of purchase.

Connectors

10/100BaseTX: (16) RJ-45 Copper Ports (7018TX)
(14) RJ-45 Copper Ports (7018FX(E)2)
100BaseFX: (2) SC or ST Duplex Ports (7018FX(E)2)
Optional SFP Ports:
1000BaseT: Up to two (2) RJ-45 Gigabit Copper Ports (optional)
1000BaseSX: Up to two (2) LC Duplex Gigabit Fiber Ports (optional)

Recommended Wiring Clearance:

Front: 4" (10.16 cm)
Side: 1" (2.54 cm)

Network Media

10BaseT: >Cat3 Cable
100BaseTX: >Cat5 Cable
1000BaseT: >Cat5e Cable
minimum length : 1 meter
maximum length : 100 meters
100BaseFX, 1000BaseSX
Multimode: 50-62.5/125µm
100BaseFXE, 1000BaseLX
Singlemode: 7-10/125µm

100 Mb Fiber Transceiver Characteristics

Fiber Length	2km*	15km**	40km**	80km**
TX Power Min/Max	-19dBm/-14dBm	-15dBm/-7dBm	-5dBm/0dBm	-5dBm/0dBm
RX Sensitivity Max	-32dBm	-34dBm	-34dBm	-34dBm
Wavelength Min/Max	1310nm	1310nm	1310nm	1550nm

* Multimode Fiber Optic Cable
** Singlemode Fiber Optic Cable

Gigabit Fiber Transceiver (SFP) Characteristics

Fiber Length	550m* with 50/125 µm	10km**	40km**	70km**
TX Power Min/Max	-9.5dBm/-4dBm	-9.5dBm/-3.5dBm	-2dBm/3dBm	0dBm/5dBm
RX Sensitivity Max	-17dBm	-20dBm	-22dBm	-24dBm
Wavelength	850nm	1310nm	1310nm	1550nm
Assumed Fiber Loss		-0.5 dB/km	-0.35 dB/km	-0.25 dB/km
Laser Type	VCSEL	FP	DFB	DFB

*SX Fiber Optic Cable
** LX Fiber Optic Cable

Regulatory Approvals:

Safety: UL listed per ANSI/ISA-12.12.01-2007 (US and Canada)
This equipment is suitable for use in Class I, Div 2, Groups A, B, C, and D or non-hazardous locations only.

EMI: FCC Title 47, Part 15, Subpart B - Class A
ICES-003 – Class A

EMS: EN61000-4-2 (ESD)
EN61000-4-3 (RS)
EN61000-4-4 (EFT)
EN61000-4-5 (Surge)
EN61000-4-6 (Conducted Disturbances)

N-TRON Limited Warranty

N-TRON, Corp. warrants to the end user that this hardware product will be free from defects in workmanship and materials, under normal use and service, for the applicable warranty period from the date of purchase from N-TRON or its authorized reseller. If a product does not operate as warranted during the applicable warranty period, N-TRON shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of N-TRON. Replacement products may be new or reconditioned. Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer. N-TRON shall not be responsible for any custom software or firmware, configuration information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON pursuant to any warranty.

OBTAINING WARRANTY SERVICE: Customer must contact N-TRON within the applicable warranty period to obtain warranty service authorization. Dated proof of purchase from N-TRON or its authorized reseller may be required. Products returned to N-TRON must be pre-authorized by N-TRON with a Return Material Authorization (RMA) number marked on the outside of the package, and sent prepaid and packaged appropriately for safe shipment. Responsibility for loss or damage does not transfer to N-TRON until the returned item is received by N-TRON. The repaired or replaced item will be shipped to the customer, at N-TRON's expense, not later than thirty (30) days after N-TRON receives the product. N-TRON shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON for repair, whether under warranty or not.

ADVANCE REPLACEMENT OPTION: Upon registration, this product qualifies for advance replacement. A replacement product will be shipped within three (3) days after verification by N-TRON that the product is considered defective. The shipment of advance replacement products is subject to local legal requirements and may not be available in all locations. When an advance replacement is provided and customer fails to return the original product to N-TRON within fifteen (15) days after shipment of the replacement, N-TRON will charge customer for the replacement product, at list price.

WARRANTIES EXCLUSIVE: IF AN N-TRON PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. N-TRON NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. N-TRON SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, POWER CUTS OR OUTAGES, OTHER HAZARDS, OR ACTS OF GOD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, N-TRON ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF N-TRON OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

DISCLAIMER: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the State of Alabama, U.S.A